

**SEGA**

**PARTS  
CATALOG**

# PREVIEW

## OF THE SEGA PARTS CATALOG

This catalog and its layout were planned to give the user as much information as possible in a manner easiest to use.

The catalog is divided into sections, and is color-coded by machine, with a color stripe across the top and bottom of each page. The catalog is loose-leaf in order that sections covering new equipment may easily be added as the equipment is manufactured. Each section, as added, will be clearly identified by name and by color code.

The exploded views provide the correct parts numbers, and the relationship of each part to the total assembly or sub-assembly. Each page shows exploded views with circled numbers and these numbers, on the reverse of the same page, give reference to the descriptions with full code and parts numbers. Wherever possible, the correct screw, washer or nut has been listed.

Printed on the lower left hand corner of each page is the date of issue. Should it be necessary to make additions or corrections, they will show a new issue date and this will enable you to keep your catalog current at all times.


The "Coin Machine" sections of the catalog cover all Star and Bell machines, as well as all assemblies and sub-assemblies for them, and are identified with the green stripe. These sections have been prepared in such a manner that all parts numbers for parts common in all Star and Bell machines are shown only once while other parts that are clearly identified with a specific model are shown in a separate section. These sections all follow our previous code numbers. The arrangement is such that sections covering particular models, using parts common to all models can be inserted in correct order. For example;

Section 1 Page 1 covers Sega Diamond Star Machine  
Cabinet 1961 type.

Section 1 Page 3 covers 21 Bell Cabinet Type,

Section 2 Page 3 covers Sega Diamond Star Machine  
Cabinet 1959 type.


-- while the following sections cover parts  
common to all three models.

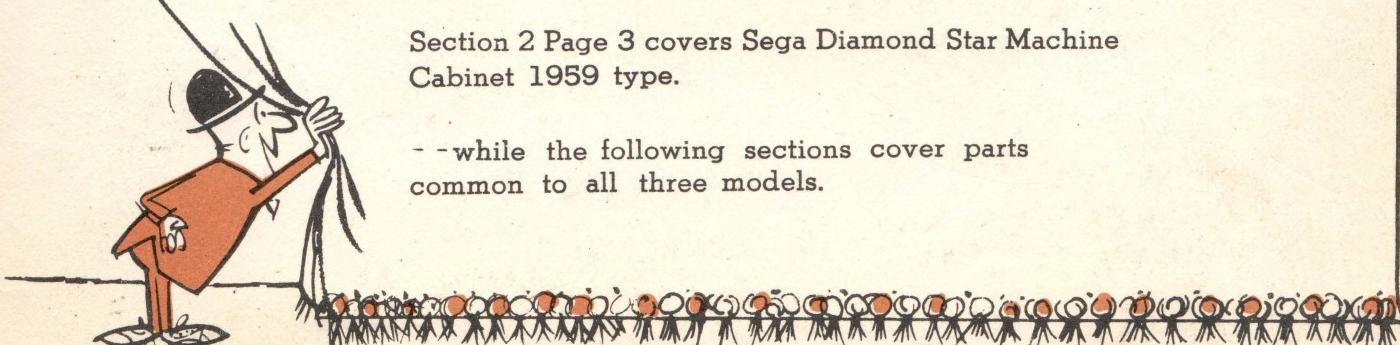

# COIN MACHINE INDEX

## CONTENTS

SECTION 1	PAGE 1 - 2	Outside View, Sega Diamond Star Cabinet, 1960 Model
SECTION 1	PAGE 3 - 4	Outside View, 21 Bell Cabinet
SECTION 2	PAGE 1 - 2	Inside View, Sega Diamond Star Cabinet, 1960 Model
SECTION 2	PAGE 3 - 4	Sega Diamond Star Cabinet, 1959 Model
SECTION 2	PAGE 5 - 6	Inside View, 21 Bell Cabinet
SECTION 3	PAGE 1 - 2	Left Inside Mechanism & Payout Slide Assembly
SECTION 4	PAGE 1 - 2	Inside Mechanism & Reel Assy.
SECTION 4	PAGE 3 - 4	Reel Strips and Discs Layout
SECTION 5	PAGE 1 - 2	Mechanism Right Hand Side
SECTION 6	PAGE 1 - 2	Rear View, Mechanism Assembly, with Clock
SECTION 7	PAGE 1 - 2	Coin Chute Assembly
SECTION 8	PAGE 1 - 2	Sega Star Hand Load Jackpot Assembly
SECTION 8	PAGE 3 - 4	21 Bell Hand Load Jackpot Assembly
SECTION 8	PAGE 5 - 6	Sega Automatic Jackpot Assembly
SECTION 8	PAGE 7 - 8	Sega Automatic Jackpot Installation
SECTION 9	PAGE 1 - 2	Clock Assembly
SECTION 10	PAGE 1 - 2	4 Reeler Parts
SECTION 11	PAGE 1 - 2	Sega Console Stand
SECTION 12	PAGE 1 - 2	Sega Payout Control Unit, Control Box
SECTION 12	PAGE 3 - 4	Sega Payout Control Unit, Mechanism Wiring
SECTION 13	PAGE 1 - 2	Sega Change Maker
SECTION 14	PAGE 1 - 2	Sega Star Lighting System & Payout Meter
SECTION 15	PAGE 1 - 2	Sega Jackpot Bell System & Progressive Machine Parts
SECTION 16	PAGE 1 - 2	Bonus Star
SECTION 16	PAGE 3	Bonus Star
SECTION 17	PAGE 1 - 2	Token Ejection System - SEGA Bell
SECTION 18	PAGE 1 - 2	Paybak Star
SECTION 18	PAGE 3	Paybak Star
SECTION 19	PAGE 1 - 2	Double-Pay Star
SECTION 19	PAGE 3	Double-Pay Star
SECTION 20	PAGE 1 - 2	Standard Fasteners
Supplement (A)	PAGE 1 - 2	Special Parts English, Panamanian, Hong Kong, Malayan Coin

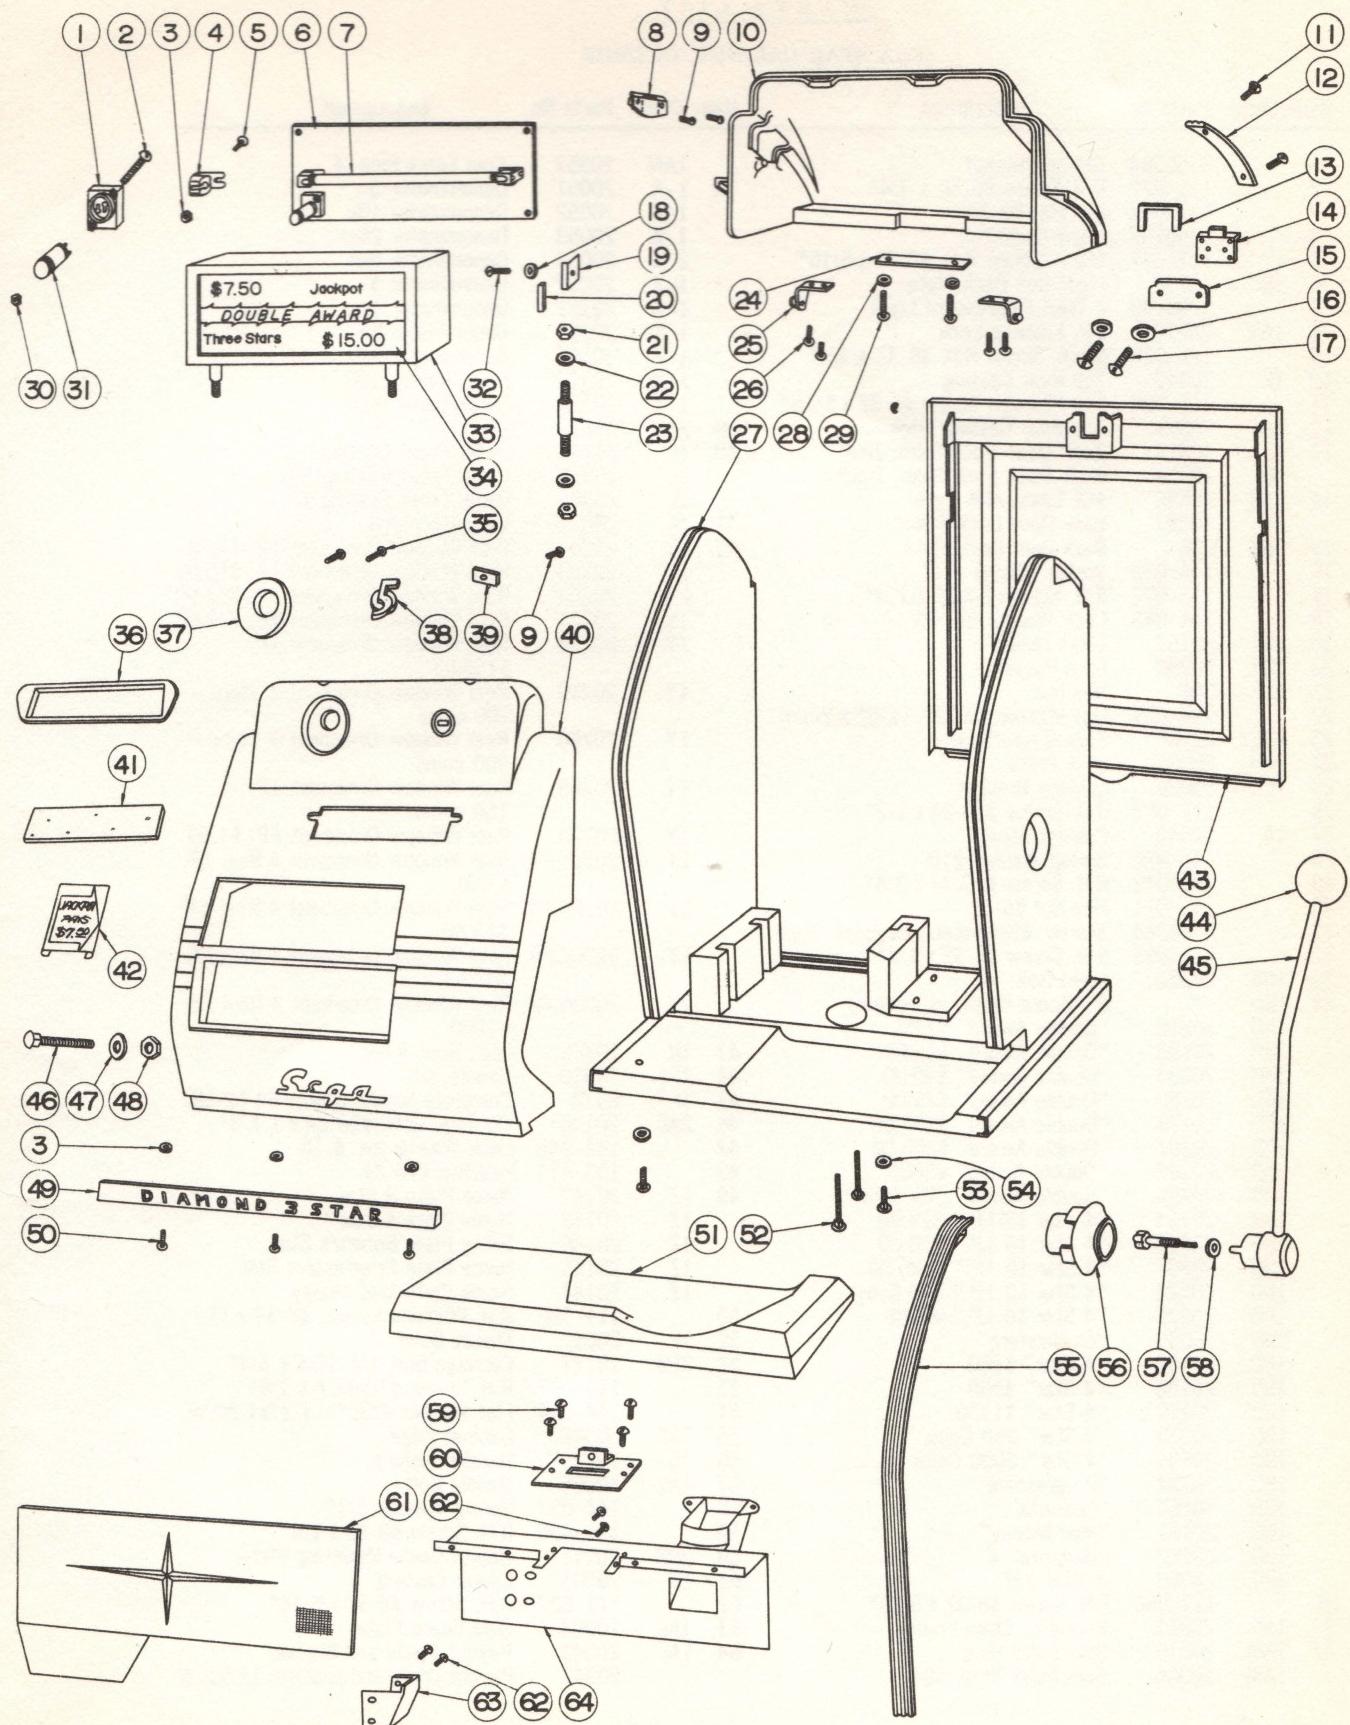

SEGA PARTS CATALOG


PARTS LIST ON REVERSE PAGE

SECTION 1 PAGE 1

PARTS LIST

## SEGA STAR CABINET, OUTSIDE

Item Code	Parts No.	Description	Item Code	Parts No.	Description
1	S-90264	Starter Socket	1AM	20357	Coin Entry Ring, \$
2	111-022	R.H. Screw #6-32 x 3/4"	38	1-X	20051 Denominator 5¢
3	133-012	Hex Nut #8-32		1-X	20052 Denominator 10¢
4	S-90261	Light Socket		1-X	20053 Denominator 25¢
5	111-027	Mach. Screw R.H. #8-32 x 5/16"		1-X	20054 Denominator 50¢
6	1BC	20158 Light Box Back Plate		1-X	20097 Denominator \$
7	S-90199	6 Watt Fluorescent Light		1-X	20131 Denominator 1¢
8	1AX	20270 J.P. Loading Lock		1-X	20231 Denominator 6d
9	111-026	Mach. Screw R.H. #8-32 x 1/4"		1-X	20142 Denominator 2/5
10	1E	20019 Top Rear Casting		1-X	20217 Denominator 100
11	111-020	F.H. Phillips Screw #6-32 x 5/16"		1-X	20132 Denominator 2/25
12	1AT	20076 Top Rear Casting Edge	39	2AS	6867 Clamp
13	1B	10313 Back Door Lock Shim, Thin	40	1C	20133 Upper Front Casting
	1B	10314 Back Door Lock Shim, Thick		1C	20354 Upper Front Casting 50¢
14	1AB	10598 ACE Lock, ANK Type		1C	20355 Upper Front Casting \$
	1B	10597 Back Door Lock Shim	41	1K	20021 Escalator Glass
15	1B2	636 Back Door Lock Plate	42	1Y	20202 Reel Window Ornament J.P. \$7.50
16	144-039	Spring Washer 1/4"		1Y	20203 Reel Window Ornament J.P. \$15.00
17	111-072	R.H. Screw 1/4-20 x 1/2"		1Y	20204 Reel Window Ornament J.P. \$37.50
18	144-043	Lock Washer Int. #6		1Y	20221 Reel Window Ornament J.P. \$75.00
19	1BF	20161 Glass Holder		1Y	20222 Reel Window Ornament J.P. \$150.00
20	1BK	20298 Cork Packing		1Y	20210 Reel Window Ornament 3 Stars
21	5BF	591 Hex Nut		1Y	200 coins
22	144-028	Flat Washer 13/32" - 7/8" x 2m/m		1Y	20260 Reel Window Ornament 3 Stars
23	1BE	20160 Post (Light Box)		1Y	300 coins
24	2BH	20023 Lock Plate		1Y	20263 Reel Window Ornament J.P. 150 coins
25	1E1	20024 Locking Bracket		1Y	20220 Reel Window Ornament J.P. \$1.50
26	111-053	R.H. Screw #10-24 x 1/2"		1Y	20205-FR Reel Window Ornament 4 Reel J.P. \$7.50
27	1A	20049 Cabinet Assy.		1Y	20206-FR Reel Window Ornament 4 Reel J.P. \$15.00
28	144-035	Spring Washer #10		1Y	20207-FR Reel Window Ornament 4 Reel J.P. \$37.50
29	111-042	R.H. Screw #10-24 x 3/8"		1Y	20230-FR Reel Window Ornament 4 Reel J.P. \$150.00
30	133-011	Hex Nut #6-32		1Y	20365 Bac'k Door Assy.
31	S-90244	Starter Fluorescent Bayonet Type	43	1F1	10310 Handle Ball
32	111-023	R.H. Screw #6-32 x 1/4"	44	1F	8573 Complete Handle (Items 44-52-58)
33	1BB	20157 Light Box	45	2AC	20108 Carriage Bolt, #10-24 x 1 1/8"
34	1BD	B'LL Board Glass, as follows	46	47	144-045 Lock Washer Int. # 10
	1BD	"Double Award" \$3.00	48	133-014	Hex Nut #10-24
	1BD	"Double Award" \$15.00	49	1Z	20147 Name Plate 3 Star
	1BD	"Double Award" \$30.00		1Z	20148 Name Plate 4 Star
	1BD	"Double Award" \$75.00		1Z	20146 Name Plate Bonanza Star
	1BD	"Double Award" \$150.00		1Z	20145 Name Plate Progressive Star
	1BD	"Double Award" \$300.00		1Z	20144 Name Plate Mad Money
	1BD	"Double Award" \$3000	50	51	111-106 R.H. Phillips Screw #8-32 x 1"
	1BD	"Double Award" 300 Coins		1P	20092 Money Bowl
	1BD	"4 Star 10 J.P." \$25.00		52	20117 Carriage Bolt 1/4-20 x 1 3/4"
	1BD	"4 Star 10 J.P." \$50.00		53	111-057 R.H. Screw #10-32 x 1 1/8"
	1BD	"4 Star 10 J.P." \$125.00		54	144-024 Flat Washer 7/32" - 1/2"x1.2m/m
	1BD	"4 Star 10 J.P." 500 Coins		55	1A2 20022 Cabinet Edge
	1BD	"4 Star 10 J.P." \$500		56	1G 7411 Handle Bushing
	1BD	"4 Star" \$1250		57	1AC 10005 Handle Bolt
	1BD	"4 Star" \$250		58	144-037 Spring Washer 3/8"
	1BD	"4 Star" \$250		59	111-026 R.H. Screw #8-32 x 1/4"
	1BD	"4 Star" 250 Coins		60	2DP 20211 Reject Chute Mounting Plate
	1BD	"4 Star" 5000 Coins		61	1D 20001 Lower Casting
	1PD	20254 "Progressive"		62	111-027 R.H. Screw #8-32 x 5/16"
	1BD	"Bonanza"		63	1AG 20004 Side Guard Plate
	1BD	"Mad Money"		64	1AF 20042 Payout Chute and Bracket
	1BD	"Bonanza" £			20345 Payout Chute and Bracket, 1d 50¢ \$
35	111-086	F.H. Screw #8-32 x 5/16"			
36	1AN	20011 Escalator Glass Frame			
37	1AM	20016 Coin Entry Ring			
	1AM	20356 Coin Entry Ring, 50¢			

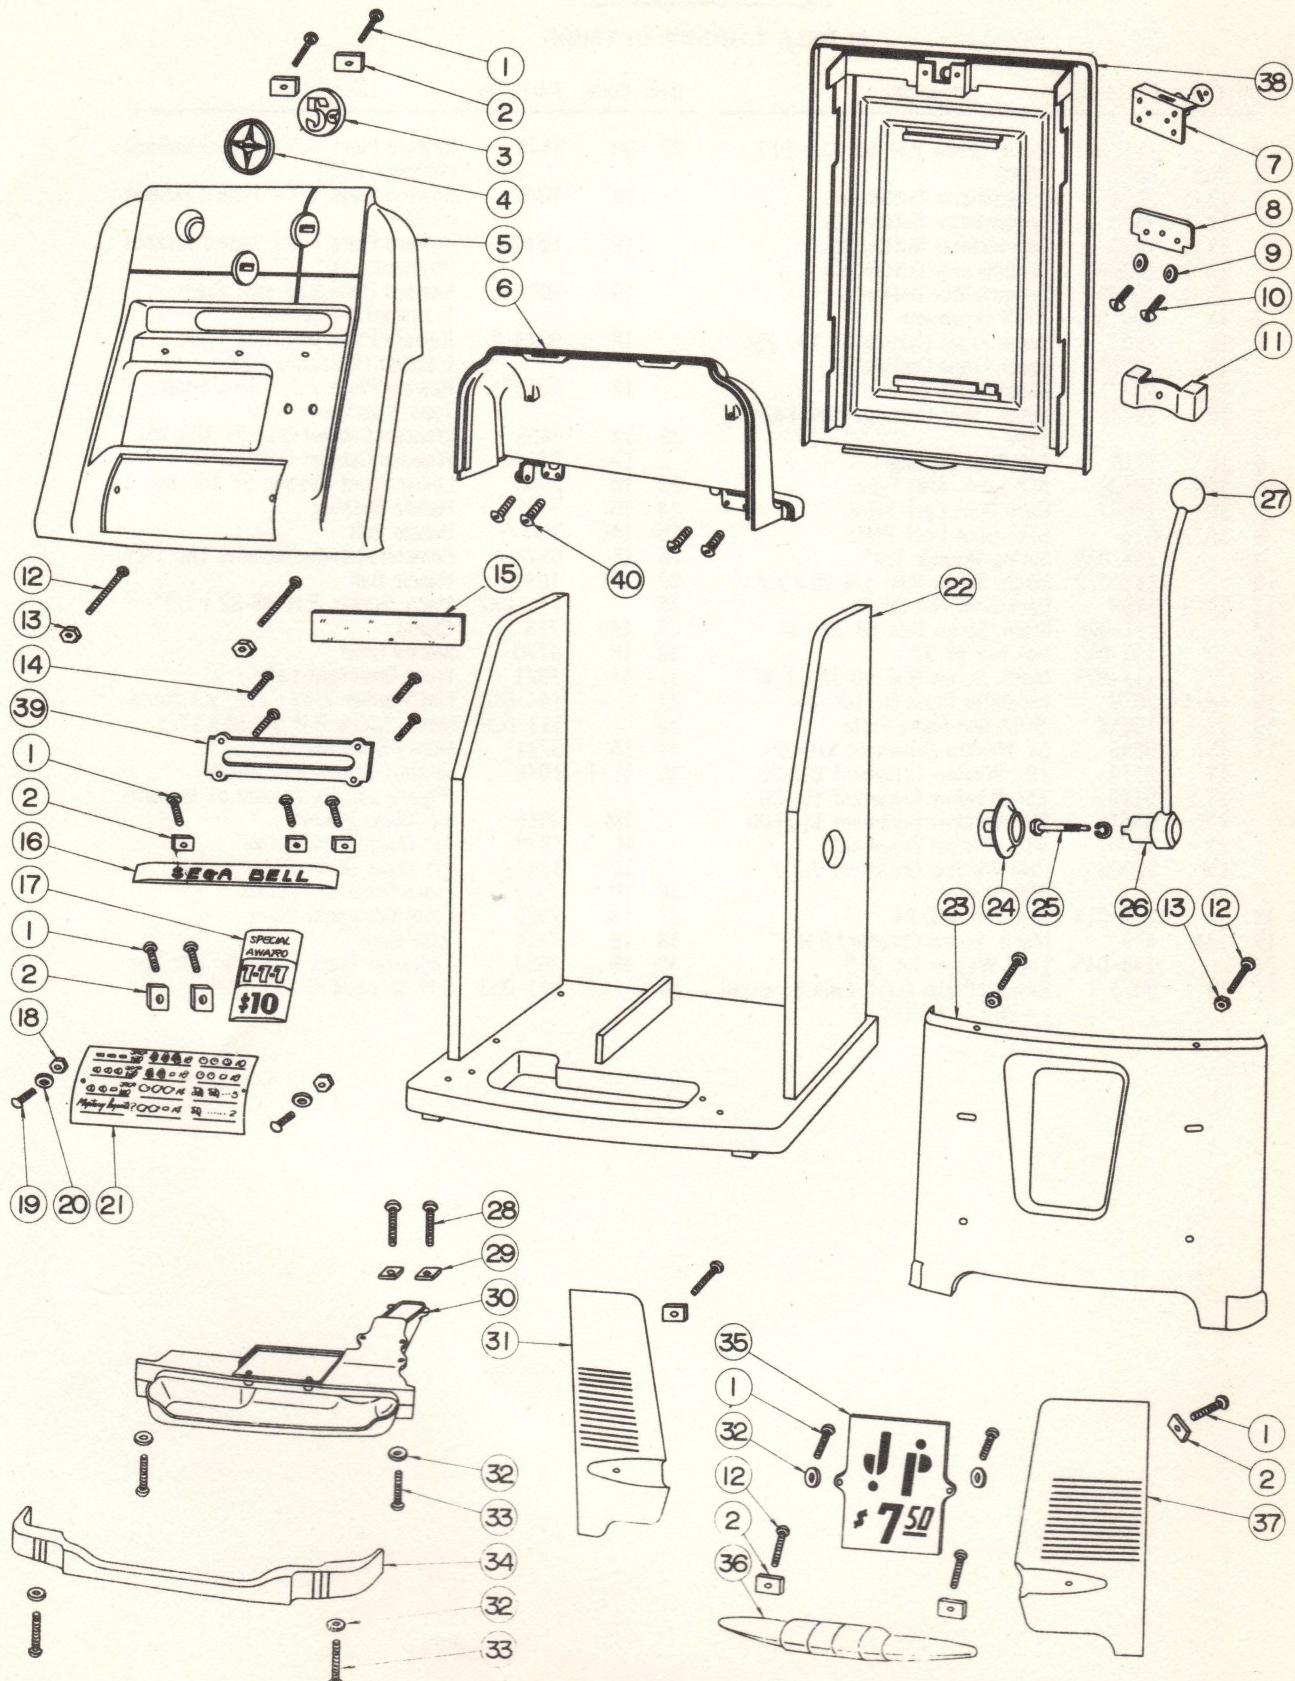


SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

PARTS LIST

## 21 BELL CABINET, OUTSIDE

Item Code	Parts No.	Description	Item Code	Parts No.	Description
1	111-037	Mach. Screw R.H. #8-32 x 3/8"	22	1R	Reward Plate 7-7-7 Type 3 Jackpot
2	2AS	6867 Clamp		1R	(Without +20)
3	1X-1	7624 Denominator Button 5¢		1R	Reward Plate 7-7-7 Type 2 Jackpot
	1X-1	7625 Denominator Button 10¢		1R	(+20)
	1X-1	7626 Denominator Button 25¢		1R	Reward Plate 7-7-7 Type 2 Jackpot
	1X-1	10019 Denominator Button 50¢		1R	(Without +20)
	1X-1	10466 Denominator Button \$		1R	Reward Plate Reg. Bell Type
4	1X	10215 STAR Ornament		1R	1 Jackpot (+20)
5	1C	7905 Upper Front Casting 5¢ 10¢ 25¢		1R	Reward Plate Reg. Bell Type
	1C	10270 Upper Front Casting 50¢		1R	1 Jackpt (Without +20)
	1C	10271 Upper Front Casting \$		1R	Reward Plate 7-7-7 Hand Load
	1C	10435 Upper Front Casting, Hand Loading Type	22	1A	Type 3 Jackpot (+20)
6	1E	7710 Top Rear Casting		1A	Wooden Cabinet Only 5¢ 10¢ 25¢
7	1AB	10598 ACE Lock, ANK Type		1A	Wooden Cabinet Only 50¢ \$
	1B	10597 Back Door Lock Shim	23	1D	Lower Front Casting 5¢ 10¢ 50¢ \$
8	1B-2	636 Back Door Lock Plate	24	1G	Handle Bushing
9		144-039 Spring Washer 1/4"	25	1AC	Handle Bolt
10		111-072 Mach. Screw R.H. 1/4-20 x 1/2"	26	1F	Complete Handle (Includes 1AC, 1AD)
11	1B-3	1794 Back Door Nut Shield	27	1F1	Handle Ball
12		111-028 Mach. Screw R.H. #8-32 x 1"	28	111-032	Mach. Screw. R.H. #8-32 x 1/2"
13		133-012 Hex Nut #8-32	29	2AP	Clamp
14		111-023 Mach. Screw R.H. #6-32 x 1/4"	30	1P	Money Bowl
15	1K-1	2679 Escalator Glass 5¢ 10¢ 25¢	31	1T	Front Ornament-Left
16	1Z	10216 SEGA Bell Name Plate	32	144-013	Flat Washer 7/32 - 1/2" x 1.2m/m
17	1Y	9046 5¢ Window Ornament \$10.00	33	111-028	Mach. Screw R.H. #8-32 x 1"
	1Y	9114 10¢ Window Ornament \$20.00	34	1N	Money Bowl Apron
	1Y	9115 25¢ Window Ornament \$50.00	35	1L-1	Jackpot Steel Plate (Blank)
	1Y	8351 50¢ Window Ornament \$100.00			(Please specify amount of Jackpot)
	1Y	10001 \$10 Window Ornament	36	1M	J.P. Glass Spacer
	1Y	10308 Reel Window Ornament 7-7-7		1L	J.P. Glass Blank 6m/m
		200 Coins		1L	J.P. Glass Blank 12m/m
18		133-014 Hex. Nut #10-24	37	1U	Front Ornament-Center
19	1AA	475 Mach. Screw Chromed R.H.	38	1W	Front Ornament-Right
20		144-045 Lock Washer Int. #10	39	1B	Back Door
21	1R	9073-1 Reward Plate 7-7-7 Type 3 Jackpot (+20)	40	1K	Escalator Glass Frame 5¢ 10¢ 25¢
					R.H. Screw #10-24 x 1/2"
				40	111-053

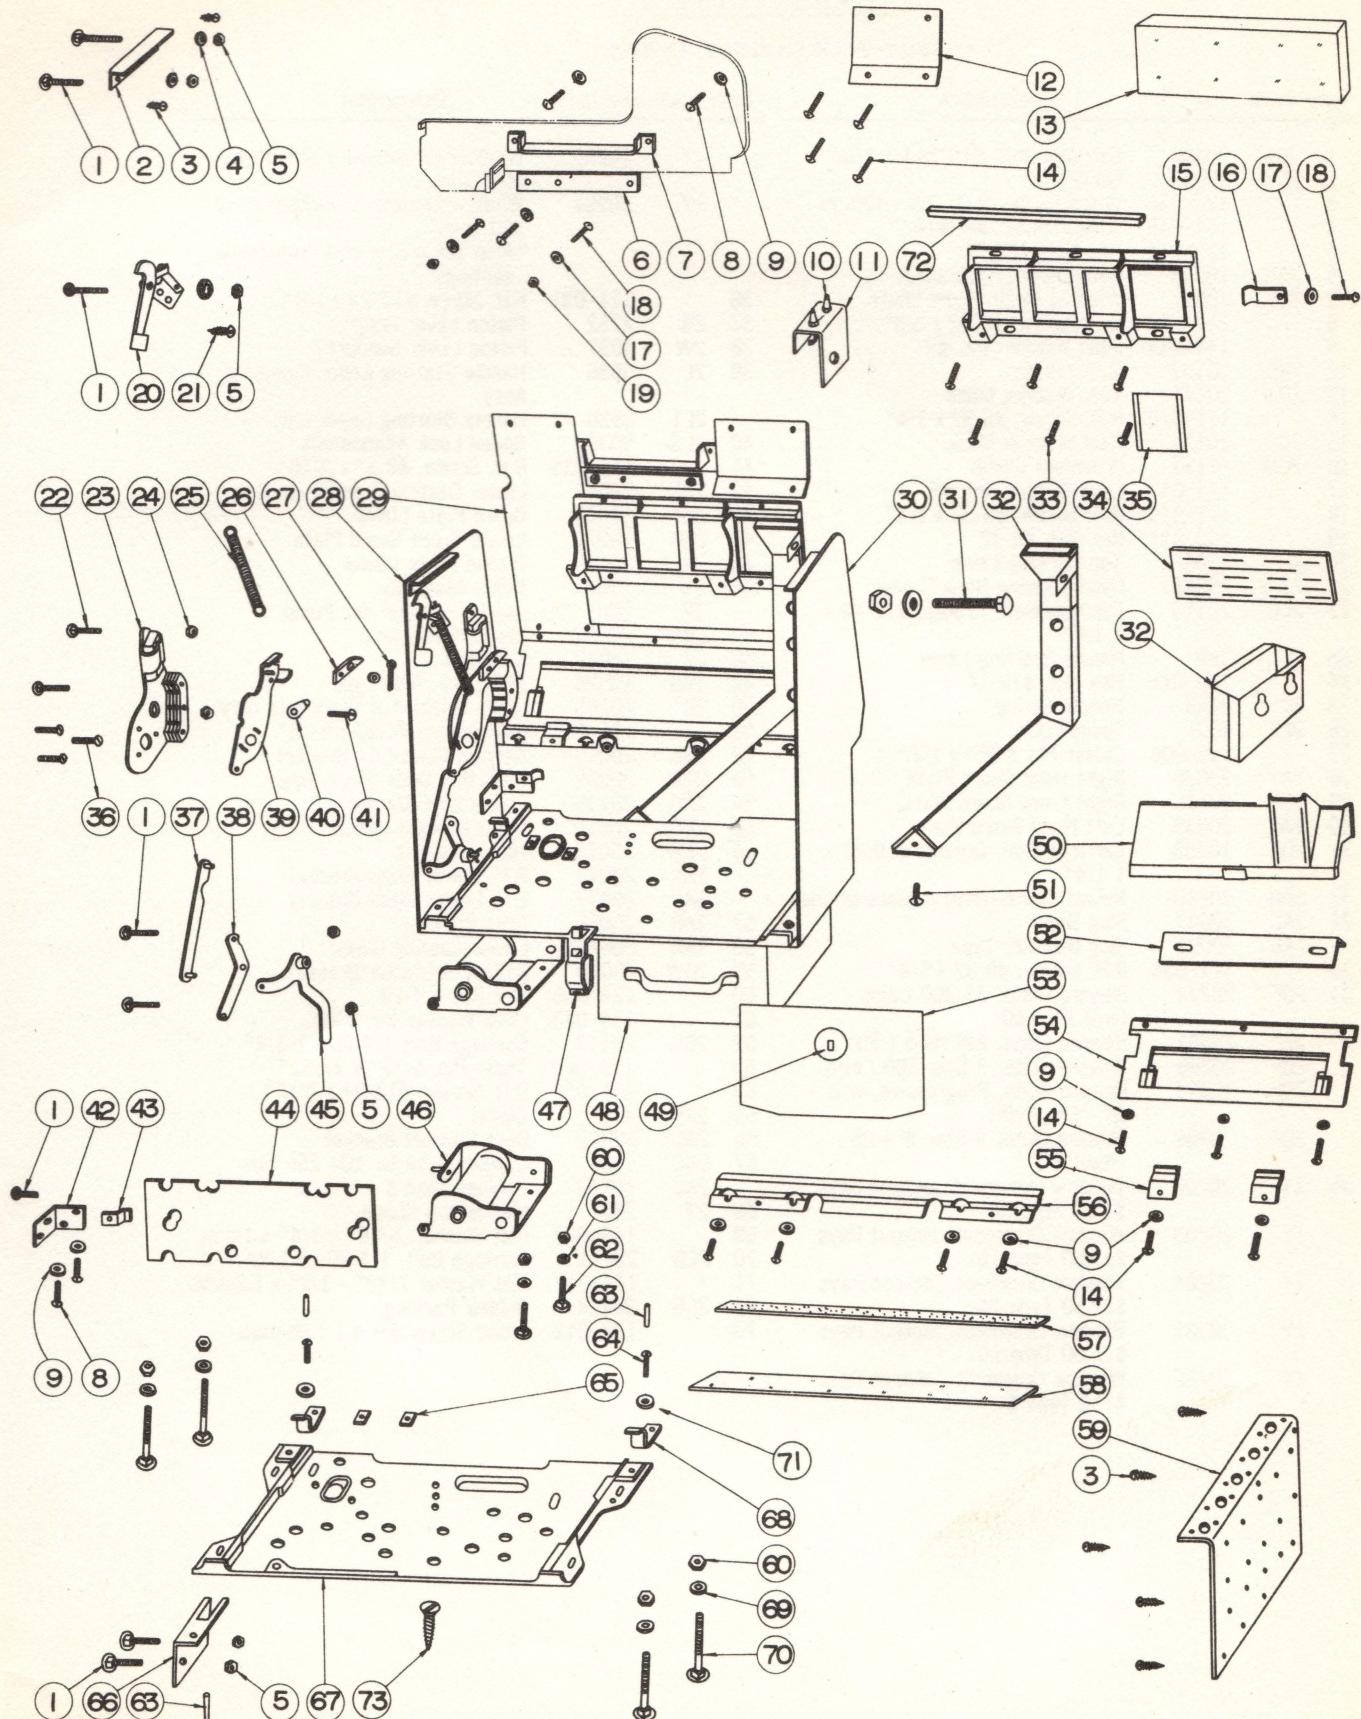

SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE


SECTION 2 PAGE 1

# COIN MACHINE 2

## PARTS LIST

### SEGA STAR CABINET, INSIDE

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	2CA	20108	Carriage Bolt, #10-24 x 1 1/8"	1Y	20260	Window Ornament, 3 Star Pays	
2	2E	20020	Guide Rail			300 Coins	
3		122-016	Wood Screw, R.H., 3.5 x 16m/m	1Y	20263	Window Ornament, Jackpot Pays	
4		144-045	Lock Washer, Int. #10			150 Coins	
5		133-014	Hex Nut, #10-24			*Also see 4 Star and Progressive sections	
6	2BN	20038	Coin Chute Lite Bracket	36	111-091	F.H. Screw #12-24 x 3/4"	
7	2BE	20012	Window Mask - Coin Chute	37	2S	Piston Lever Upper	
8		111-037	R.H. Screw, #8-32 x 3/8"	38	2W	Piston Lever Support	
9		144-044	Lock Washer, Int. #8	39	2L	Handle Starting Lever Complete Assy.	
12	2BO	20137	Guard Plate	2L1	5936	Handle Starting Lever only	
13	2D	20141	Reel Window Glass	40	2L3	Speed Lock Adjustment	
14		111-026	R.H. Screw, #8-32 x 1/4"	41	111-035	R.H. Screw, #8-32 x 3/16"	
15	2C	20134	Reel Window Mask	42	1AE	Lower Casting Bracket (2 ea)	
16	2CM	20139	Ornament Clamp	43	2BL	Guard Plate Clamp	
17		144-043	Lock Washer, Int. #6	44	2BK	Lower Front Guard Plate	
18		111-023	R.H. Screw, #6-32 x 1/4"	45	2X	Piston Lever Lower	
19		133-011	Hex Nut, #6-32	46	2Y	Pump Assembly	
20	2F	2763	Top Locking Lever	47	2BM	Leather Washer for Pump Mechanism Clamp	
21	2I-1	20064	Handle Spring Hook Screw	48	2Z	Cash Box	
22	2CC	20110	Carriage Bolt, Cromed #12-24 x 1 1/8"	49	1AB	ACE Lock, ANK Type	
23	2P	585	Handle Starting Lever	50	2BT	Light Shield (For Black Lite only)	
24		133-015	Hex Nut, #12-24	51	111-027	R.H. Screw, #8-32 x 5/16"	
25	2J	6464	Handle Spring	52	2BS	Reward Glass Lite Bracket	
26	2L2	9031	Speed Lock	53	2AA	Cash Box Door (Door only)	
27		155-006	Cotter Pin 3/32" x 1/2"	54	2BU	Lower Lite Bracket	
28	2AJ	20036	Right Hand Guard Plate	55	2EF	Light Bracket Clamp	
29	2BP	20136	Right Front Guard Plate	56	1AW	Glass Bracket	
30	2AK	20035	Left Hand Guard Plate	57	1AK	R.H. Lower Glass Bracket	
31	2DK	10355	Carriage Bolt, Cromed #10-24 x 1 1/4"	58	1AL	L.H. Lower Glass Bracket	
32	2DN	20210	Reject Chute (Used in place of cup)	59	1AR	Cork Packing	
32	2AE	20047	Slug Box	60	20055	Lower Casting Glass	
	2AE	20091	Slug Box J.P. Type	61	20018	Ballast & Starter Bracket	
33		111-038	R.H. Screw, #8-32 x 5/8"	62	2BW	Hex Nut 1/4-20	
34	2BF	20274	Reward Glass, 3S 300 Coins (w/o JP) ('60)	63	133-008	Lock Washer Int. 1/4"	
	2BF	20361	Reward Glass, 2JP (w/o +20)	64	144-040	Carriage Bolt 1/4-20 x 1 3/4"	
	2BF	20266	Reward Glass, 3 Star 200 Coins	65	2BC	155-009	
	2BF	20353	Reward Glass, Progressive, w/o JP = 150 Coins	66	155-009	Taper Pin, 5/32" x 13/32"	
	2BF	20351	Reward Glass, 4 Star JP +25 (Auto JP)	67	111-052	R.H. Screw, #10-24 x 7/16"	
35	1Y	20202	Window Ornament, Jackpot Pays \$7.50 Type 5¢	68	2AP	Clamp	
		20203	Window Ornament, Jackpot Pays \$15.00 Type 10¢	69	713	Base Support Bracket	
		20204	Window Ornament, Jackpot Pays \$37.50 Type 25¢	70	2AC1	Cabinet Base 5¢ 10¢ 25¢ 50¢	
		20221	Window Ornament, Jackpot Pays \$75.00 Type 50¢	71	2AC	Cabinet Base \$	
		20222	Window Ornament, Jackpot Pays \$150 Type \$	72	2T	Mechanism Clamp	
				73	144-003	Flat Washer, 5/16" - 3/4" x 1m/m	
					2CD	Carriage Bolt, 1/4-20 x 5 1/8"	
					144-013	Flat Washer 7/32" - 1/2" x 1.2m/m	
					2CG	Rubber Packing	
					20114	Wood Screw, FH 4.1 x 25 m/m	
					122-012		

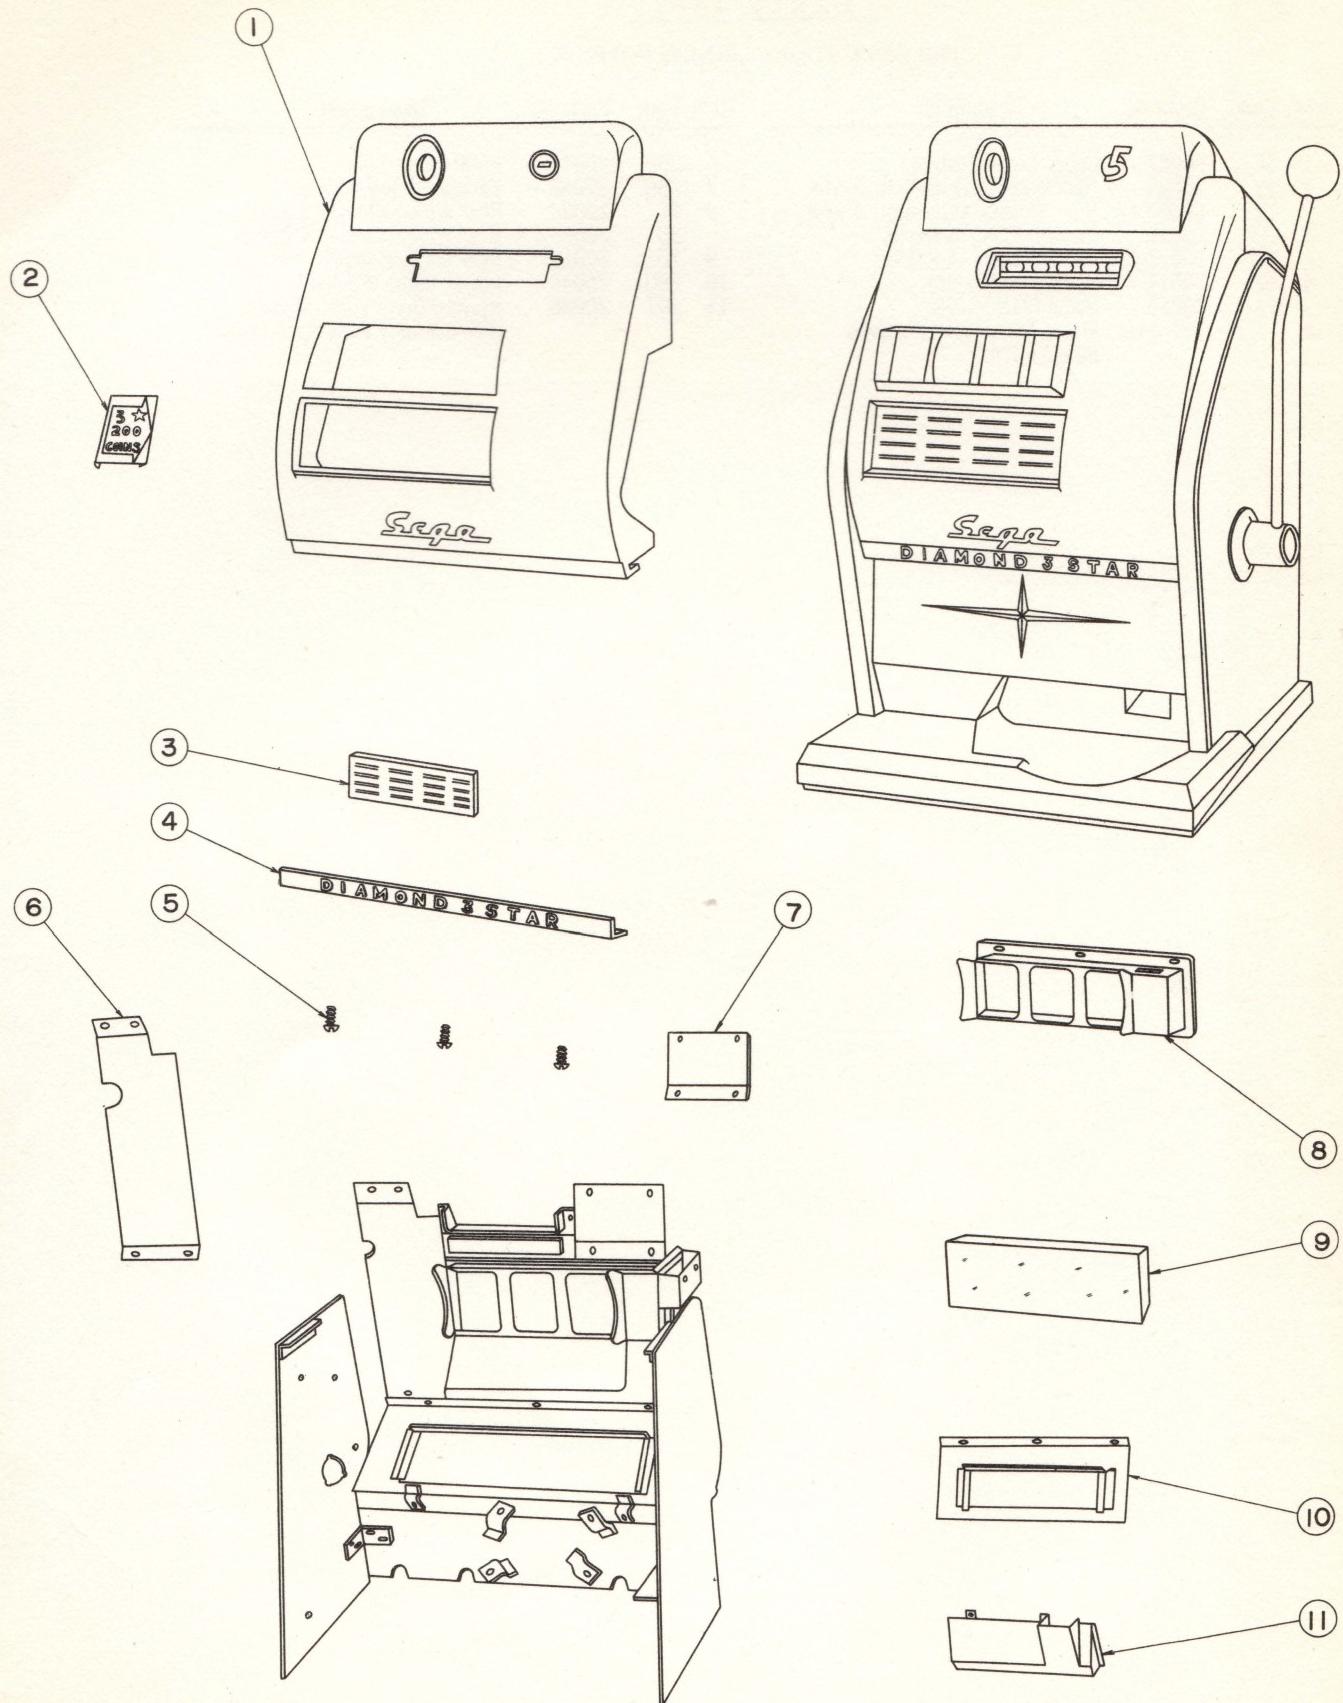

SEGA PARTS CATALOG


PARTS LIST ON REVERSE PAGE

# COIN MACHINE 2

## PARTS LIST

### 1959 SEGA STAR CABINET, OUTSIDE

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	1C	20007	Upper Front Casting	6	2BP	20044	Right Front Guard Plate
2	1Y	20041	Reel Window Ornament, 3 Star	7	2B0	20043	Escalator Guard Plate
	1Y	20063-FR	Reel Window Ornament, 4 Star	8	2C	20008	Reel Window Mask, 3 Reeler
3	2BF	20013	Reward Glass, 3-Reeler		2C	20009-FR	Reel Window Mask, 4 Reeler
	2BF	20077-FR	Reward Glass, 4-Reeler	9	2D	20010	Reel Window Glass
4	1Z	20014	Name Plate, 3-Star	10	2BU	20048	Lower Light Bracket
	1Z	20015	Name Plate, 4-Star	11	2BT	20046	Reward Glass Light Shield (For use only with black lite)
5		111-116	Mach. Screw R.H. Phillips #8-32 x 1/4"				

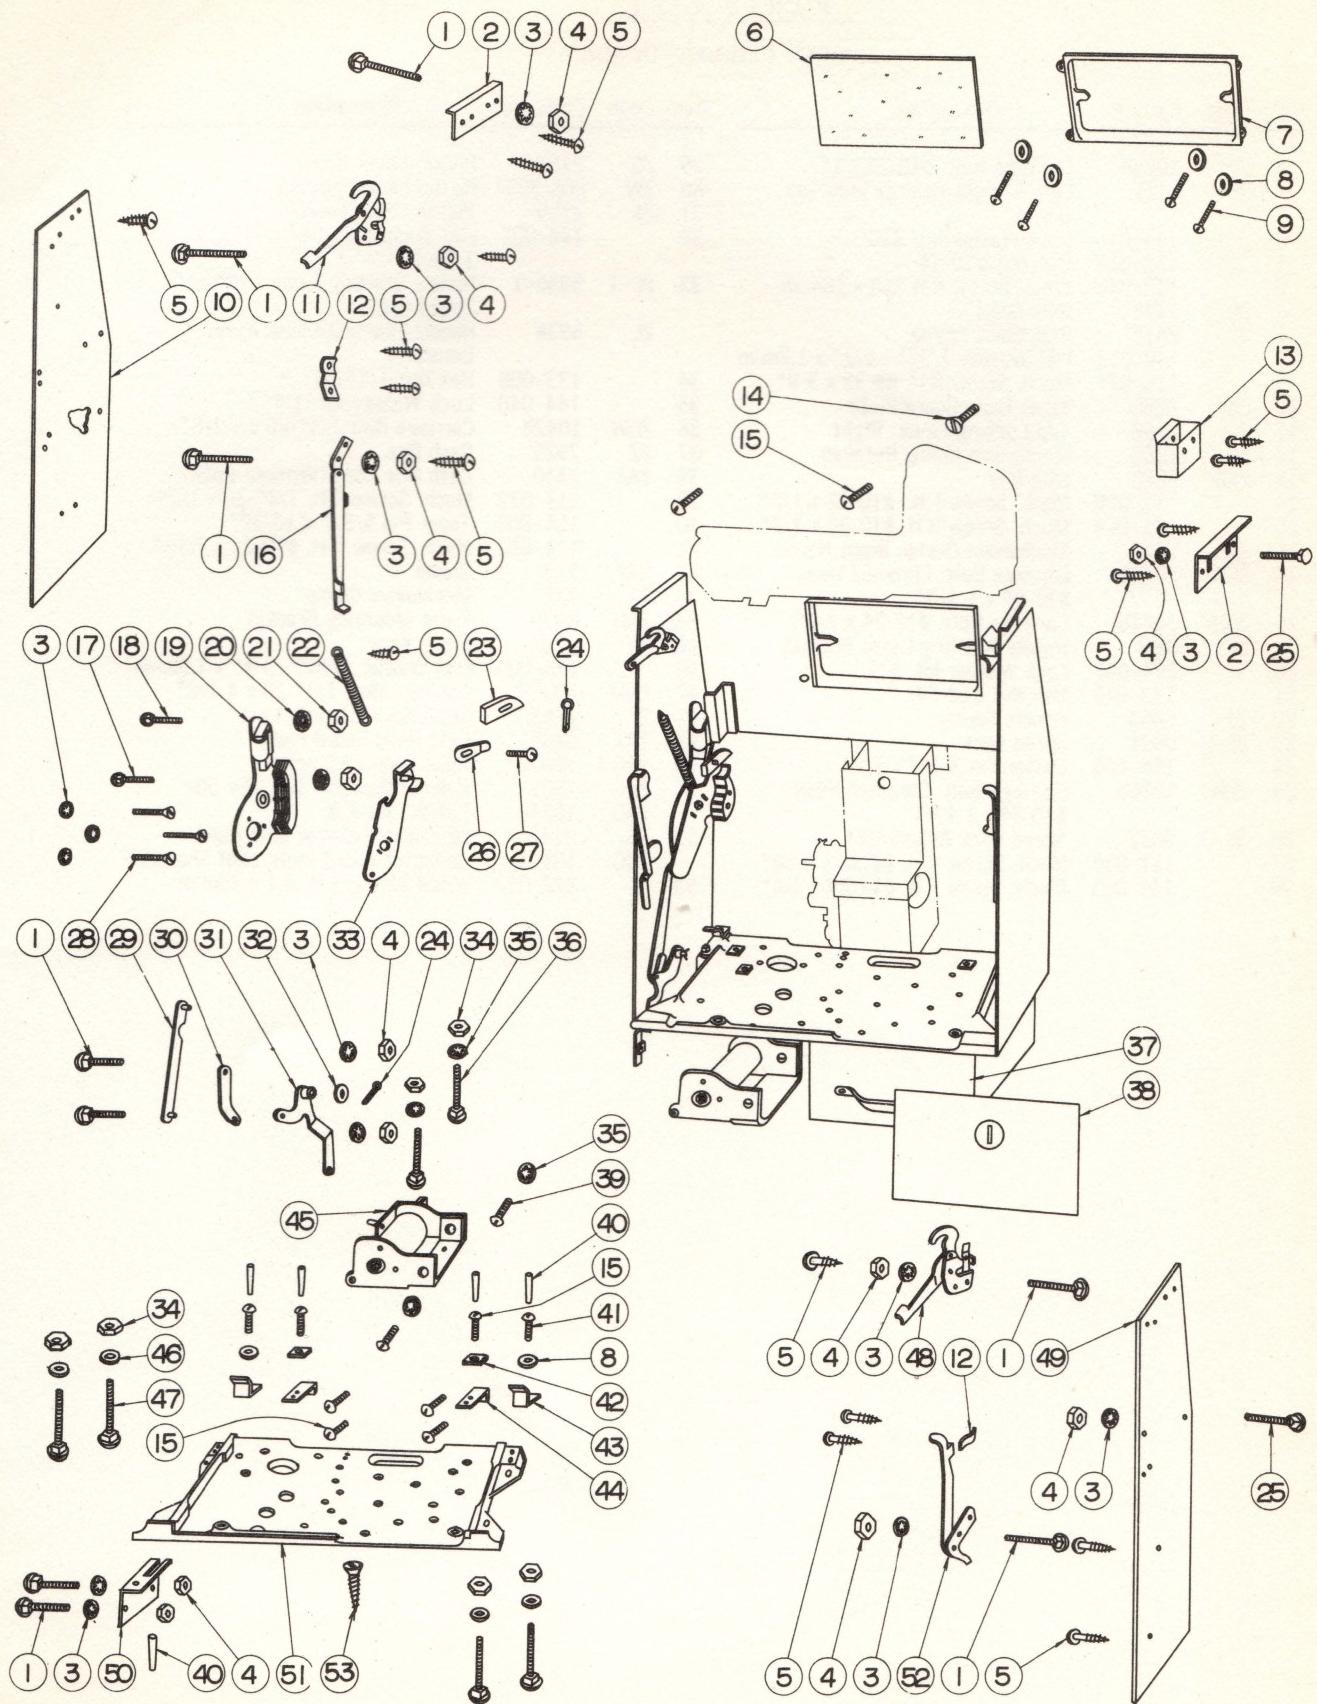

PARTS LIST ON REVERSE PAGE

SEGA PARTS CATALOG


SECTION 2 PAGE 5

# COIN MACHINE 2

## PARTS LIST

### 21 BELL CABINET, INSIDE

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	2DJ	10354	Carriage Bolt, #10-24 x 1"	29	2S	2752	Piston Lever Upper
2	2E	6821	Left & Right Cabinet Side Top Guard	30	2W	FOK-3091	Piston Lever Support
3		144-045	Lock Washer Int. #10	31	2X	2755	Piston Lever Lower
4		133-014	Hex Nut #10-24	32		144-007	Flat Washer 21/64" x 9/16" x 1.2m/m
5		122-016	Wood Screw R.H. 3.5 x 16m/m	33	2L-1	5936-1	Handle Starting Lever (Without Speed Lock)
6	2D	1778	Reel Glass	2L		5936	Handle Starting Lever Assy. Complete
7	2C	2515	Reel Glass Frame	34		133-008	Hex Nut 1/4"-20
8		144-013	Flat Washer 7/32" - 1/2" x 1.2m/m	35		144-040	Lock Washer Int. 1/4"
9		111-037	Mach. Screw R.H. #8-32 x 3/8"	36	2DW	10428	Carriage Bolt 1/4"-20 x 1 1/8"
10	2AK	6866	Right Hand Guard Plate	37	2Z	7925	Cash Box
11	2G	2762	Top Locking Lever, Right	38	2AA	1410	Cash Box Door (Without Lock)
12	2K	1069	Mechanism Clamp Retainer	39		111-072	Mach. Screw R.H. 1/4"-20 x 1/2"
13	2AE	2658	Slug Box	40		155-009	Taper Pin 5/32" x 13/32"
14		111-090	Mach. Screw F.H. #10-32 x 1/2"	41		111-052	Mach. Screw R.H. #10-24 x 7/16"
15		111-064	Mach. Screw R.H. #10-32 x 1/2"	42	2AP	713	Clamp
16	2M	2147	Mechanism Clamp, Right Hand	43	2T	742	Mechanism Clamp
17	2CC	20110	Carriage Bolt, Chromed Head, #12-24 x 1 1/8"	44	2AU	9029	Front Mounting Bracket
18	2DU	10416	Carriage Bolt, #12-24 x 7/8"	45	2Y	2784	Pump Assy
19	2P	585	Handle Starting Lever Bracket	46		144-003	Flat Washer 5/16" - 3/4" x 1.0m/m
20		144-047	Lock Washer Int. #12	47	2DM	10357	Carriage Bolt 1/4"-20 x 4 1/2"
21		133-015	Hex Nut #12-24	48	2F	2763	Top Locking Lever, Left
22	2J	6464	Handle Spring	49	2AJ	6865	Left Hand Guard Plate
23	2L-2	9031	Speed Lock	50	2AC-1	10012	Base Support Bracket
24		155-006	Cotter Pin 3/32" x 1/2"	51	2AC	7901	Cabinet Base 5¢ 10¢ 25¢ 50¢
25	2DK	10355	Carriage Bolt, Chromed Head #10-24 x 1 1/4"	52	2AC	10243	Cabinet Base \$
26	2L-3	9032	Speed Lock Adjustment	53	2N	2143	Mechanism Clamp, Left Hand
27		111-035	Mach. Screw R.H. #8-32 x 3/16"	2BC		10128	Collector Guard Plate (Not Shown)
28		111-091	Mach. Screw F.H. #12-24 x 3/4"			122-012	Wood Screw, F.H. 4.1 x 25m/m

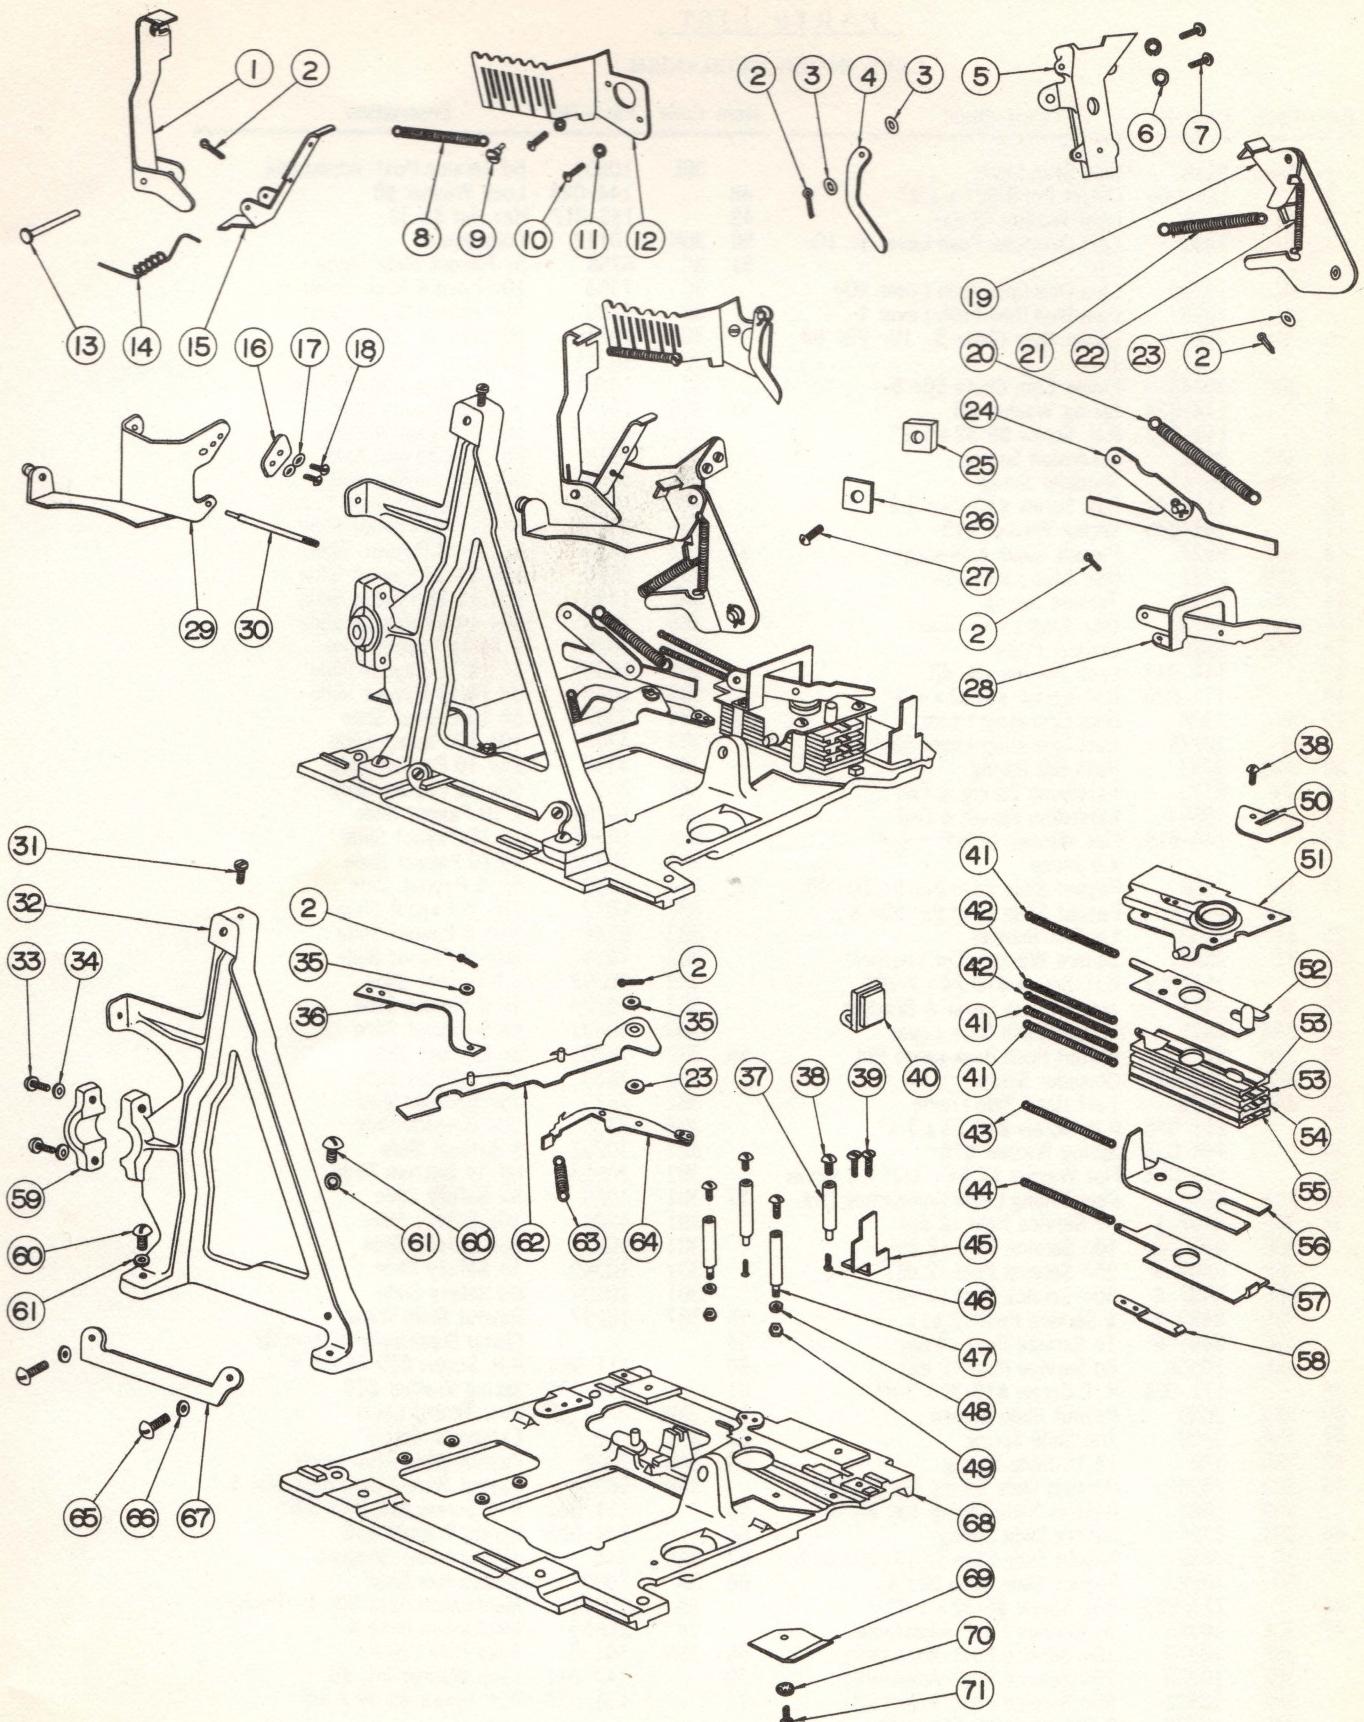

SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

SECTION 3 PAGE 1


# COIN MACHINE 3

## PARTS LIST

### LEFT INSIDE MECHANISM

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	3AR	9118	Disc Stop Lever	3BE	10507	6d Service Post-Adjustable	
2		155-006	Cotter Pin 3/32" x 1/2"	48	144-044	Lock Washer #8	
3	3U	1135	Fiber Washer (2 ea)	49	133-012	Hex Nut #8-32	
4	3U	1491	Coin Overflow Push Lever 5¢ 10¢ 25¢	50	3BK	Coin Guard	
				51	3C	6758	5¢ Payout Slide Cover
				3C	7393	10¢ Payout Slide Cover	
5	3BC	10250	Coin Overflow Push Lever 50¢	3C	6760	25¢ Payout Slide Cover	
		10237	Coin Overflow Push Lever \$	3C	10240	50¢ Payout Slide Cover	
		7601	Lower Coin Chute 5¢ 10¢ 25¢ 6d 1¢	3C	10241	\$ Payout Slide Cover	
				3C	10505	1¢ 6d Payout Slide Cover	
6		10242	Lower Coin Chute 50¢ \$	52	3B6	7474	5¢ Top Payout Slide
		144-034	Spring Washer #8	3B6	7514	10¢ Top Payout Slide	
7		111-032	R.H. Screw #8-32 x 1/2"	3B6	7518	25¢ Top Payout Slide	
8	3AP	3341	Extension Spring	3B6	3697	50¢ Top Payout Slide	
9	3BD	DE-11	Shoulder Screw	3B6	10266	\$ Top Payout Slide	
10		111-042	R.H. Screw #10-24 x 3/8"	3B6	10504	6d, 1¢ Top Payout Slide	
11		144-035	Spring Washer #10	53	3B5	1420	5¢ 14-18 Payout Slide
12	3AZ	8337	Payout Guide & Bracket	3B5	3690	10¢ 14-18 Payout Slide	
13	3AU	2721	Disc Stop Lever Pin	3B5	1430	25¢ 14-18 Payout Slide	
14	3AS	6474	Torsion Spring	3B5	3696	50¢ 14-18 Payout Slide	
15	3AT	6473	Disc Stop Lever Inner	3B5	10265	\$ 14-18 Payout Slide	
16	3AC	2825	Bumper Plate	3B5	10305	1¢ 14-18 Payout Slide	
17		144-044	Lock Washer Int. #8	3B5	10403	6d 14-18 Payout Slide	
18		111-026	R.H. Screw #8-32 x 1/4"	54	3B4	3392	5¢ 10 Payout Slide
19	3F	8398	Reel Operating Lever	3B4	3398	10¢ 10 Payout Slide	
	3F	10278	Reel Operating Lever 50¢ \$	3B4	3395	25¢ 10 Payout Slide	
20	3AG	3793	Push Bar Spring	3B4	3695	50¢ 10 Payout Slide	
21	3H	8173	Extension Spring & Clip	3B4	10264	\$ 10 Payout Slide	
22	3G	10654	Extension Spring & Clip	3B4	10304	1¢ 10 Payout Slide	
23		144-015	Flat Washer 17/64" - 1/2" x 0.5m/m	3B4	10402	6d 10 Payout Slide	
24	3AF	4866	Payout Slide Push Bar 5¢ 10¢ 25¢	55	3B3	6830	5¢ 5 Payout Slide
	3AF	10279	Payout Slide Push Bar 50¢ \$	3B3	6842	10¢ 5 Payout Slide	
25	3Y	2663	Leather Bumper	3B3	6844	25¢ 5 Payout Slide	
26	3Z	2648	Square Washer (For Leather)	3B3	7438	50¢ 5 Payout Slide	
27		111-052	R.H. Screw #10-24 x 7/16"	3B3	10263	\$ 5 Payout Slide	
28	3E	7463	Jackpot Trip Lever & Bracket	3B3	10303	1¢ 5 Payout Slide	
29	3AA	6875	Payout Push Back Lever	3B3	10401	6d 5 Payout Slide	
30	3BH	57	Payout Push Back Lever Pin	56	3B2	7610	5¢ Bottom Slide
31	3BA	AGV-80	Shoulder Screw	3B2	7633	10¢ Bottom Slide	
32	3AY	2782	Left Hand Side Frame	3B2	7613	25¢ Bottom Slide	
33		111-045	R.H. Screw #10-24 x 3/4"	3B2	7435	50¢ Bottom Slide	
34		144-035	Spring Washer #10	3B2	10262	\$ Bottom Slide	
35		144-014	Flat Washer 17/64 - 1/2" x 1.2m/m	3B2	10503	6d, 1¢ Bottom Slide	
36	3AX	2843	Reel Timing Lever Connecting Link	57	3B1	1005	5¢ Safety Slide
37	3BE	8497-1	5¢ Service Post (2 ea)		3B1	4282	10¢ Safety Slide
	3BE	8497-2	10¢ Service Post (2 ea)		3B1	1007	25¢ Safety Slide
	3BE	8497-3	25¢ Service Post (2 ea)		3B1	10300	1¢ Safety Slide
	3BE	8497-4	50¢ Service Post (2 ea)		3B1	10502	6d Safety Slide
	3BE	8497-5	\$ Service Post (2 ea)	58	3B7	10297	Payout Slide Wiper
	3BE	8497-6	1¢ Service Post (4 ea)		59		Clamp Supplied with item 32
	3BE	10506	6d Service Post (2 ea)		60	111-054	R.H. Screw #10-24 x 5/8"
38		111-055	R.H. Screw #10-32 x 3/8"		61	144-035	Spring Washer #10
40	3BG	2680	Payout Slide Bumper		62	3AW	2765
41	3B6	3809	Top Slide Spring		63	3AJ	160
42	3B5	570	14-18 Slide Spring		64	3AH	7062
43	3B2	7439	Bottom Slide Spring 5¢ 25¢ 50¢ \$		3AH	10281	Payout Slide Stop Lever
	3B2	1084	Bottom Slide Spring 10¢ 6d 1¢		3AH	111-042	Payout Slide Stop Lever 50¢ \$
44	3B1	2725	Safety Slide Spring		65	111-042	R.H. Screw #10-24 x 3/8"
45	3D	3439	Payout Slide Stop 5¢ 10¢ 25¢ 6d 1¢		66	144-035	Spring Washer #10
	3D	10227	Payout Slide Stop 50¢ \$		67	3AK	444
46		111-023	R.H. Screw #6-32 x 1/4"		68	3A	7902
47	3BE	10315	5¢ Service Post-Adjustable		3A	10611	Mechanism Base
	3BE	10319	10¢ Service Post-Adjustable		3A	10659	Mechanism Base 50¢ E. Penny
	3BE	10320	25¢ Service Post-Adjustable		69	3BM	Mechanism Base \$
	3BE	10322	50¢ Service Post-Adjustable		70	144-044	Base Hole Cover
	3BE	10323	\$ Service Post-Adjustable		71	111-037	Lock Washer Int. #8
							R.H. Screw #8-32 x 3/8"

SEGA PARTS CATALOG

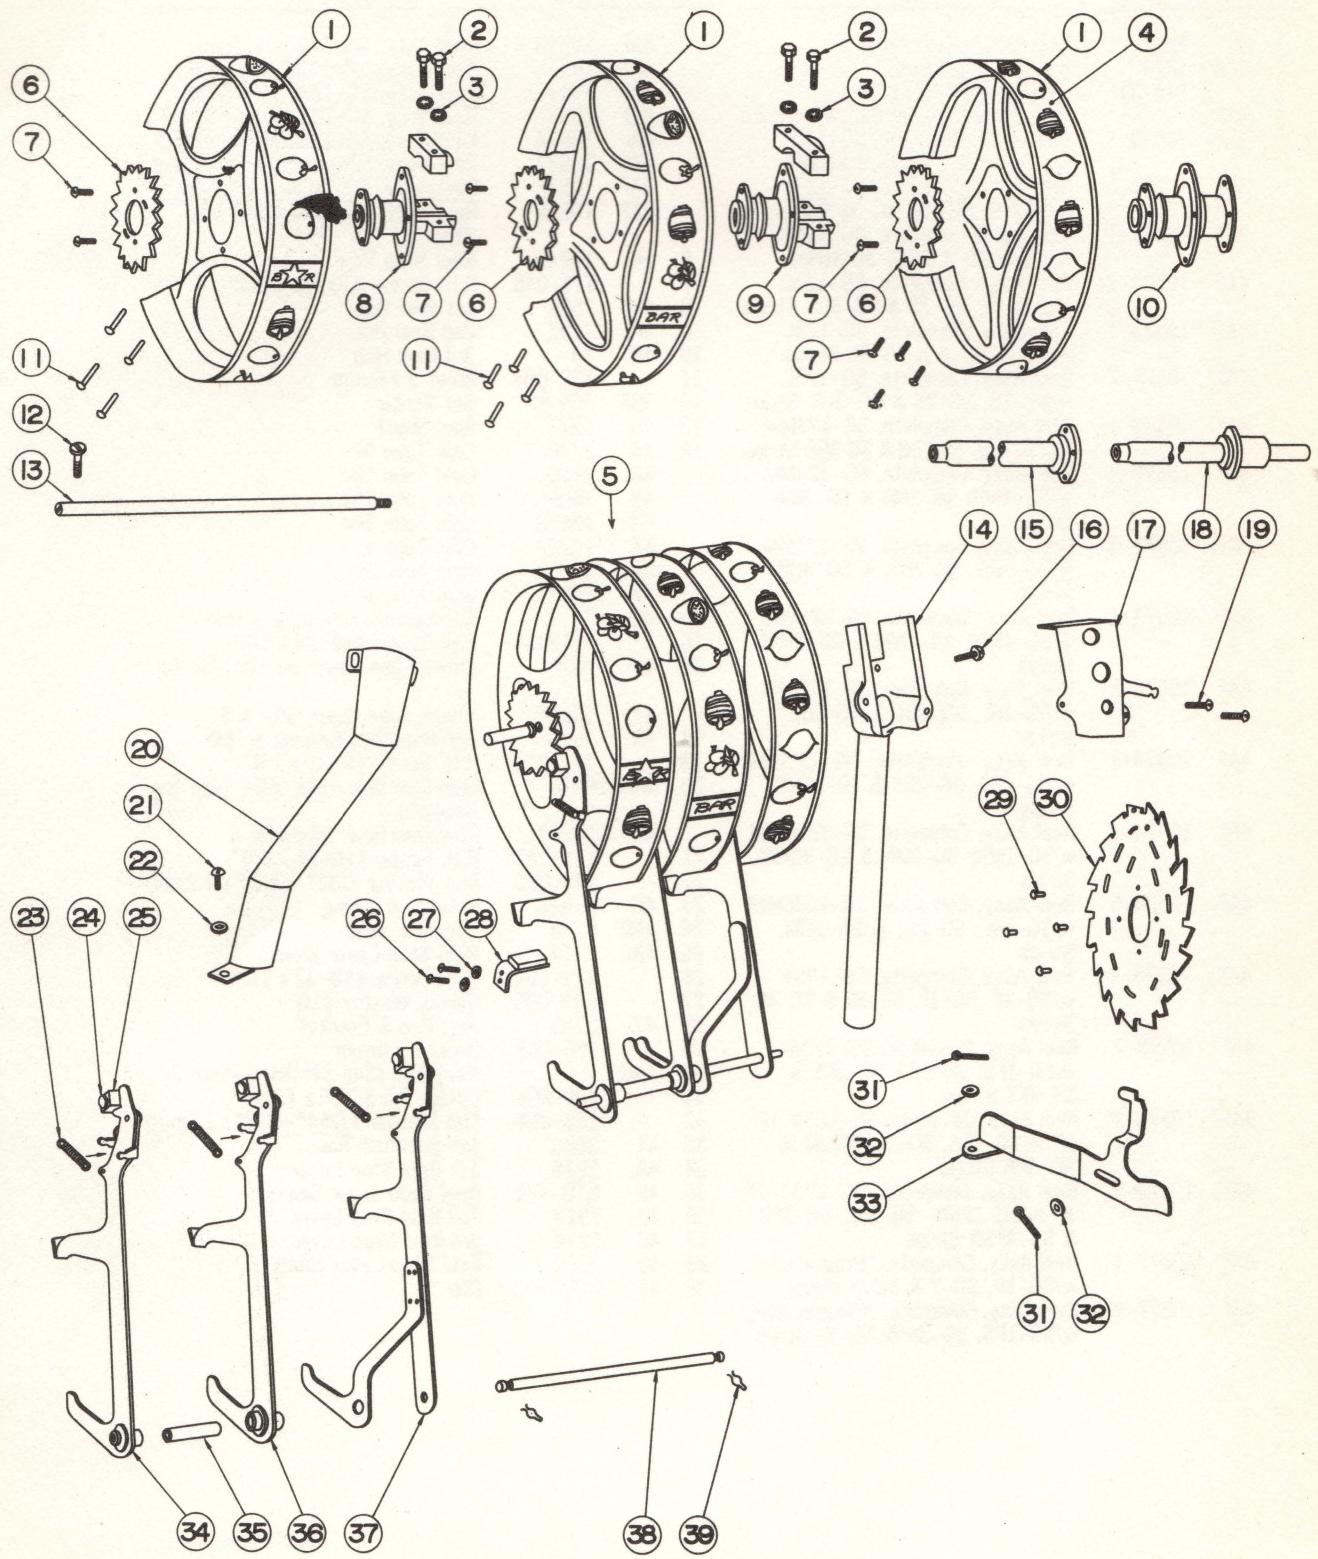

SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

PARTS LIST

## INSIDE MECHANISM AND REEL ASSEMBLIES

Item Code	Parts No.	Description	Item Code	Parts No.	Description
1 4L	722	Reel (Single Unit Only)	4AF	10570	Reel Assy, SG-123 w/o Strip
2 4AA	1379	Hexagon Head Bolt	4AF	10571	Reel Assy, SG-123C w/o Strip
3	144-047	Lock Washer, Int. # 12	4AF	10572	Reel Assy, SG-123L w/o Strip
4 4AK		Reel Strip (See Section 4 Page 3)	4AF	10573	Reel Assy, SG-123MM w/o Strip
5 4AF	10570-1	Reel Assy, Complete, SG-123 w/SG-1, SG-2 & SG-3 Strips	4AF	10574	Reel Assy, SG-123CMM w/o Strip
4AF	10570-2	Reel Assy, Complete, SG-123 w/SG-1S, SG-2S, SG-3S Strips	4AF	10577	Reel Assy, "Progressive" w/o Strip
4AF	10571-1	Reel Assy, Complete, SG-123C w/SG-1 SG-2 & SG-3C Strips	4AF	10575	Reel Assy, SG-1234 w/o Strip
4AF	10571-3	Reel Assy, Complete, SG-123C w/S G-1S, SG-2S & SG-3CS Strips	4AF	10576	Reel Assy, SG-1234-10JP w/o Strip
4AF	10572-1	Reel Assy, Complete, SG-123L w/SG-1, SG-2 & SG-3L Strips	6 4K	10249	Reel Stop Star
4AF	10572-2	Reel Assy, Complete, SG-123L w/SG-1S, SG-2S & SG-3LS Strips	7	111-048	R.H. Screw #10-24 x 1/4"
4AF	10573-1	Reel Assy, Complete, SG-123MM w/SG-1BB, SG-2BB & SG-3BB Strips	8 4M	2506	1st Reel Hub
4AF	10573-2	Reel Assy, Complete, SG-123MM w/SG-1MB, SG-2MB & SG-3MB Strips	9 4N	2507	2nd Reel Hub
4AF	10573-3	Reel Assy, Complete, SG-123MM w/SG-1BS, SG-2BS, & SG-3BS Strips	10 4P	34	3rd Reel Hub
4AF	10573-4	Reel Assy, Complete, SG-123MM w/SG-1MM, SG-2MM & SG-3MM Strips	11	166-008	Rivet 3 x 6m/m
4AF	10573-5	Reel Assy, Complete, SG-123MM w/SG-1BL, SG-2BL & SG-3BL Strips	12 3BA	AGV 80	Set Screw
4AF	10574-1	Reel Assy, Complete, SG-123CMM w/SG-1BS, SG-2BS & SG-3CBS Strips	13 4H	7913	Reel Shaft
4AF	10574-3	Reel Assy, Complete, SG-123CMM w/SG-1MM, SG-2MM & SG-3CMM Strips	14 4X	2770	Coin Tube 5¢
4AF	10574-5	Reel Assy, Complete, SG-123CMM w/SG-1BL, SG-2BL & SG-3CBL Strips	15 4R	77	Coin Tube 10¢
4AF	10575-1	Reel Assy, Complete, SG-1234 w/SG-1F, SG-2F, SG-3F & SG-4F Strips	16	111-054	Coin Tube 25¢
4AF	10575-2	Reel Assy, Complete, SG-1234 w/SG-1FS, SG-2FS, SG-3FS & SG-4FS Strips	17 4Y	2676	Coin Tube 50¢
4AF	10576-1	Reel Assy, Complete, SG-1234-10 JP w/SG-1FA, SG-2F, SG-3F & SG-4FA Strips	18 4S	10652	Coin Tube \$
4AF	10576-2	Reel Assy, Complete, SG-1234-10 JP w/SG-1FSA, SG-2FS, SG-3FS & SG-4FSA Strips	19	76	Coin Tube 6d
4AF	10577-1	Reel Assy, Complete, "Progressive" w/SG-1P, SG-2 & SG-3 Strips	20 4AH	111-023	Coin Tube 1¢
4AF	10577-2	Reel Assy, Complete, "Progressive", w/SG-1PS, SG-2S & SG-3S Strips	21	10218	1st Reel Disc Bearing & Hub
			22		R.H. Screw #10-24 x 5/8"
			23	4G	Check Tube Cover 5¢ 10¢ 25¢ 6d 1¢
			24	4AD	Check Tube Cover 50¢ & \$
			25	4AE	2nd Reel Disc Bearing & Hub
			26	4G	R.H. Screw #6-32 x 1/4"
			27	D-620	Coin Overflow Tube (Flat Type for Jackpot)
			28	4AD	Coin Overflow Tube 50¢ \$
			29	5170	R.H. Screw #10-24 x 3/8"
			30	4AE	Flat Washer 7/32" - 1/2" x 1.2m/m
			31	10247	Extension Spring
			32	111-042	Shoulder Stud
			33	144-013	Reel Stop Lever Block
			34	4T	R.H. Screw #10-32 x 1/2"
			35	2823	Sprig Washer #10
			36	4A	Felt Pad & Bracket
			37	5171	Rivet 3 x 6m/m
			38	144-035	Reel Disc (See Section 4 Page 3)
			39	2750	Cotter Pin 3/32" x 1/2"
			40	166-008	Flat Washer 17/64" - 1/2" x 1.2m/m
			41	155-006	Jackpot Push Bar
			42	144-014	1st Reel Stop Lever
			43	4B	Reel Stop Lever Spacer
			44	2823	2nd Reel Stop Lever
			45	5215	3rd Reel Stop Lever
			46	STD-734	Reel Stop Lever Shaft
			47	7919	Clip
			48	5214	
			49	2724	
			50	BDM-662	

## REEL STRIP TABLE


ADVANCE BONUS											
REEL STRIP PRINTED NO.	REEL STRIP PART NO.	1	2	3	4	5	6	7	8	9	10
SG-1	4AK - 10090	1	3	6	7	1	1	1	(1)	-	-
PK-1	4AK - 10849	1	3	6	7	1	1	1	(1)	-	-
SG-1S	4AK - 20056	1	3	6	7	1	1	1	(1)	-	-
PK-1S	4AK - 20430	1	3	6	7	1	1	1	(1)	-	-
SG-1PS	4AK - 20233	1	2	6	7	2	1	1	(1)	-	-
PK-1PS	4AK - 20450	1	2	6	7	2	1	1	(1)	-	-
SG-1CK	4AK - 20424	-	3	4	3	1	1	1	-	-	-
SG-1K	4AK - 20381	-	3	5	4	1	1	1	-	-	-
SG-1BL	4AK - 20244	1	3	6	6	1	1	1	(1)	-	-
PK-1BL	4AK - 20438	1	3	6	6	1	1	1	(1)	-	-
SG-1BS	4AK - 20153	1	3	6	6	1	1	1	(1)	-	-
SG-1MM	4AK - 20122	1	3	6	6	1	1	1	(1)	-	-
PK-1MM	4AK - 20441	1	3	6	6	1	1	1	(1)	-	-
SG-2	4AK - 10091	-	7	4	3	4	1	1	-	(1)	-
PK-2	4AK - 10850	-	7	4	3	4	1	1	-	(1)	-
SG-2S	4AK - 20057	-	7	4	3	4	1	1	(1)	-	-
PK-2S	4AK - 20431	-	7	4	3	4	1	1	(1)	-	-
BB-2	4AK - 10713	-	7	5	2	5	-	1	-	-	-
SG-2K	4AK - 20382	-	1	4	3	4	1	1	-	-	-
SG-2BL	4AK - 20245	-	6	4	3	4	1	1	(1)	-	-
PK-2BL	4AK - 20439	-	6	4	3	4	1	1	(1)	-	-
SG-2BS	4AK - 20154	-	6	4	3	4	1	1	(1)	-	-
SG-2MM	4AK - 20123	-	6	4	3	4	1	1	(1)	-	-
SG-3	4AK - 10092	7	-	1	2	8	1	1	-	(1)	-
SG-3S	4AK - 20058	7	-	1	2	8	1	1	(1)	-	-
SG-3C	4AK - 10187	9	-	1	2	6	1	1	-	(1)	-
SG-3CS	4AK - 20066	9	-	1	2	6	1	1	(1)	-	-
SG-3L	4AK - 10186	5	-	2	3	8	1	1	-	(1)	-
PK-3L	4AK - 10889	5	-	2	3	8	1	1	-	(1)	-
SG-3LS	4AK - 20067	5	-	2	3	8	1	1	(1)	-	-
PK-3LS	4AK - 20467	5	-	2	3	8	1	1	(1)	-	-
BB-3	4AK - 10714	8	-	2	3	6	-	1	-	-	-
SG-3K	4AK - 20383	5	-	1	2	2	1	1	-	-	-
SG-3LBL	4AK - 20418	5	-	2	3	7	1	1	(1)	-	-
PK-3LBL	4AK - 20440	5	-	2	3	7	1	1	(1)	-	-
SG-3LBS	4AK - 20419	5	-	2	3	7	1	1	(1)	-	-
SG-3LMM	4AK - 20417	5	-	2	3	7	1	1	(1)	-	-
PK-3LMM	4AK - 20443	5	-	2	3	7	1	1	(1)	-	-
SG-3CBL	4AK - 20294	9	-	1	2	5	1	1	(1)	-	-
SG-3CMM	4AK - 20235	9	-	1	2	5	1	1	(1)	-	-
SG-3E	4AK - 10590	5	-	3	4	7	-	1	-	-	-
SG-3CB5	4AK - 20236	9	-	1	2	5	1	1	(1)	-	-
SG-3CB	4AK - 20421	8	-	1	1	8	1	1	-	-	-
SG-3LB	4AK - 20428	5	-	2	3	8	1	1	-	-	-
PK-3LB	4AK - 20446	5	-	2	3	8	1	1	-	-	-
SG-3W	4AK - 10848	6	-	3	3	6	1	1	-	(1)	-
PK-3W	4AK - 10851	6	-	3	3	6	1	1	-	(1)	-
SG-3WS	4AK - 20429	6	-	3	3	6	1	1	(1)	-	-
PK-3WS	4AK - 20432	6	-	3	3	6	1	1	(1)	-	-
SG-3VS	4AK - 20449	6	-	1	3	8	1	1	(1)	-	-
PK-3VS	4AK - 20451	6	-	1	3	8	1	1	(1)	-	-
SG-3FS	4AK - 20061	-	7	8	3	-	1	1	-	-	-
SG-4LFS	4AK - 20453	1	-	7	7	4	-	1	-	-	-
PK-4LFS	4AK - 20457	1	-	7	7	4	-	1	-	-	-
SG-4LFSA	4AK - 20461	-	4	7	4	-	5	-	-	-	-
PK-4LFSA	4AK - 20463	-	4	7	4	-	5	-	-	-	-
SG-4VFS	4AK - 20486	4	-	7	5	3	-	1	-	-	-
PK-4VFS	4AK - 20487	4	-	7	5	3	-	1	-	-	-
SG-4WFSA	4AK - 20488	-	7	7	5	-	1	-	-	-	-
PK-4WFSA	4AK - 20489	-	7	7	5	-	1	-	-	-	-
SG-4VFS	4AK - 20490	1	-	4	7	3	-	5	-	-	-
PK-4VFS	4AK - 20490	1	-	4	7	3	-	5	-	-	-
SG-2MM	4AK - 20442	-	6	4	3	4	1	1	(1)	-	-
SG-2BR	4AK - 20516	-	6	4	3	4	1	1	(1)	-	-
SG-2B	4AK - 20389	-	7	4	3	4	1	1	(1)	-	-
PK-2B	4AK - 20445	-	7	4	3	4	1	1	(1)	-	-
SG-2FS	4AK - 20060	-	8	1	1	7	-	2	1	-	-
PK-2FS	4AK - 20455	-	8	1	1	7	-	2	1	-	-
SG-2E	4AK - 10544	-	6	6	4	3	-	1	-	-	-
PK-3MM	4AK - 20442	-	6	4	3	4	1	1	(1)	-	-
SG-3X	4AK - 20468	4	-	3	3	8	1	1	(1)	-	-
PK-3XS	4AK - 20469	4	-	3	3	8	1	1	(1)	-	-
SG-3X	4AK - 10890	4	-	3	3	8	1	1	(1)	-	-
PK-3X	4AK - 10891	4	-	3	3	8	1	1	(1)	-	-
SG-3VBL	4AK - 20470	6	-	2	3	6	1	1	(1)	-	-
PK-3VBL	4AK - 20471	6	-	2	3	6	1	1	(1)	-	-
SG-3VM	4AK - 20474	6	-	2	3	6	1	1	(1)	-	-
PK-3VM	4AK - 20475	6	-	2	3	6	1	1	(1)	-	-
SG-3WBL	4AK - 20472	5	-	3	3	6	1	1	(1)	-	-
PK-3WBL	4AK - 20473	5	-	3	3	6	1	1	(1)	-	-
SG-3WM	4AK - 20474	5	-	3	3	6	1	1	(1)	-	-
PK-3WM	4AK - 20477	5	-	3	3	6	1	1	(1)	-	-
SG-3V	4AK - 20478	8	-	2	3	5	1	1	-	-	-
PK-3VU	4AK - 20479	8	-	2	3	5	1	1	-	-	-
SG-3WU	4AK - 20480	7	-	3	3	5	1	1	-	-	-
PK-3WU	4AK - 20481	7	-	3	3	5	1	1	-	-	-
SG-3VP	4AK - 20482	7	-	1	3	7	1	1	(1)	-	-
PK-3VP	4AK - 20483	7	-	1	3	7	1	1	(1)	-	-
SG-3WP	4AK - 20484	6	-	2	3	7	1	1	(1)	-	-
PK-3WP	4AK - 20485	6	-	2	3	7	1	1	(1)	-	-
SG-3BS	4AK - 20485	7	-	1	2	7	1	1	(1)	-	-
SG-3MM	4AK - 20124	7	-	1	2	7	1	1	(1)	-	-
SG-3EL	4AK - 10545	3	-	3	4	8	-	2	-	-	-
SG-3BR	4AK - 20517	9	-	1	2	5	1	1	(1)	-	-
SG-3B	4AK - 20390	7	-	1	2	8	1	1	-	-	-

## REEL ASSY. TABLE (No. 1)

REEL ASSY. (% STRIP)					REEL ASSY., COMPLETE				REEL STRIPS				USED FOR		REFER ENGRG LAYOUT DATA
PART NO.	1ST DISC	2ND DISC	3RD DISC	4TH DISC	1ST STRIP	2ND STRIP	3RD STRIP	4TH STRIP	CODE NO.	PART NO.	COPPER STAR	COPPER SEGA	CONSOLE SEGA		
4AF-10570	SG-1 (4AG-10093)	SG-2 (4AG-10094)	SG-3 (4AG-10095)		SG-1 (4AK-10090)	SG-2 (4AK-10091)	SG-3 (4AK-10092)		RA-TA6	4AF-10570-1					NO. 73
"	"	"	"		SG-1S (4AK-20056)	SG-2S (4AK-20057)	SG-3S (4AK-20058)		RA-SA6	4AF-10570-2	○				70
4AF-10571	SG-1 (4AG-10093)	SG-2 (4AG-10094)	SG-3C (4AG-10189)		SG-1 (4AK-10090)	SG-2 (4AK-10091)	SG-3C (4AK-10187)		RA-TA5	4AF-10571-1					74
"	"	"	"		SG-1 (4AK-20056)	SG-2S (4AK-20057)	SG-3CS (4AK-20066)		RA-SA5	4AF-10571-3	○				69
4AF-10572	SG-1 (4AG-10093)	SG-2 (4AG-10094)	SG-3L (4AG-10188)		SG-1 (4AK-10090)	SG-2 (4AK-10091)	SG-3L (4AK-10186)		RA-TA9	4AF-10572-1					85
"	"	"	"		SG-1S (4AK-20056)	SG-2S (4AK-20057)	SG-3LS (4AK-20067)		RA-SA9	4AF-10572-2	○				75
4AF-10577	SG-1P (4AG-20264)	SG-2 (4AG-10094)	SG-3 (4AG-10095)		SG-1PS (4AK-20233)	SG-2S (4AK-20057)	SG-3S (4AK-20058)		RA-P7	4AF-10577-2		○			78
4AF-10832	BB-1 (4AG-10715)	BB-2 (4AG-10716)	BB-3 (4AG-10717)		BB-1 (4AK-10712)	BB-2 (4AK-10713)	BB-3 (4AK-10714)		RA-BB4	4AF-10832-1			○		3
4AF-10833	SG-1K (4AG-20384)	SG-2K (4AG-20385)	SG-3K (4AG-20386)		SG-1K (4AK-20381)	SG-2K (4AK-20382)	SG-3K (4AK-20383)		RA-K5	4AF-10833-1			○		7
4AF-10834	MB-1-3JP(4AG-20395)	MB-2-3JP(4AG-20396)	MB-3L-3JP(4AG-20416)		SG-1BL (4AK-20244)	SG-2BL (4AK-20245)	SG-3LBL (4AK-20418)		RA-BL8	4AF-10834-1	○				4, 40
"	"	"	"		SG-1BS (4AK-20153)	SG-2BS (4AK-20154)	SG-3LBS (4AK-20419)		RA-BS8	4AF-10834-2	○				4
"	"	"	"		SG-1MM (4AK-20122)	SG-2MM (4AK-20123)	SG-3LMM (4AK-20417)		RA-M8	4AF-10834-3	○				5, 41
"	"	"	"		PK-1MM (4AK-20441)	PK-2MM (4AK-20442)	PK-3LMM (4AK-20443)		RAP-M8	4AF-10834-4	○				35, 46
"	"	"	"		PK-1BL (4AK-20438)	PK-2BL (4AK-20439)	PK-3LBL (4AK-20440)		RAP-BL8	4AF-10834-5	○				34, 45
4AF-10835	MB-1-3JP(4AG-20395)	MB-2-3JP (4AG-20396)	MB-3C-2JP (4AG-20366)		SG-1BL (4AK-20244)	SG-2BL (4AK-20245)	SG-3CBL (4AK-20294)		RA-BL4	4AF-10835-1	○				1
"	"	"	"		SG-1MM (4AK-20122)	SG-2MM (4AK-20123)	SG-3CMM (4AK-20235)		RA-M4	4AF-10835-2	○				2
"	"	"	"		SG-1BR (4AK-20515)	SG-2BR (4AK-20516)	SG-3BR (4AK-20517)		RA-BR4	4AF-10835-3	○				65
"	"	"	"		SG-1BS (4AK-20153)	SG-2BS (4AK-20154)	SG-3CBS (4AK-20236)		RA-BS4	4AF-10835-4	○				80
4AF-10836	SG-1B (4AG-20372)	SG-2B (4AG-20425)	SG-3CB (4AG-20420)		SG-1B (4AK-20373)	SG-2B (4AK-20389)	SG-3CB (4AK-20421)		RA-U4	4AF-10836-1		○			8
4AF-10837	SG-1B (4AG-20372)	SG-2B (4AG-20425)	SG-3B (4AG-20426)		SG-1B (4AK-20373)	SG-2B (4AK-20389)	SG-3B (4AK-20390)		RA-U5	4AF-10837-1			○		6, 77
4AF-10838	SG-1B (4AG-20372)	SG-2B (4AG-20425)	3LB (4AG-20427)		SG-1B (4AK-20373)	SG-2B (4AK-20389)	SG-3LB (4AK-20428)		RA-U8	4AF-10838-1			○		9, 43
"	"	"	"		PK-1B (4AK-20444)	PK-2B (4AK-20445)	PK-3LB (4AK-20446)		RAP-U8	4AF-10838-2		○			33, 48
4AF-10863	SG-1-3JP(4AG-10700)	SG-2-3JP (4AG-10701)	3W (4AG-10844)		SG-1 (4AK-10090)	SG-2 (4AK-10091)	SG-3W (4AK-10848)		RA-T8	4AF-10863-1		○			29
"	"	"	"		SG-1S (4AK-20056)	SG-2S (4AK-20057)	SG-3WS (4AK-20429)		RA-S8	4AF-10863-2	○				13, 39
"	"	"	"		PK-1S (4AK-20430)	PK-2S (4AK-20431)	PK-3WS (4AK-20432)		RAP-S8	4AF-10863-3	○				31, 44
"	"	"	"		PK-1 (4AK-10849)	PK-2 (4AK-10850)	PK-3W (4AK-10851)		RAP-T8	4AF-10863-4		○			38
4AF-10864	SG-1P (4AG-20264)	SG-2-3JP (4AG-10701)	SG-3V (4AG-10845)		SG-1PS (4AK-20233)	SG-2S (4AK-20057)	SG-3VS (4AK-20449)		RA-P8	4AF-10864-1		○			10, 42
"	"	"	"		PK-1PS (4AK-20450)	PK-2S (4AK-20431)	PK-3VS (4AK-20451)		RAP-P8	4AF-10864-2	○				32, 47
4AF-10865	FR-1 (4AG-10098)	FR-2 (4AG-10099)	FR-3 (4AG-10100)	FR-4L (4AG-10846)	PK-1FS (4AK-20454)	PK-2FS (4AK-20455)	PK-3FS (4AK-20456)	PK-4LFS (4AK-20457)	RAP-FL8	4AF-10865-1		○			36
"	"	"	"	"	SG-1FS (4AK-20059)	SG-2FS (4AK-20060)	SG-3FS (4AK-20061)	SG-4LFS (4AK-20453)	RA-FL8	4AF-10865-2		○			11
4AF-10866	FR-1A (4AG-10331)	FR-2 (4AG-10099)	FR-3 (4AG-10100)	FR-4LA (4AG-10847)	SG-1FSA (4AK-20126)	SG-2FS (4AK-20060)	SG-3FS (4AK-20061)	SG-4LFSA(4AK-20461)	RA-FT8	4AF-10866-1		○			12
"	"	"	"	"	PK-1FSA (4AK-20462)	PK-2FS (4AK-20455)	PK-3FS (4AK-20456)	PK-4LFSA(4AK-20463)	RAP-FT8	4AF-10866-2		○			37
4AF-10900	SG-1-3JP(4AG-10700)	SG-2-3JP (4AG-10701)	3L-3JP (4AG-10892)		SG-1 (4AK-10090)	SG-2 (4AK-10091)	SG-3L (4AK-10186)		RA-T7	4AF-10900-1			○		28
"	"	"	"		SG-1S (4AK-20056)	SG-2S (4AK-20057)	SG-3LS (4AK-20067)		RA-S7	4AF-10900-2	○				14
"	"	"	"		PK-1 (4AK-10849)	PK-2 (4AK-10850)	PK-3L (4AK-10889)		RAP-T7	4AF-10900-3			○		61
"	"	"	"		PK-1S (4AK-20430)	PK-2S (4AK-20431)	PK-3LS (4AK-20467)		RAP-S7	4AF-10900-4	○				49
4AF-10901	SG-1-3JP(4AG-10700)	SG-2-3JP (4AG-10701)	3X (4AG-10893)		SG-1S (4AK-20056)	SG-2S (4AK-20057)	SG-3XS (4AK-20468)		RA-S9	4AF-10901-1	○				15
"	"	"	"		SG-1 (4AK-10090)	SG-2 (4AK-10091)	SG-3X (4AK-10890)		RA-T9	4AF-10901-2		○			30
"	"	"	"		PK-1 (4AK-10849)	PK-2 (4AK-10850)	PK-3X (4AK-10891)		RAP-T9	4AF-10901-3		○			62
"	"	"	"		PK-1S (4AK-20430)	PK-2S (4AK-20431)	PK-3XS (4AK-20469)		RAP-S9	4AF-10901-4	○				50

## REEL ASSY. TABLE (No. 2)

PART. NO.	REEL ASSY. (% STRIP)				REEL STRIPS				CODE. NO.	PART. NO.	USED FOR	REFER ENGRG. LAYOUT DATA
	1ST DISC	2ND DISC	3RD DISC	4TH DISC	1ST STRIP	2ND STRIP	3RD STRIP	4TH STRIP				
4AF-10902	MB-1-3JP(4AG-20395)	MB-2-3JP(4AG-20396)	MB-3V (4AG-20494)		SG-1BL (4AK-20244)	SG-2BL (4AK-20245)	SG-3VBL (4AK-20470)		RA-BL7	4AF-10902-1	COPPER STAR	NO. 16
"	"	"	"		SG-1MM (4AK-20122)	SG-2MM (4AK-20123)	SG-3VM (4AK-20474)		RA-M7	4AF-10902-2	COPPER SEGA	18
"	"	"	"		PK-1MM (4AK-20441)	PK-2MM (4AK-20442)	PK-3VM (4AK-20475)		RAP-M7	4AF-10902-3	CONSOLE SEGA	53
"	"	"	"		PK-1BL (4AK-20438)	PK-2BL (4AK-20439)	PK-3VBL (4AK-20471)		RAP-BL7	4AF-10902-4	BLUE BELL	51
4AF-10903	MB-2-3JP(4AG-20395)	MB-2-3JP(4AG-20396)	MB-3W (4AG-20495)		SG-1BL (4AK-20244)	SG-2BL (4AK-20245)	SG-3WBL(4AK-20472)		RA-BL9	4AF-10903-1	PAYBAK	17
"	"	"	"		SG-1MM (4AK-20122)	SG-2MM (4AK-20123)	SG-3WM (4AK-20476)		RA-M9	4AF-10903-2	DIA . 4 STAR	19
"	"	"	"		PK-1MM (4AK-20441)	PK-2MM (4AK-20442)	PK-3WM (4AK-20477)		RAP-M9	4AF-10903-3	PROGRESSIVE	54
"	"	"	"		PK-1BL (4AK-20438)	PK-2BL (4AK-20439)	PK-3WBL (4AK-20473)		RAP-BL9	4AF-10903-4	MAD MONEY	52
4AF-10904	SG-1B (4AG-20372)	SG-2B (4AG-20425)	3VU (4AG-20496)		SG-1B (4AK-20373)	SG-2B (4AK-20389)	SG-3VU (4AK-20478)		RA-U7	4AF-10904-1	BONANZA	20
"	"	"	"		PK-1B (4AK-20444)	PK-2B (4AK-20445)	PK-3VU (4AK-20479)		RAP-U7	4AF-10904-2	DIA . 3 STAR	63
4AF-10905	SG-1B (4AG-20372)	SG-2B (4AG-20425)	3WU (4AG-20497)		SG-1B (4AK-20373)	SG-2B (4AK-20389)	SG-3WU (4AK-20480)		RA-U9	4AF-10905-1		21
"	"	"	"		PK-1B (4AK-20444)	PK-2B (4AK-20445)	PK-3WU (4AK-20481)		RAP-U9	4AF-10905-2		64
4AF-10906	SG-1P (4AG-20264)	SG-2-3JP(4AG-10701)	3VP (4AG-10894)		SG-1PS (4AK-20233)	SG-2S (4AK-20057)	SG-3VP (4AK-20482)		RA-P7	4AF-10906-1		22
"	"	"	"		PK-1PS (4AK-20450)	PK-2S (4AK-20431)	PK-3VP (4AK-20483)		RAP-P7	4AF-10906-2		55
4AF-10907	SG-1P (4AG-20264)	SG-2-3JP(4AG-10701)	3WP (4AG-10895)		SG-1PS (4AK-20233)	SG-2S (4AK-20057)	SG-3WP (4AK-20484)		RA-P9	4AF-10907-1		23
"	"	"	"		PK-1PS (4AK-20450)	PK-2S (4AK-20431)	PK-3WP (4AK-20485)		RAP-P9	4AF-10907-2		56
4AF-10908	FR-1 (4AG-10098)	FR-2 (4AG-10099)	FR-3 (4AG-10100)	FR-4V (4AG-10896)	SG-1FS (4AK-20059)	SG-2FS (4AK-20060)	SG-3FS (4AK-20061)	SG-4VFS (4AK-20486)	RA-FL7	4AF-10908-1		24
"	"	"	"	"	PK-1FS (4AK-20454)	PK-2FS (4AK-20455)	PK-3FS (4AK-20456)	PK-4VFS (4AK-20487)	RAP-FL7	4AF-10908-2		57
4AF-10909	FR-1 (4AG-10098)	FR-2 (4AG-10099)	FR-3 (4AG-10100)	FR-4W (4AG-10897)	SG-1FS (4AK-20059)	SG-2FS (4AK-20060)	SG-3FS (4AK-20061)	SG-4WFS(4AK-20488)	RA-FL9	4AF-10909-1		25
"	"	"	"	"	PK-1FS (4AK-20454)	PK-2FS (4AK-20455)	PK-3FS (4AK-20456)	PK-4WFS (4AK-20489)	RAP-FL9	4AF-10909-2		58
4AF-10910	FR-1A (4AG-10331)	FR-2 (4AG-10099)	FR-3 (4AG-10100)	FR-4VA (4AG-10898)	SG-1FSA (4AK-20126)	SG-2FS (4AK-20060)	SG-3FS (4AK-20061)	SG-4VFSA (4AK-20490)	RA-FT7	4AF-10910-1		26
"	"	"	"	"	PK-1FSA (4AK-20462)	PK-2FS (4AK-20455)	PK-3FS (4AK-20456)	PK-4VFSA (4AK-20491)	RAP-FT7	4AF-10910-2		59
4AF-10911	FR-1A (4AG-10331)	FR-2 (4AG-10099)	FR-3 (4AG-10100)	FR-4WA (4AG-10899)	SG-1FSA (4AK-20126)	SG-2FS (4AK-20060)	SG-3FS (4AK-20061)	SG-4WFSA (4AK-20492)	RA-FT9	4AF-10911-1		27
"	"	"	"	"	PK-1FSA (4AK-20462)	PK-2FS (4AK-20455)	PK-3FS (4AK-20456)	PK-4WFSA(4AK-20493)	RAP-FT9	4AF-10911-2		60
4AF-10917	SG-1 (4AG-10093)	SG-2Y (4AG-20525)	SG-3Y (4AG-20526)		SG-1S (4AK-20056)	SG-2S (4AK-20057)	SG-3S (4AK-20058)		RA-SY2	4AF-10917-1		66
4AF-10925	SG-1CK (4AG-20423)	SG-2K (4AG-20385)	SG-3K (4AG-20386)		SG-1CK (4AK-20424)	SG-2K (4AK-20382)	SG-3K (4AK-20383)		RA-K4	4AF-10925-1		67
4AF-10938	FR-1 (4AG-10098)	FR-2 (4AG-10099)	FR-3 (4AG-10100)	FR-4 (4AG-10101)	SG-1FS (4AK-20059)	SG-2FS (4AK-20060)	SG-3FS (4AK-20061)	SG-4FS (4AK-20062)	RA-FL5	4AF-10938-1		71
4AF-10939	FR-1A (4AG-10331)	FR-2 (4AG-10099)	FR-3 (4AG-10100)	FR-4A (4AG-10334)	SG-1FSA (4AK-20126)	SG-2FS (4AK-20060)	SG-3FS (4AK-20061)	SG-4FSA (4AK-20127)	RA-FT5	4AF-10939-1		72
4AF-10940	SG-1-3JP(4AG-10700)	SG-2-3JP(4AG-10701)	SG-3C-2JP (4AG-10674)		SG-1 (4AK-10090)	SG-2 (4AK-10091)	SG-3C (4AK-10187)		RA-T3	4AF-10940-1		76
"	"	"	"		SG-1S (4AK-20056)	SG-2S (4AK-20057)	SG-3CS (4AK-20066)		RA-S3	4AF-10940-2		68
4AF-10941	SG-1P (4AG-20264)	SG-2 (4AG-10094)	SG-3C (4AG-10189)		SG-1PS (4AK-20233)	SG-2S (4AK-20057)	SG-3CS (4AK-20066)		RA-P5	4AF-10941-1		79
4AF-10942	MM-1 (4AG-20119)	MM-2 (4AG-20120)	MM-3 (4AG-20121)		SG-1BS (4AK-20153)	SG-2BS (4AK-20154)	SG-3BS (4AK-20155)		RA-BSA6	4AF-10942-1		81
"	"	"	"		SG-1MM (4AK-20122)	SG-2MM (4AK-20123)	SG-3MM (4AK-20124)		RA-MA6	4AF-10942-1		83
4AF-10943	MM-1 (4AG-20119)	MM-2 (4AG-20120)	MM-3C (4AG-20237)		SG-1BS (4AK-20153)	SG-2BS (4AK-20154)	SG-3CBS (4AK-20236)		RA-BSA5	4AF-10943-1		82
"	"	"	"		SG-1MM (4AK-20122)	SG-2MM (4AK-20123)	SG-3CMM (4AK-20235)		RA-MA5	4AF-10943-2		84
4AF-10944	SG-1P (4AG-20264)	SG-2-3JP(4AG-10701)	SG-3C-2JP (4AG-10674)		SG-1PS (4AK-20233)	SG-2S (4AK-20057)	SG-3CS (4AK-20066)		RA-PH2	4AF-10944-1		86
4AF-10945	SG-1E (4AG-10546)	SG-2E (4AG-10547)	SG-3E (4AG-10548)		SG-1E (4AK-10588)	SG-2E (4AK-10544)	SG-3E (4AK-10590)		RA-E1	4AF-10945-1		87. 89
4AF-10946	SG-1EL (4AG-10605)	SG-2E (4AG-10547)	SG-3EL (4AG-10606)		SG-1EL (4AK-10543)	SG-2E (4AK-10544)	SG-3EL (4AK-10545)		RA-E2	4AF-10946-1		88. 90

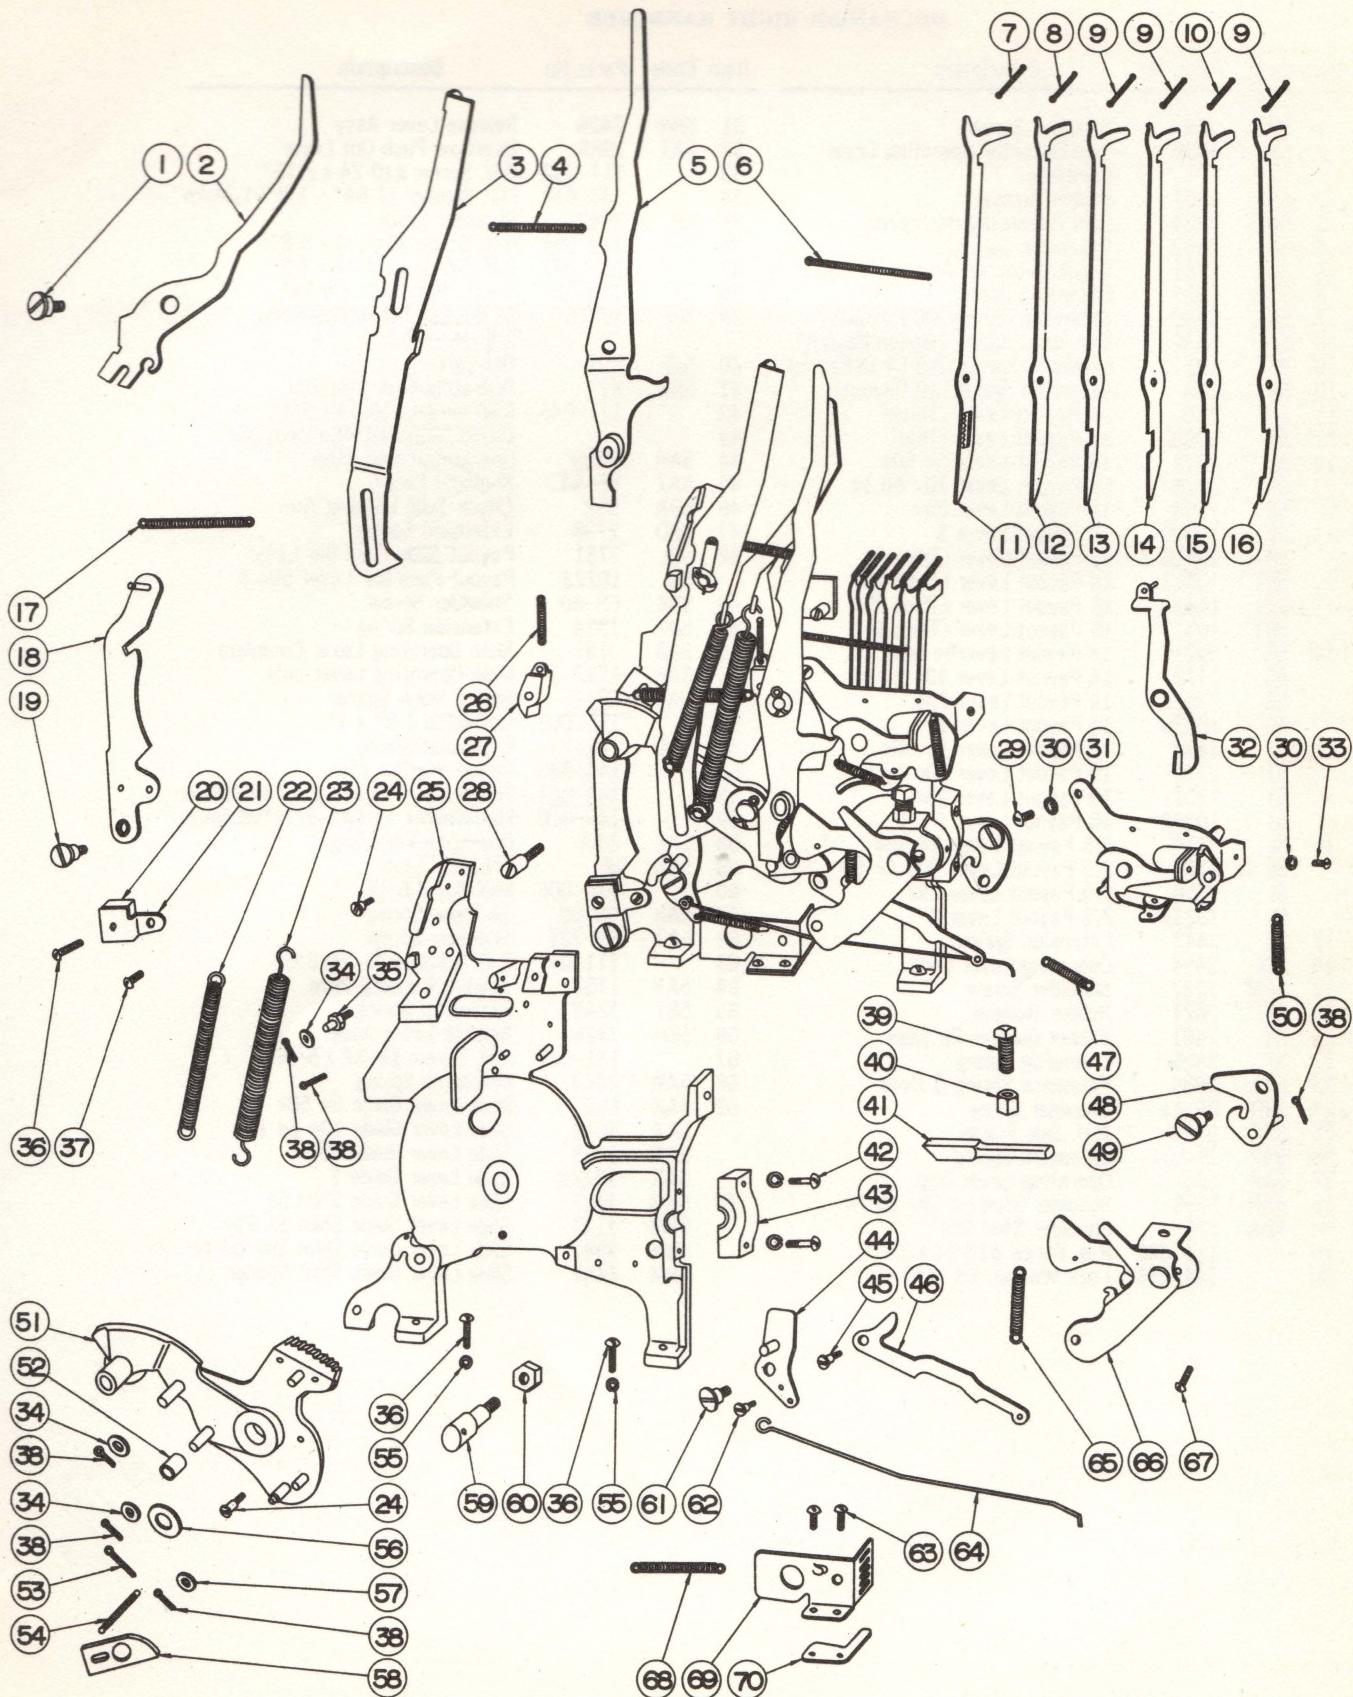

SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE


SECTION 5 PAGE 1

# COIN MACHINE 5

## PARTS LIST

### MECHANISM RIGHT HAND SIDE

Item Code	Parts No.	Description	Item Code	Parts No.	Description
1 5BP	367	Shoulder Screw	31 5BH	7426	Release Lever Assy
2 5S	2899	Coin Detector Operating Lever Complete	32 5AT	1985	Overflow Push-Out Lever
5S	7857	Rubber Bumper	33	111-052	R.H. Screw #10-24 x 7/16"
3 5N	2624	Coin Advancing Bar Lever	34	144-014	Flat Washer 17/64" - 1/2" x 1.2m/m
4 5U	2862	Extension Spring	35 5R	3062	Shoulder Stud
5 5T	2761	Check Detector Arm	36	111-054	R.H. Screw #10-24 x 5/8"
6 5AS	1887	Extension Spring	37	111-042	R.H. Screw #10-24 x 3/8"
7 5B	7469	Extension Spring (20 Payout)	38	155-007	Cotter Pin 3/32" x 9/16"
8 5D	8142	Extension Spring (Mellon Payout)	39 5BE	10316	Sq.Hd. Set Screw Cup Point 3/8-16 x 1"
9 5F	102	Extension Spring (2/5-14-18 Payout)	40 5BF	591	Hex Nut
10 5K	104	Extension Spring (10 Payout)	41 5BG	82	Operating Fork Stop Pin
11 5A	580	20 Payout Lever (Thick)	42	111-045	R.H. Screw #10-24 x 3/4"
12 5C	9080	20 Payout Lever (Thin)	43		Clamp (Supplied with Item 25)
13 5E	3422	18 Payout Lever 5¢ 50¢	44 5AH	2759	Operating Lever Stop
	2178	18 Payout Lever 10¢ 6d 1¢	45 5AZ	DE-94	Shoulder Screw
	7253	18 Payout Lever 25¢	46 5BA	552	Check Tube Loading Arm
	10236	18 Payout Lever \$	47 5BD	2738	Extension Spring
	5BT	10410	48 5BL	2751	Payout Slide Push Bar Lever
	10411	18 Payout Lever (Thin) 5¢	5BL	10223	Payout Push Bar Lever 50¢ \$
	10412	18 Payout Lever (Thin) 10¢	49 5BK	CS-60	Shoulder Screw
	10413	18 Payout Lever (Thin) 25¢	50 5BC	1884	Extension Spring
14 5G	3421	14 Payout Lever 5¢ 50¢	51 5AB	3297	Main Operating Lever Complete
	2177	14 Payout Lever 10¢ 1¢ 6	5AB	3297-1	Main Operating Lever only
	7252	14 Payout Lever 25¢	52 5AL	2217	Spring Hook Spacer
	10235	14 Payout Lever \$	53	155-002	CotterPin 1/8" x 1"
15 5J	3420	10 Payout Lever 5¢ 50¢	54 5AD	2738	Extension Spring
	2176	10 Payout Lever 10¢ 1¢ 6d	55	144-035	Spring Washer #10
	7251	10 Payout Lever 25¢	56	144-001	Flat Washer 17/32"-7/8" x 0.23m/m
	10232	10 Payout Lever \$	57	144-010	Flat Washer 21/64"-9/16" x 0.5m/m
16 5L	3419	2/5 Payout Lever 5¢ 50¢	58 5AE	2805	Operating Fork Dog
	2179	2/5 Payout Lever 10¢ 1¢ 6d	59 5AG	80	Shoulder Stud
	7250	2/5 Payout Lever 25¢	60	133-006	Hex Nut 3/8-16
	10231	2/5 Payout Lever \$	61 5AK	CS-60	Shoulder Screw
17 5Z	3442	Extension Spring	62 5AJ	PV-728	Shoulder Screw
18 5W	3454	Operating Lever Lock	63	111-042	R.H. Screw #10-24x3/8"
19 5AM	2237	Shoulder Screw	64 5AY	1162	Jackpot Loading Wire
20 5X	2621	Rubber Bumper	65 5BJ	1842	Extension Spring
21 5Y	2601	Rubber Bumper Retainer	66 5BH	7426	Release Lever Assy.
22 5P	8525	Extension Spring	67	111-027	R.H. Screw #8-32 x 5/16"
23 5AA	2896	Extension Spring & Hook	68 5AW	2863	Extension Spring
24 3BD	DE-11	Shoulder Screw	69 5AX	650	Slide Lever Guide 5¢ 50¢
25 5AF	9122	R.H. Side Frame	5AX	3649	Slide Lever Guide 10¢ 6d 1¢
26 5AR	JR-597	Extension Spring	5AX	3429	Slide Lever Guide 25¢
27 5AP	485	Operating Lever Dog	5AX	10229	Slide Lever Guide \$
28 5AN	1798	Shoulder Stud 5¢ 10¢ 6d 1¢	70 5BM	3417	Slide Lever Guide Shim 5¢
	121	Shoulder Stud 25¢	5BM	4147	Slide Lever Guide Shim 5¢ 25¢
29	111-042	R.H. Screw #10-24 x 3/8"	5BM	7392	Slide Lever Guide Shim 10¢ 6d 1¢
30	144-045	Lock Washer Int. #10	5BM	7457	Slide Lever Guide Shim Spacer

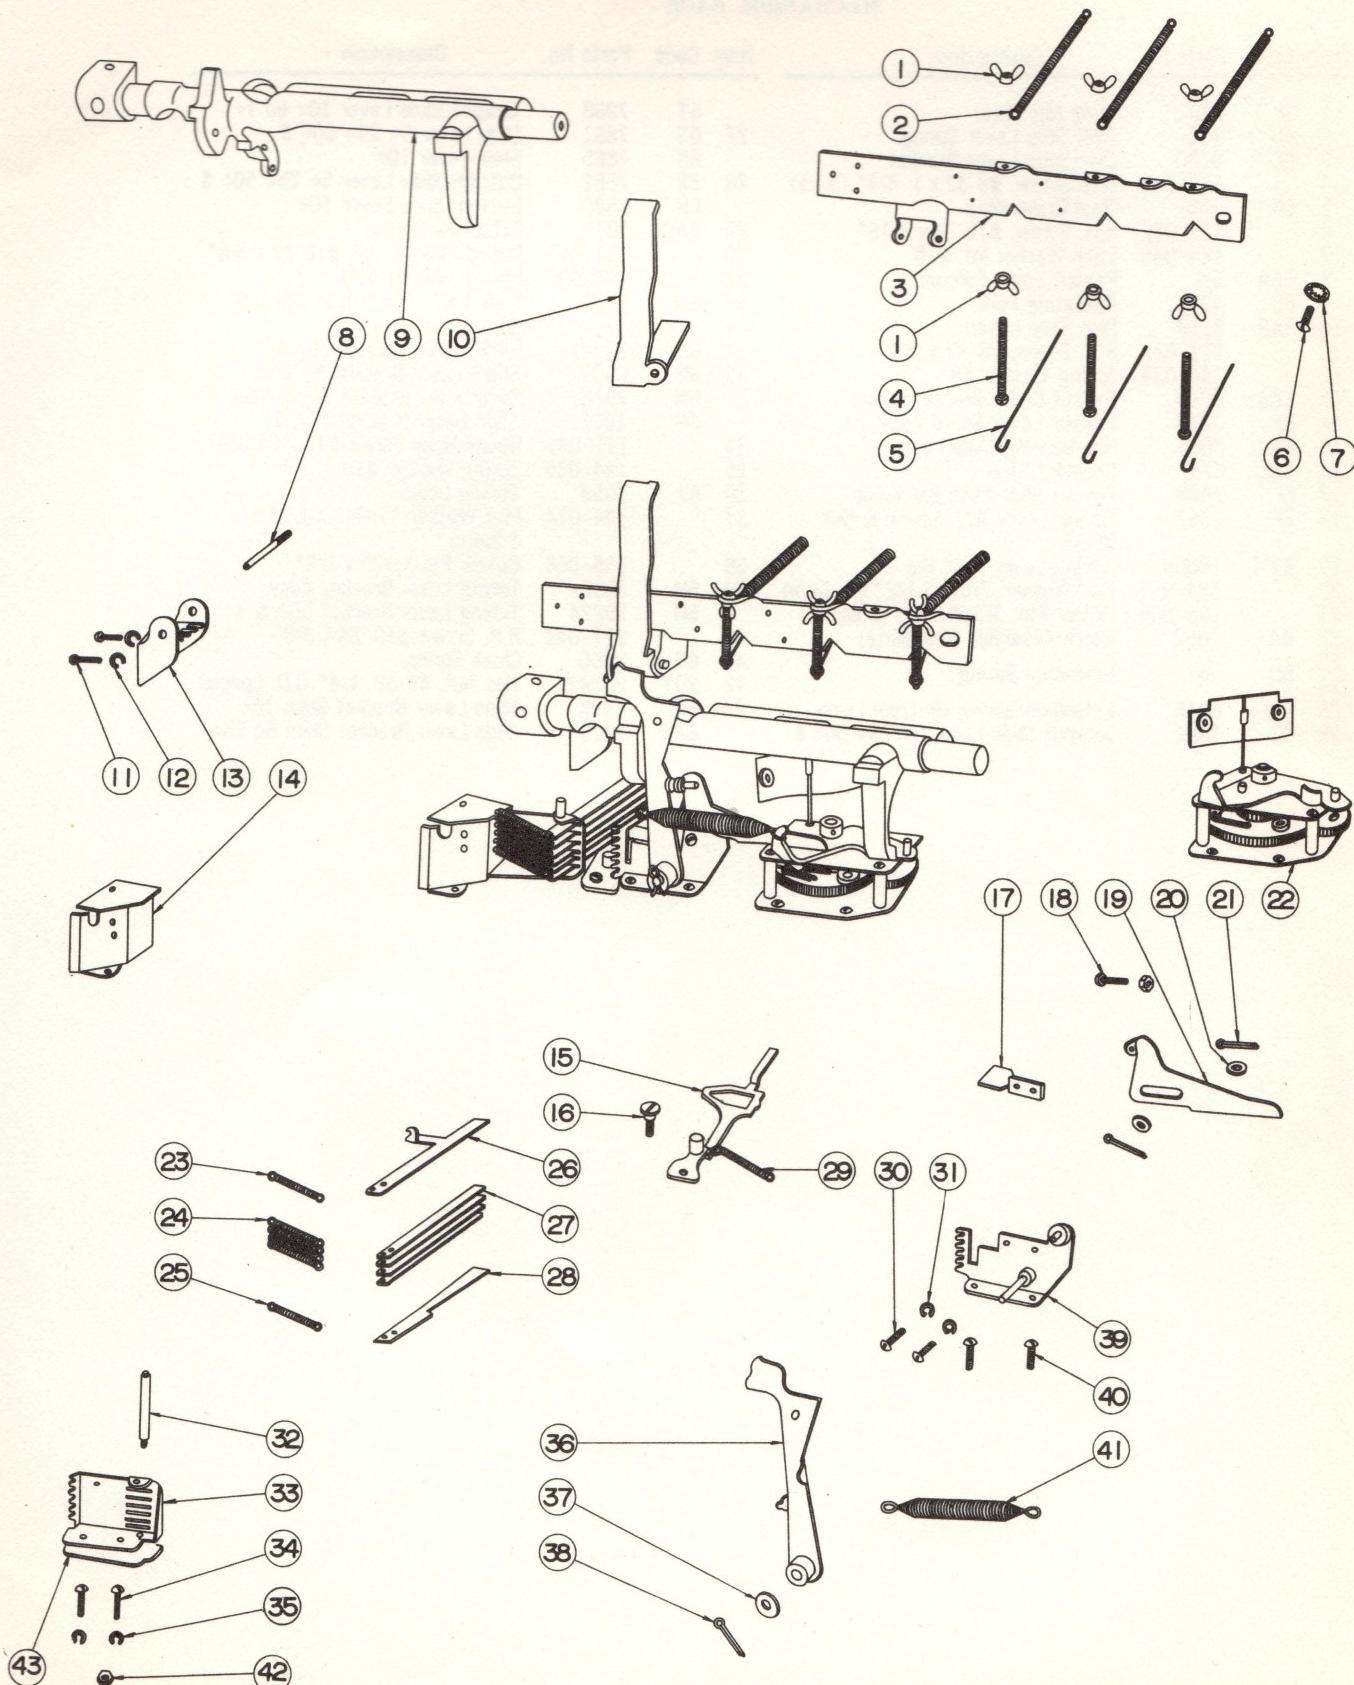


SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

PARTS LIST

## MECHANISM BACK

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	6E	290	Wing Nut (6ea)	6T	7888		Jackpot Slide Lever 10¢ 6d 1¢
2	6D	850	Reel Stop Lever Spring	27	6S	7881	Slide Lever 5¢ 25¢ 50¢ \$
3	6C	9120	Disc Stop Lever Bracket		6S	7885	Slide Lever 10¢
4		111-031	R.H. Screw, #8-32 x 1 3/4" (3 ea)	28	6R	7882	Bottom Slide Lever 5¢ 25¢ 50¢ \$
5	6X	155	Reel Brake Wire		6R	7886	Bottom Slide Lever 10¢
6		111-052	R.H. Screw, #10-24 x 7/16"	29	6AC	1079	Extension Spring
7		144-045	Lock Washer Int. #10	30		111-055	Round Head Screw #10-32 x 3/8"
8	6AA	53	Payout Lever Fulcrum	31		144-035	Spring Washer #10
9	6B	4231	Operating Fork	32	6M	7880	Slide Lever Fulcrum 5¢ 10¢ 25¢
10	3AR	9118	Disc Stop Lever		6M	10221	6d 1¢
11		111-037	R.H. Screw, #8-32 x 3/8"	33	6N	8501	Slide Lever Fulcrum 50¢ \$
12		144-034	Spring Washer #8		6N	7878	Slide Lever Bracket 5¢ 25¢
13	6AA	9079	Payout Lever Bracket Lower		6N	10222	Slide Lever Bracket 10¢ 1¢ 6d
14	6P	3758	Payout Lever Guard Assy.	34		111-042	Slide Lever Bracket 50¢ \$
15	6AC	3009	Non-Beating Slide Lever		35	144-035	Round Head Screw #10-24 x 3/8"
16	6AC	674	Shoulder Stud	36	6J	7659	Spring Washer #10
17	6L	7649	Payout Slide Push Bar Guide	37		144-014	Timing Lever
18	6K	7657	Payout Lever Adj. Screw & Nut, #8-32		38	155-006	Flat Washer 17/64" x 1/2" x 1.2m/m
19	6J-1	10009	Timing Lever Push Bar	39	6H	7658	Cotter Pin 3/32" x 1/2"
20		144-013	Flat Washer, 7/32" x 1/2" x 1.2m/m		6H	10224	Timing Lever Bracket Assy.
21		155-006	Cotter Pin, 3/32" x 1/2 (2 ea)	40		111-042	Timing Lever Bracket 50¢ & \$
22	9A	7662	Clock Assembly (Complete)	41	6G	2860	R.H. Screw #10-24 x 3/8"
23	6U	107	Extension Spring	42	2DY	20247	Clock Spring
24				43	6AD	7608	Hex Nut, #8-32, 1/4" O.D. Special
25	6W	6146	Extension Spring (Bottom Lever)		6AD	3418	Slide Lever Bracket Shim 10¢
26	6T	7884	Jackpot Slide Lever 5¢ 25¢ 50¢ \$				Slide Lever Bracket Shim 5¢ 25¢

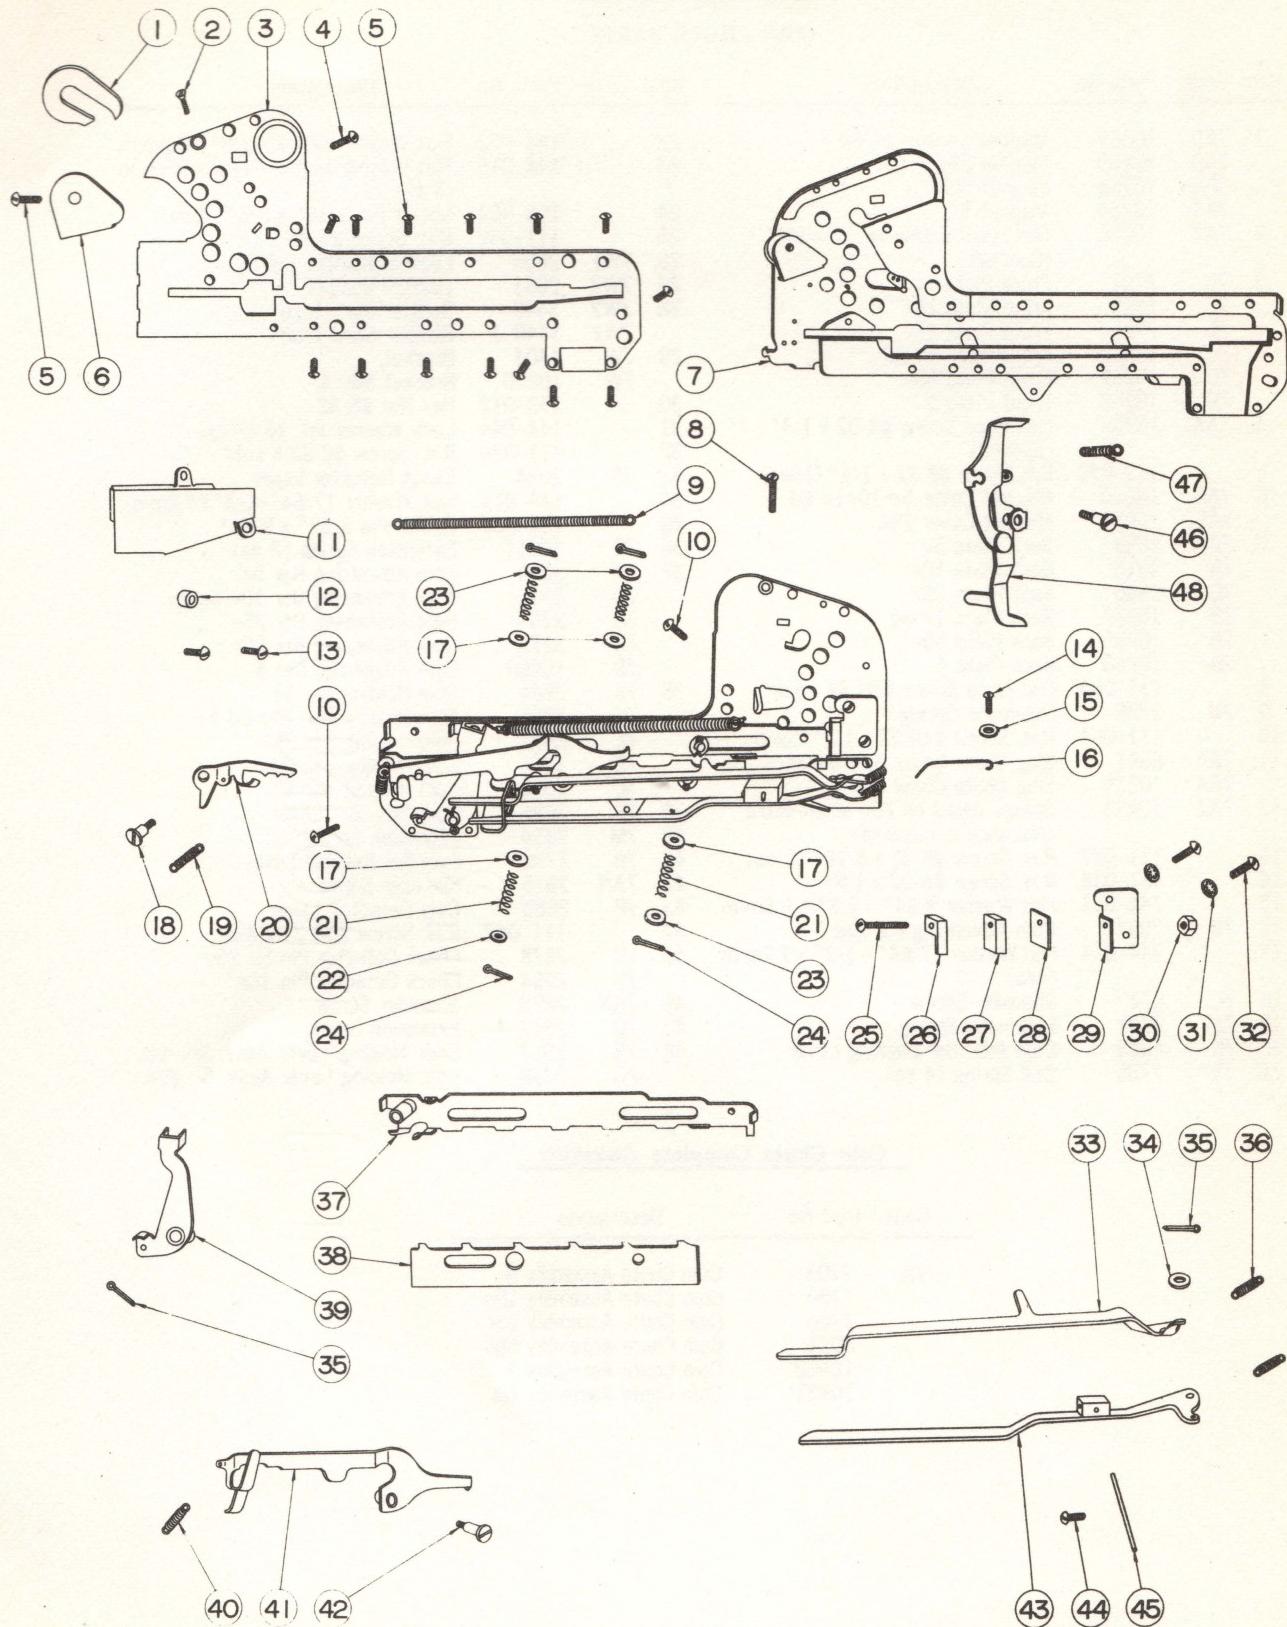



P A R T S   L I S T

## COIN CHUTE PARTS

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	7AG	10668	Magnet 5¢ 10¢ 1¢ 6d	22	144-022	Flat Washer 17/64"-3/8" x 0.6m/m	
	7AG	10669	Magnet 25¢	23	144-015	Flat Washer 17/64"-1/2" x 0.5m/m	
	7AG	10253	Magnet 50¢		(3 ea)		
	7AG	10254	Magnet \$	24	155-004	Cotter Pin 1/16" x 5/8" (4 ea)	
2	7AX	10296	Flat Head Screw #8-32 x 1/4" (Special)	25	111-032	R.H. Screw #8-32 x 1/2"	
3	7C	7702	Front Plate 5¢	26	7W1	Leather Bumper Clamp	
	7C	7699	Front Plate 10¢	27	7W3	Leather Bumper	
	7C	7705	Front Plate 25¢	28	7W2	Bumper Shim 1/16"	
	7C	10343	Front Plate 1¢ 6d	29	7W	Bumper Shim 1/32"	
	7C	10257	Front Plate 50¢	30	7W	Bracket	
	7C	10258	Front Plate \$	31	133-012	Bracket 50¢ \$	
4	7AX	10296	Flat Head Screw #8-32 x 1/4" (Special)	32	144-044	Hex Nut #8-32	
				33	111-026	Lock Washer Int. #8 (2 ea)	
5		111-026	R.H.Screw #8-32 x 1/4" (15ea)	34	144-014	R.H. Screw #8-32 x 1/4"	
6	7AF	10670	Magnet Cover 5¢ 10¢ 1¢ 6d	35	155-007	Check Detector Lever	
	7AF	10671	Magnet Cover 25¢	36	7S	Flat Washer 17/64"-1/2" x 1.2m/m	
7	7B	2699	Back Plate 5¢	37	7T	Cotter Pin 3/32" x 9/16"	
	7B	2915	Back Plate 10¢	38	10111	Extension Spring (2 ea)	
	7B	2906	Back Plate 25¢	39	7D	Coin Advancing Bar 5¢	
	7B	10338	Back Plate 1¢ 6d	40	3094	Coin Advancing Bar 10¢ 6d 1¢	
	7B	10255	Back Plate 50¢	41	2916	Coin Advancing Bar 25¢	
	7B	10256	Back Plate \$	42	2764	Coin Advancing Bar 50¢	
8		111-090	Flat Head Screw #10-32 x 1/2"	43	7D	Coin Advancing Bar \$	
9	7N	2728	Extension Spring	44	10260	Coin Holding Bar 5¢	
10		111-064	R.H. Screw #10-32 x 1/2" (2ea)	45	7E	Coin Holding Bar 10¢ 6d 1¢	
11	7AA	8341	Slug Chute Cover 5¢ 10¢ 25¢	46	2955	Coin Holding Bar 25¢	
	7AA	10245	Slug Chute Cover 50¢ \$	47	2631	Coin Holding Bar 50¢	
12	7AZ	10433	Spacer (Used on 25¢ when extra clearance is required)	48	7E	Coin Holding Bar \$	
				49	3118	Coin Adv. Bar Lever	
13		111-027	R.H. Screw #8-32 x 5/16" (2 ea)	50	7F	Extension Spring	
14		111-018	R.H. Screw #6-32 x 1/8"	51	7H	Coin Bar Release Lever	
15		144-023	Flat Washer 9/64" - 3/8" x 0.6m/m	52	7AN	Shoulder Screw	
16	7U	2997	Coin Advancing Bar Clip	53	2875	Coin Detector Lever	
17		144-014	Flat Washer 17/64" - 1/2" x 1.2m/m (4ea)	54	7P	R.H. Screw #10-24 x 3/8"	
18	7L	674	Shoulder Screw	55	111-042	Check Detector Pin 5¢ 25¢	
19	7J	2731	Extension Spring	56	7R	Check Detector Pin 10¢	
20	7K	4283	Coin Adv. Bar Locking Lever	57	2878	Shoulder Screw	
21	7X	2735	Coil Spring (4 ea)	58	7G	Extension Spring	
				59	2917	Coin Holding Lever Assy. 10¢ 6d	
				60	2758	Coin Holding Lever Assy. 5¢ 25¢	

Coin Chute Complete Assembly

Code	Part No.	Description
7A	7703	Coin Chute Assembly 5¢
	7700	Coin Chute Assembly 10¢
	7706	Coin Chute Assembly 25¢
	8021	Coin Chute Assembly 50¢
	10463	Coin Chute Assembly \$
	10431	Coin Chute Assembly 6d

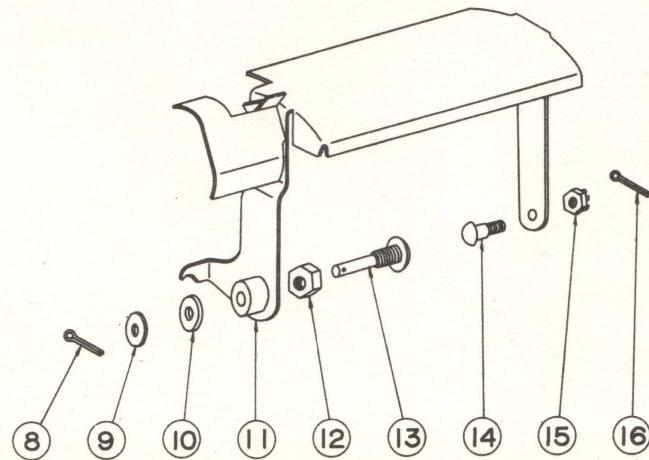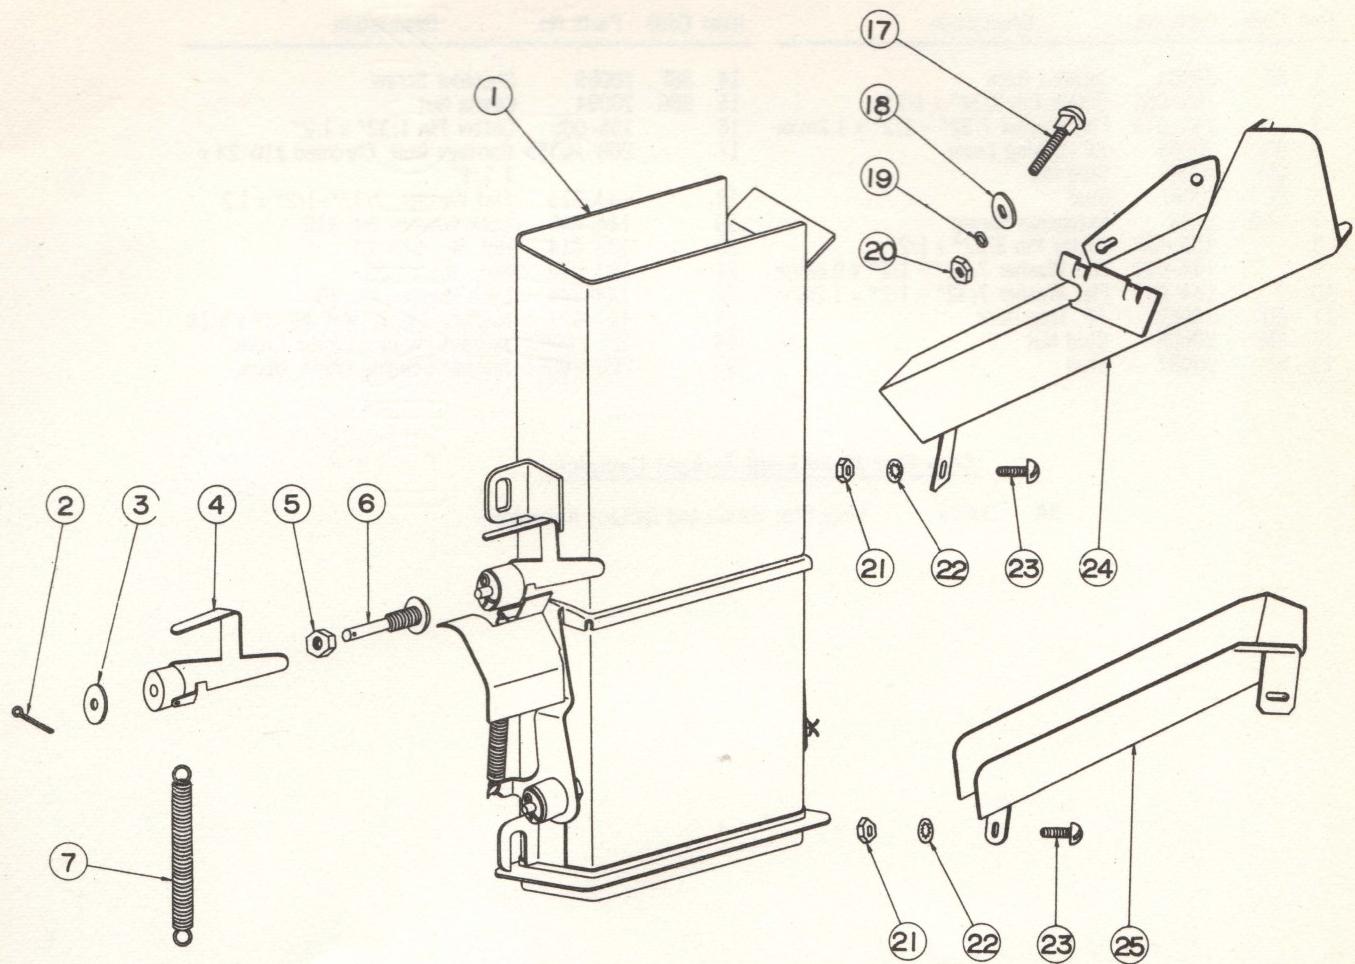

SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

SECTION 8 PAGE 1


## PARTS LIST

### SEGA STAR HAND LOAD JACKPOT PARTS

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	8B	20084	Jackpot Base	14	8BF	20089	Shoulder Screw
2		155-006	Cotter Pin 3/32" x 1/2"	15	8BG	20094	Castle Nut
3		144-013	Flat Washer 7/32" - 1/2" x 1.2m/m	16		155-005	Cotter Pin 1/32" x 1/2"
4	8G	20086	J.P.Locking Lever	17		20K-10355	Carriage Bolt, Chromed #10-24 x 1 1/4"
5	8M	20088	Stud Nut	18		144-013	Flat Washer, 7/32"-1/2" x 1.2
6	8L	20087	Stud	19		144-045	Lock Washer, Int. #10
7	5AD	2738	Extension Spring	20		133-014	Hex. Nut #10-24
8		155-006	Cotter Pin 3/32" x 1/2"	21		133-012	Hex. Nut #8-32
9		144-011	Flat Washer 7/32" - 1/2" x 0.6m/m	22		144-044	Lock Washer, Int. #8
10		144-013	Flat Washer 7/32" - 1/2" x 1.2m/m	23		111-027	Machine Screw, R.H. #8-32 x 5/16
11	8U	20085	J.P. Trap Door	24		2EJ-20093	Jackpot Loading Chute, Lower
12	8M	20088	Stud Nut	25		2EG-20081	Jackpot Loading Chute, Upper
13	8L	20087	Stud				

### Sega Star Hand Load Jackpot Complete

8A    20083    Sega Star Hand Load Jackpot Assembly

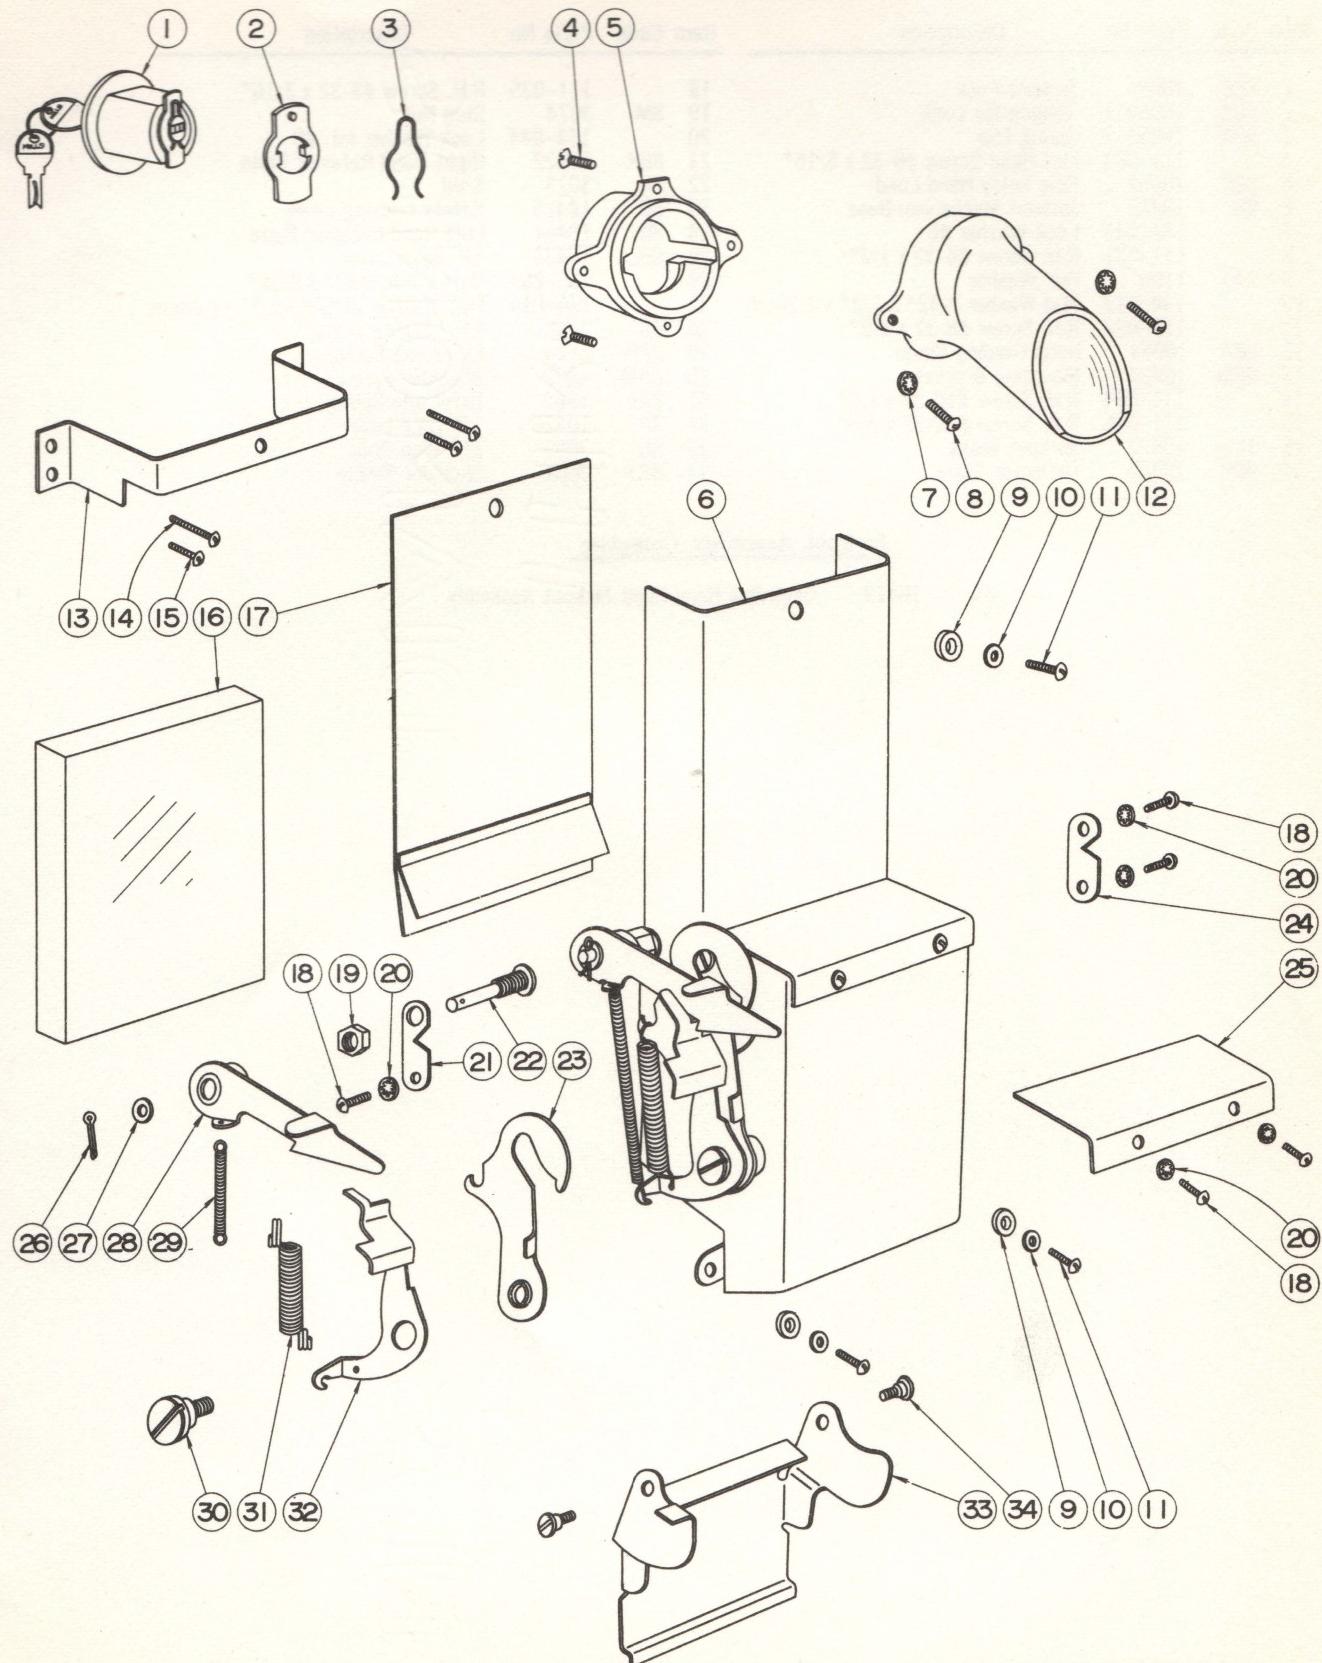

SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE


P A R T S   L I S T

## 21 BELL HAND LOAD JACKPOT PARTS

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	8BC	10053	Jackpot Lock	18		111-035	R.H. Screw #8-32 x 3/16"
2	8BC	10053-1	Tongue for Lock	19	8M	3074	Stud Nut
3	8BC	10053-2	Spring Clip	20		144-044	Lock Washer Int. #8
4		111-084	Flat Head Screw #6-32 x 5/16"	21	8BK	10422	Right Hand Retainer Plate
5	8BB	10052	Coin Entry Hand Load	22	8L	3073	Stud
6	8B	10418	Jackpot Mechanism Base	23	8D	10425	Safety Locking Lever
7		144-043	Lock Washer #6	24	8BJ	10421	Left Hand Retainer Plate
8		111-021	R.H. Screw #6-32 x 1/2"	25	8BL	10423	J.P. Base Cover
9	2AT	1109	Felt Washer	26		155-007	Cotter Pin 3/32" x 9/16"
10		144-013	Flat Washer 7/32" x 1/2" x 1.2m/m	27		144-014	Flat Washer 17/64"-1/2"x1.2m/m
11		111-032	R.H. Screw #8-32 x 1/2"	28	8G	7458	J.P. Locking Lever
12	8BA	10051	Hand Loading Chute	29	8AD	3144	Extension Spring
13	8BM	10424	Mounting Bracket	30	8AM	1593	Shoulder Screw
14		111-064	R.H. Screw #10-32 x 1/2"	31	8AE	1842	Extension Spring
15		111-055	R.H. Screw #10-32 x 3/8"	32	8P	10426	J.P. Drop Lever
16	1L	10427	Jackpot Glass	33	8U	3099	J.P. Trap Door
17	8BH	10420	Deflector Plate	34	8AJ	2881	Shoulder Screw

Jackpot Assembly Complete

8A 10419 Sega Bell Hand Load Jackpot Assembly

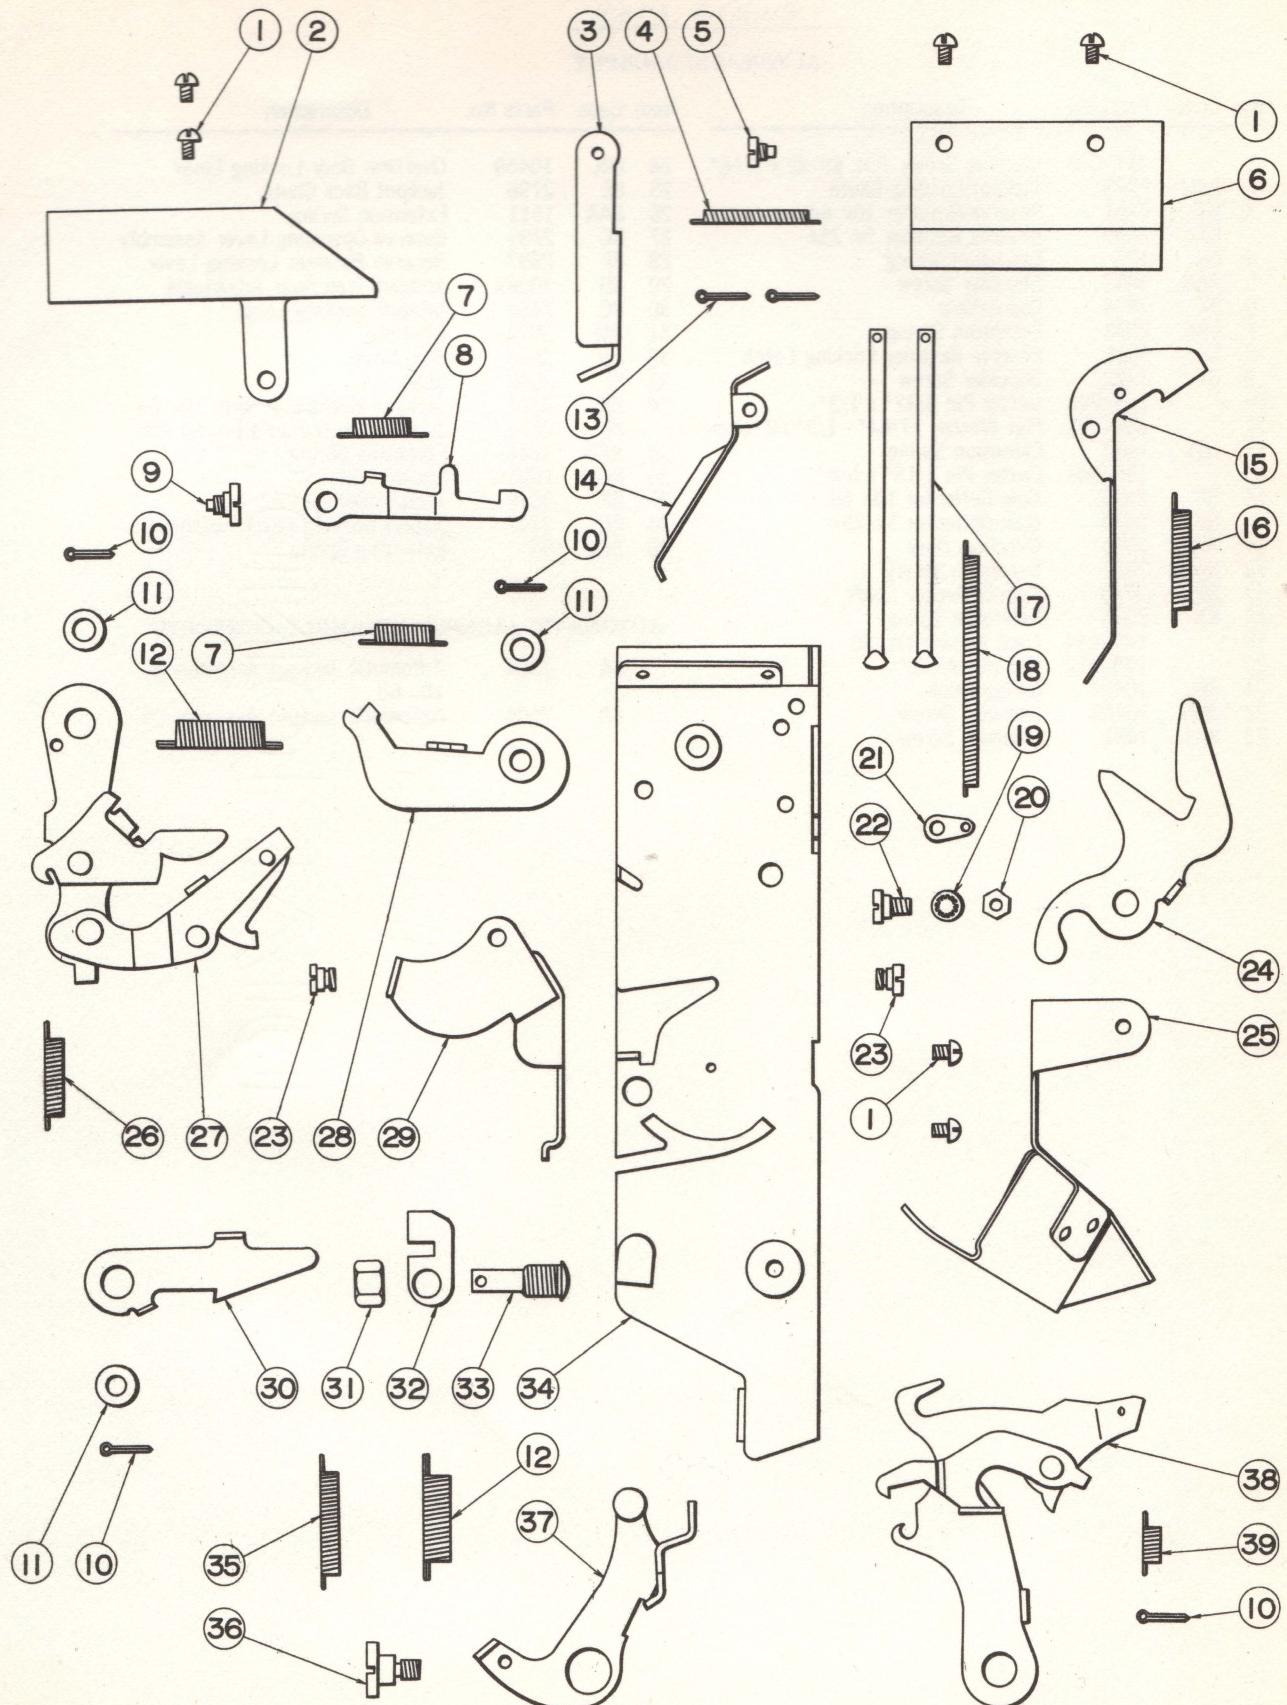

SEGA PARTS CATALOG


PARTS LIST ON REVERSE PAGE

**PARTS LIST****AUTOMATIC JACKPOT**

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1		111-035	Machine Screw R.H. #8-32 x 3/16"	24	8BL	10459	Overflow Door Locking Lever
2	2AH	2775	Jackpot Loading Chute	25	8E	2796	Jackpot Back Chute
3	8T	3251	Reserve Retainer 10¢ 6d	26	8AA	1511	Extension Spring
	8T	3039	Reserve Retainer 5¢ 25¢	27	8C	2791	Reserve Operating Lever Assembly
4	6U	107	Extension Spring	28	8F	2897	Reserve Retainer Locking Lever
5	8AH	3057	Shoulder Screw	29	8U	10584	Jackpot Trap Door Adjustable
6	8Z	7424	Guard Plate	30	8G	7458	Jackpot Locking Lever
7	5AD	2738	Extension Spring	31	8M	3074	Stud Nut
8	8H	3631	Reserve Retainer Locking Latch	32	8D	3070	Hold Cover
9	8J	3722	Shoulder Screw	33	8L	3073	Stud
10		155-006	Cotter Pin 3/32" x 1/2"	34	8B	3252	Jackpot Mechanism Base 10¢ 6d
11		144-015	Flat Washer 17/64"-1/2" x 0.5m/m	8B		2771	Jackpot Mechanism Base 5¢ 25¢
12	5BJ	1842	Extension Sprng	35	8AD	3144	Extension Spring
13		155-004	Cotter Pin 1/16" x 5/8"	36	8AM	1593	Shoulder Screw
14	8S	2919	Coin Deflector 10¢ 6d	37	8P	3010	Jackpot Dump Lever
	8S	5524	Coin Deflector 5¢ 25¢	38	8D	2792	Safety Locking Lever Assembly
15	8W	3045	Overflow Door	39	8AL	53	Extension Spring
16	8AW	2871	Extension Spring				
17	8R	2746	Coin Deflector Shaft				
18	8X	7506	Extension Spring				
19		144-044	Lock Washer Int. #8				
20		133-012	Hex Nut #8-32	8A		7504	Automatic Jackpot Assembly 5¢
21	8BU	10457	Spring Hook			10¢ 6d	
22	8BN	10458	Shoulder Screw	8A		7505	Automatic Jackpot Assembly 25¢
23	8AJ	2881	Shoulder Screw				

**AUTOMATIC JACKPOT ASSEMBLY COMPLETE**

- 8A      7504      Automatic Jackpot Assembly 5¢  
                 10¢ 6d  
 8A      7505      Automatic Jackpot Assembly 25¢

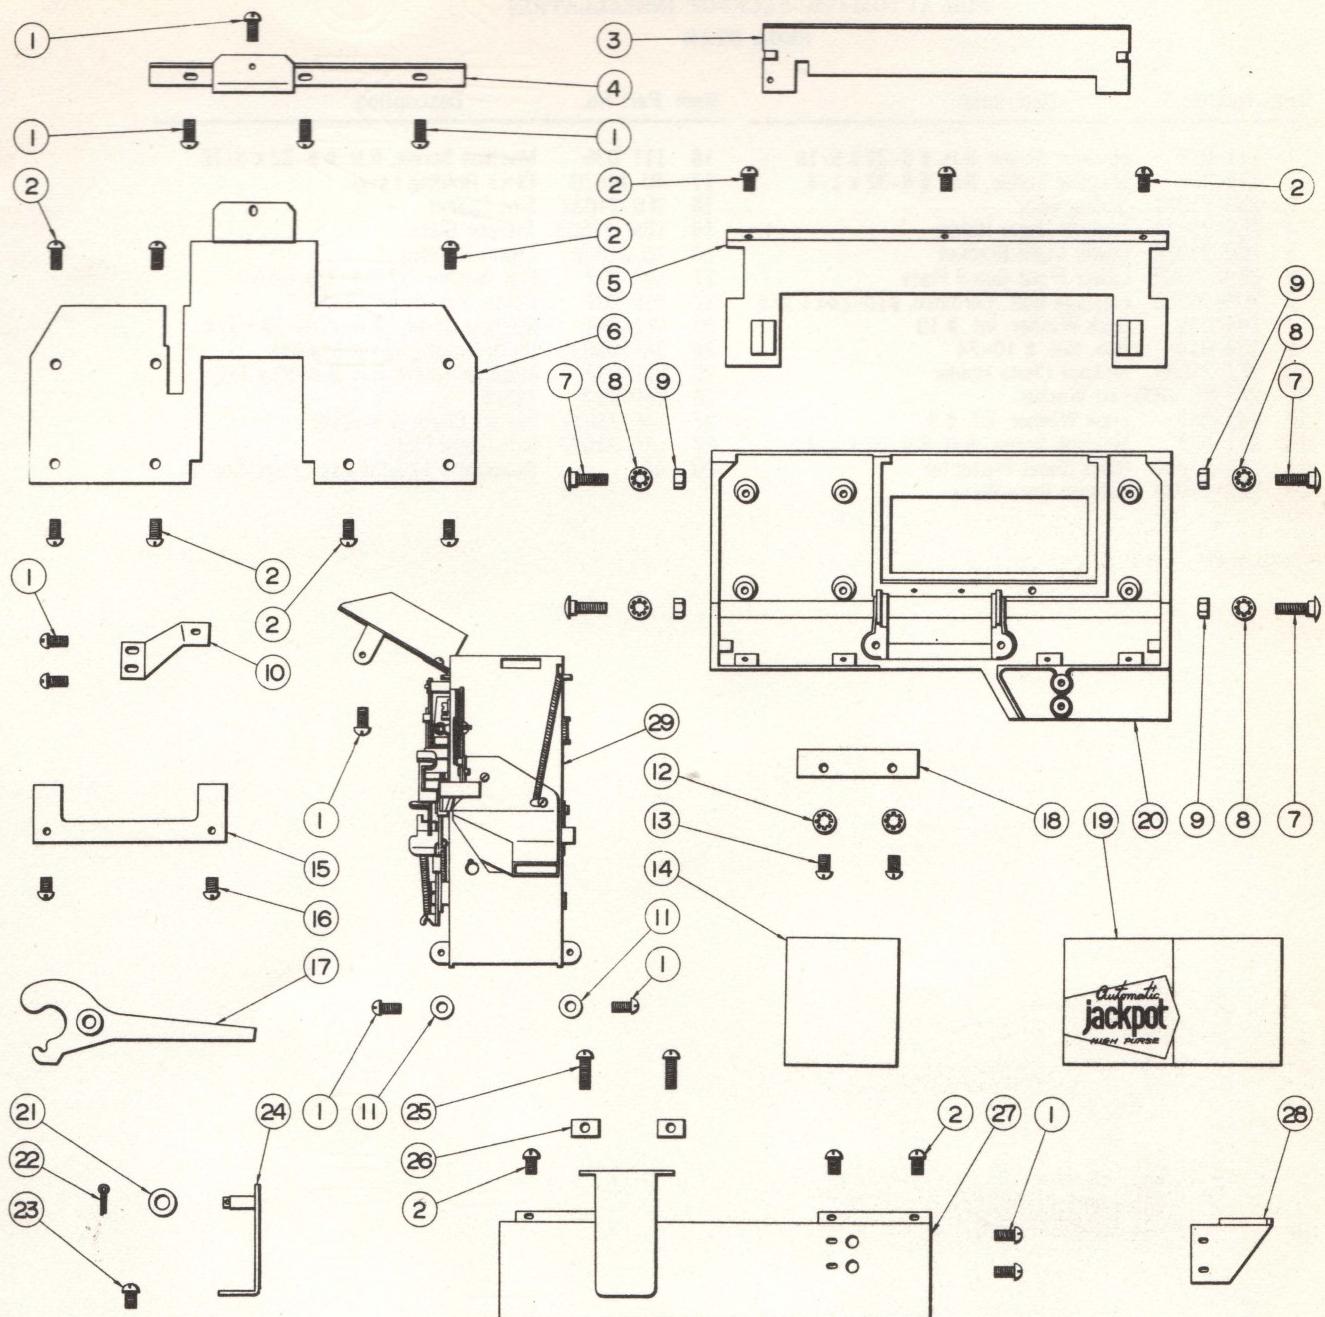


SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

SECTION 8 PAGE 7

**PARTS LIST****FOR AUTOMATIC JACKPOT INSTALLATION  
SEGA STAR**

Item	Part No.	Description	Item	Part No.	Description
1	111-027	Machine Screw, R.H. # 8-32 x 5/16	16	111-035	Machine Screw, R.H. # 8-32 x 3/16
2	111-026	Machine Screw, R.H. # 8-32 x 1/4	17	4U-10620	Clock Holding Lever
3	2BU-21027	Sliding Door	18	2FB-21032	Slot Spacer
4	2EV-21024	Jackpot Upper Holder	19	1BM-21023	Jackpot Glass
5	2BU-21026	Lower Light Bracket	20	1D-21020	Lower Casting
6	2EW-21025	Lower Front Guard Plate	21	144-022	Flat Washer, 17/64-3/8 x 0.6
7	2DK-10355	Carriage Bolt, Chromed, #10-24 x 1 1/4	22	155-007	Cotter Pin, 3/32 x 9/16
8	144-045	Lock Washer, Int. # 10	23	111-048	Machine Screw, R.H. # 10-24 x 1/4
9	133-014	Hex. Nut, # 10-24	24	3A-10603	Clock Holding Lever Bracket
10	2EZ-21030	Jackpot Chute Holder	25	111-032	Machine Screw, R.H. # 8-32 x 1/2
11	2AT-BD-1109	Felt Washer	26	2AP-713	Clamp
12	144-043	Lock Washer, Int. # 6	27	1AF-21021	Payout Chute & Bracket
13	111-023	Machine Screw, R.H. # 6-32 x 1/4	28	1AG-21022	Side Guard Plate
14	2FA-21031	Glass Sheet Protector	(29)	8A-	Automatic Jackpot Assy.) See Sec. 8
15	2EX-21028	Jackpot Base Plate			

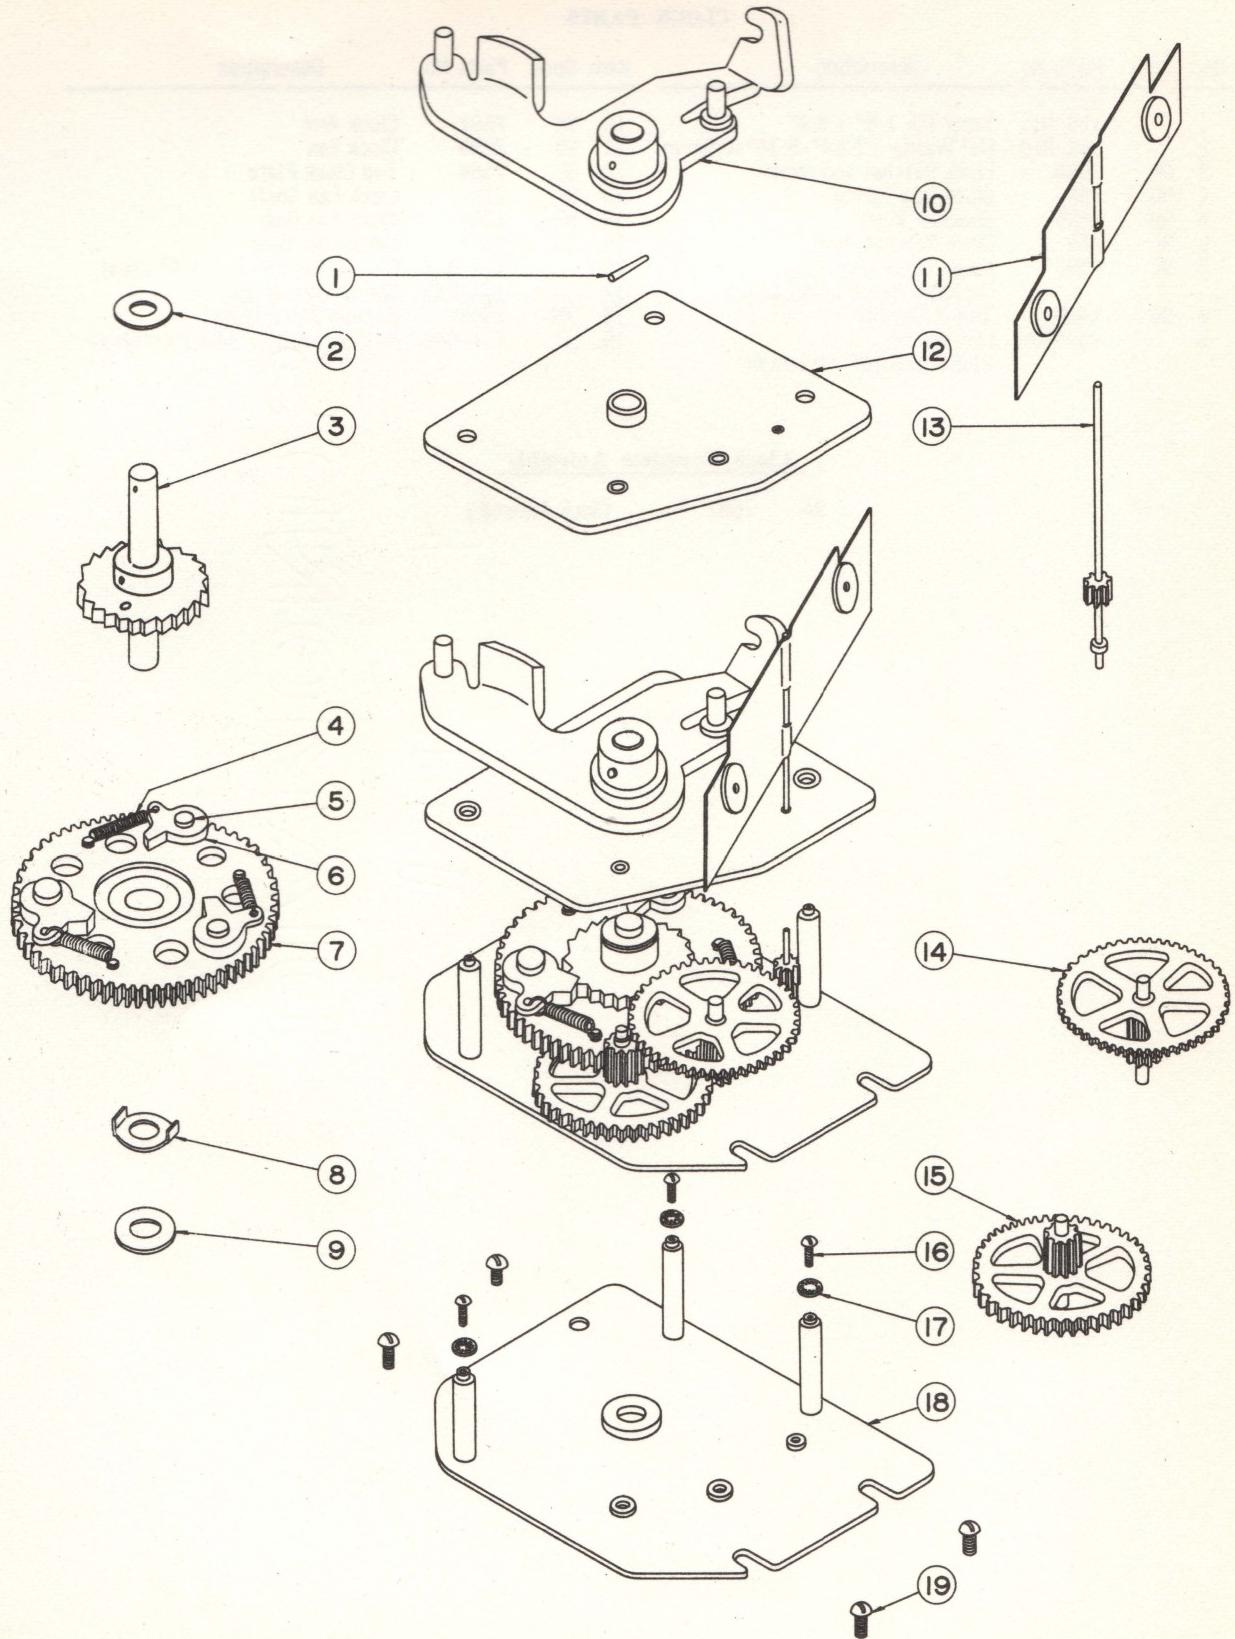

SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

SECTION 9 PAGE 1


PARTS LIST

## CLOCK PARTS

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1		155-011	Taper Pin 1/8" x 3/4"	10	9K	7661	Clock Arm
2		144-010	Flat Washer 21/64"-9/16"x0.5m/m	11	9B	3299	Clock Fan
3	9P	7584	Clock Ratchet and Shaft	12	9L	7564	Top Clock Plate
4	9G	782	Clock Dog Spring	13	9J	212	Clock Fan Shaft
5	9H	7585	Shoulder Rivet	14	9D	1298	Clock Fan Gear
6	9F	745	Clock Ratchet Pawl	15	9C	7574	Clock Idler Gear
7	9E	7593	Large Clock Gear Assy. (Includes Items #4 #5 #6)	16		111-023	R.H. Screw #6-32 x 1/4" (3ea)
8	9Q	5419	Thrust Washer	17		144-033	Spring Washer #6
9		144-006	Flat Washer 21/64" x 9/16" x 0.1 m/m	18	9M	7563	Bottom Clock Plate
				19		111-048	R.H. Screw #10-24 x 1/4" (4ea)


Clock Complete Assembly

9A 7662 Clock Assembly

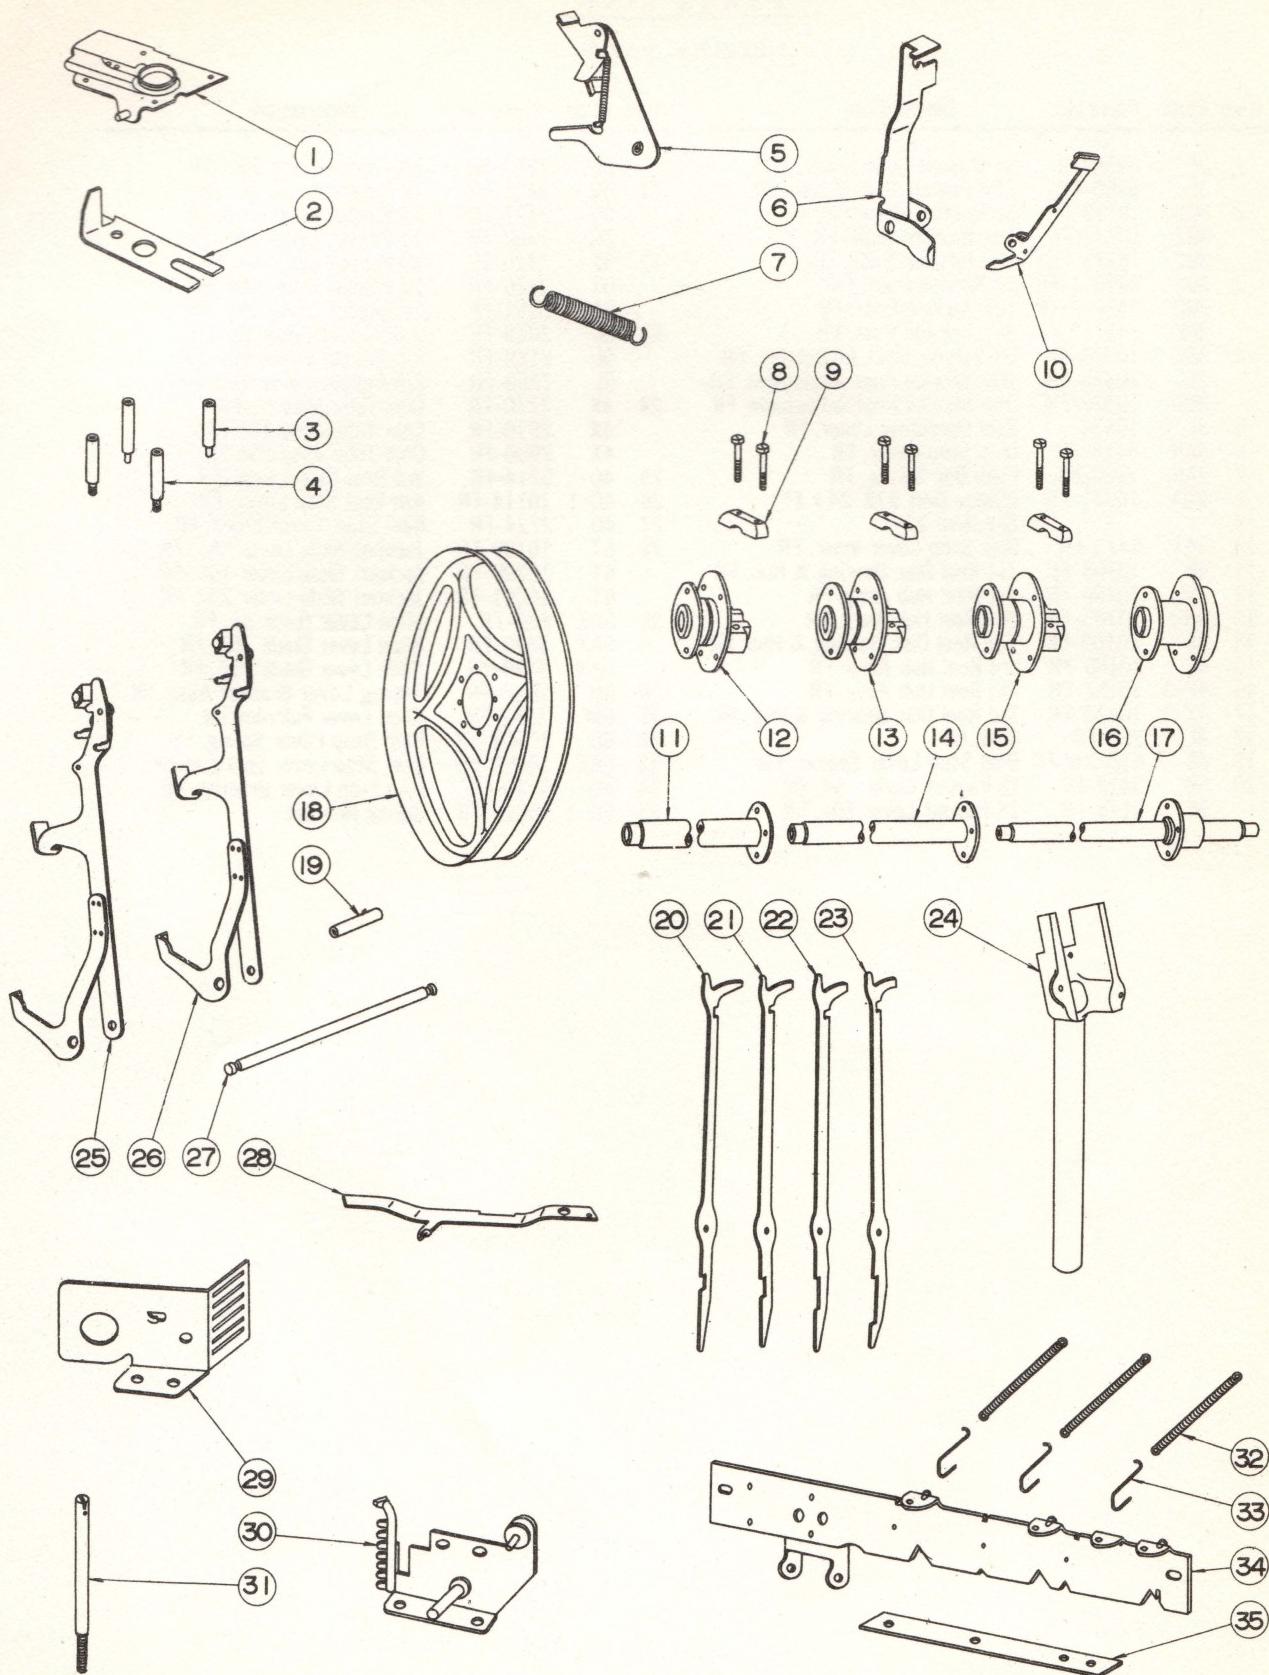

**PARTS LIST****4 REELER PARTS**

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1	3C	6758-FR	5¢ Payout Slide Cover, FR	5E	7253-FR	18 Payout Lever 25¢, FR	
	3C	6760-FR	25¢ Payout Slide Cover, FR	21	5G	3421-FR	14 Payout Lever 5¢, FR
2	3B2	10113-FR	5¢ Bottom Slide, FR		5G	2177-FR	14 Payout Lever 10¢, FR
	3B2	10272-FR	10¢ Bottom Slide, FR		5G	7252-FR	14 Payout Lever 25¢, FR
	3B2	10273-FR	25¢ Bottom Slide, FR	22	5J	3420-FR	10 Payout Lever 5¢, FR
3	3BE	8497-1-FR	5¢ Service Post, FR		5J	2176-FR	10 Payout Lever 10¢, FR
	3BE	8497-2-FR	10¢ Service Post, FR		5J	7251-FR	10 Payout Lever 25¢, FR
	3BE	8497-3-FR	25¢ Service Post, FR	23	5L	3419-FR	2/5 Payout Lever 5¢, FR
4	3BE	10324-FR	5¢ Service Post Adjustable, FR		5L	2179-FR	2/5 Payout Lever 10¢, FR
	3BE	10325-FR	10¢ Service Post Adjustable, FR		5L	7250-FR	2/5 Payout Lever 25¢, FR
	3BE	10326-FR	25¢ Service Post Adjustable, FR	24	4X	2770-FR	Coin Tube Assy 5¢ FR
5	3F	10436	Reel Operating Lever, FR		4X	2910-FR	Coin Tube Assy 10¢ FR
6	3AR	9118-FR	Disc Stop Lever, FR		4X	2900-FR	Coin Tube Assy 25¢ FR
7	3AG	3793-FR	Push Bar Spring, FR	25	4C	5214-FR	3rd Reel Stop Lever, FR
8	4AA	10321-FR	Cheese Bolt #12-24 x 1"	26	4C-1	10114-FR	4th Reel Stop Lever, FR
9			See item 12	27	4D	2724-FR	Reel Stop Lever Shaft, FR
10	3AT	6473-FR	Disc Stop Lever Inner, FR	28	6T	10199-FR	Jackpot Slide Lever 5¢, FR
11	4R	10108-FR	1st Reel Disc Bearing & Hub, FR		6T	10200-FR	Jackpot Slide Lever 10¢, FR
12	4M	10104-FR	1st Reel Hub Assy, FR		6T	10201-FR	Jackpot Slide Lever 25¢, FR
13	4N	10105-FR	2nd Reel Hub Assy, FR	29	5AX	650-FR	Slide Lever Guide 5¢, FR
14	4S	10109-FR	2nd Reel Disc Bearing & Hub, FR		5AX	3649-FR	Slide Lever Guide 10¢, FR
15	4P	10106-FR	3rd Reel Hub Assy, FR		5AX	3429-FR	Slide Lever Guide 25¢, FR
16	4P-1	10107-FR	4th Reel Hub Assy, FR	30	6H	7658-FR	Timing Lever Bracket Assy, FR
17	4S-1	10110-FR	3rd Reel Disc Bearing & Hub, FR	31	6M	7880-FR	Slide Lever Fulcrum, FR
18	4L	722-FR	Reel, FR	32	6D	10058-FR	Reel Stop Lever Spring, FR
19	4E	STD-734-FR	Reel Stop Lever Spacer, FR	33	6AE	10057-FR	Reel Stop Lever Spring Hook
20	5E	3422-FR	18 Payout Lever 5¢, FR	34	6C	9120-FR	Disc Stop Lever Bracket, FR
	5E	2178-FR	18 Payout Lever 10¢, FR	35	6C-1	10115-FR	Spring Bracket

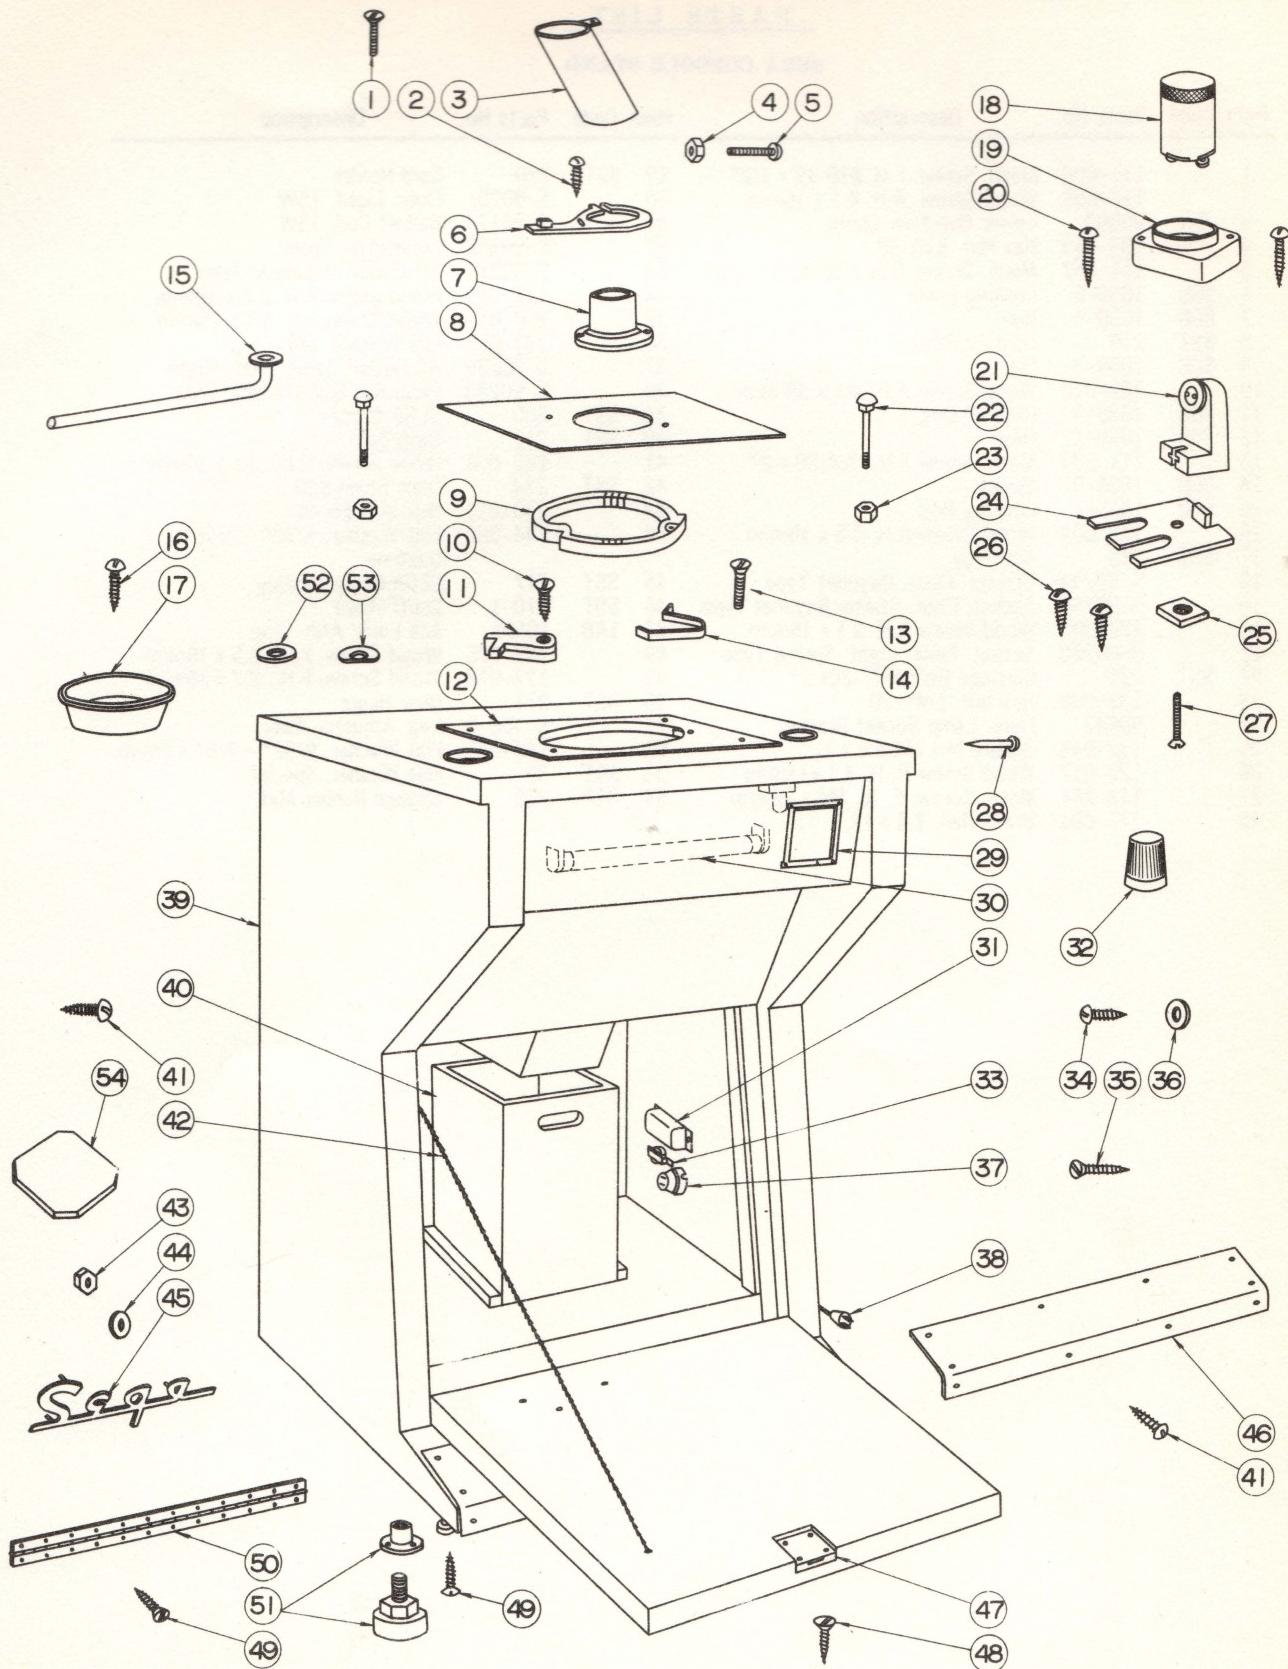

SEGA PARTS CATALOG


PARTS LIST ON REVERSE PAGE

SECTION 11 PAGE 1

PARTS LIST

## SEGA CONSOLE STAND

Item	Code	Parts No.	Description	Item	Code	Parts No.	Description
1		111-090	Mach. Screw, F.H. #10-32 x 1/2"	29	SST	220	Card Holder
2		122-009	Wood Screw, R.H. 4.1 x 16m/m	30		S-90201	Fluor. Light, 15W
3	2EH	20090	Lower Overflow Chute	31		S-90173	Ballast Coil, 15W
4		133-013	Hex Nut, #10-32	32		S-90178	Connector, Speed
5		111-057	Mach. Screw, R.H. #10-32 x 1 1/8"	33		S-90232	AC Outlet, Recessed Type
6	SGB	1039-6	Locking Lever	34		122-015	Wood Screw R.H. 2.7 x 10m/m
7	SGB	1039-5	Hub	35		122-012	Wood Screw F.H. 4.1 x 25m/m
8	SST	219	Contact Plate	36		144-057	Flat Washer, M3
9	SGB	1039-3	Disc	37		S-90230	AC Outlet, Table Type, Single
10		122-013	Wood Screw, F.H. 4.5 x 38 m/m	38		S-90233	Plug, AC, Self-Locking Type
11	SGB	1039-4	Ratchet Dog	39	SST	200	SEGA Stand
12	SGB	1039-2	Base	40	SST	212	Cash Box
13		111-234	Mach. Screw F.H., 1/4-20 x 2"	41		122-004	Wood Screw, R.H., 3.5 x 16m/m
14	SGB	1039-9	Spring	42	SST	214	Door Chain #20
15	SGB	1039-7	Locking Rod	43		133-011	Hex Nut, #6-32
16		122-004	Wood Screw R.H. 3.5 x 16m/m	44		144-059	Flat Washer, 5/32" - 5/16" x 0.8m/m
17	SST	218	Ash Tray	45	SST	217	SEGA Name Casting
18		S-90244	Starter, Fluor. Bayonet Type	46	SST	210-1	Scuff Plate
19		S-90264	Socket, Fluor. Starter Bayonet Type	47	1AB	10598	Ace Lock, ANK Type
20		122-003	Wood Screw R.H. 3.1 x 16m/m	48		122-025	Wood Screw, F.H., 3.5 x 16m/m
21		S-90260	Socket, Fluor. Light, Spring Type	49		122-018	Wood Screw, F.H., 2.7 x 16m/m
22	SST	221	Carriage Bolt 1/4"-20x 2"	50	SST	211	Door Hinge
23		133-008	Hex Nut, 1/4"-20	51		K-106-R	Leg Adjuster Assy.
24		90687	Fluor. Lamp Socket Bracket	52		144-025	Flat Washer, 9/32" - 7/8" x 2m/m
25		133-045	Square Nut M4-8.5 x 2	53	SST	39	Flat Washer, Special
26		122-017	Wood Screw R. H. 3.1 x13m/m	54	SST	215	Sponge Rubber Mat
27		111-284	Mach. Screw, F. H., M4 x 16m/m				
28		177-001	Brass Nail, 1.4 x 12				

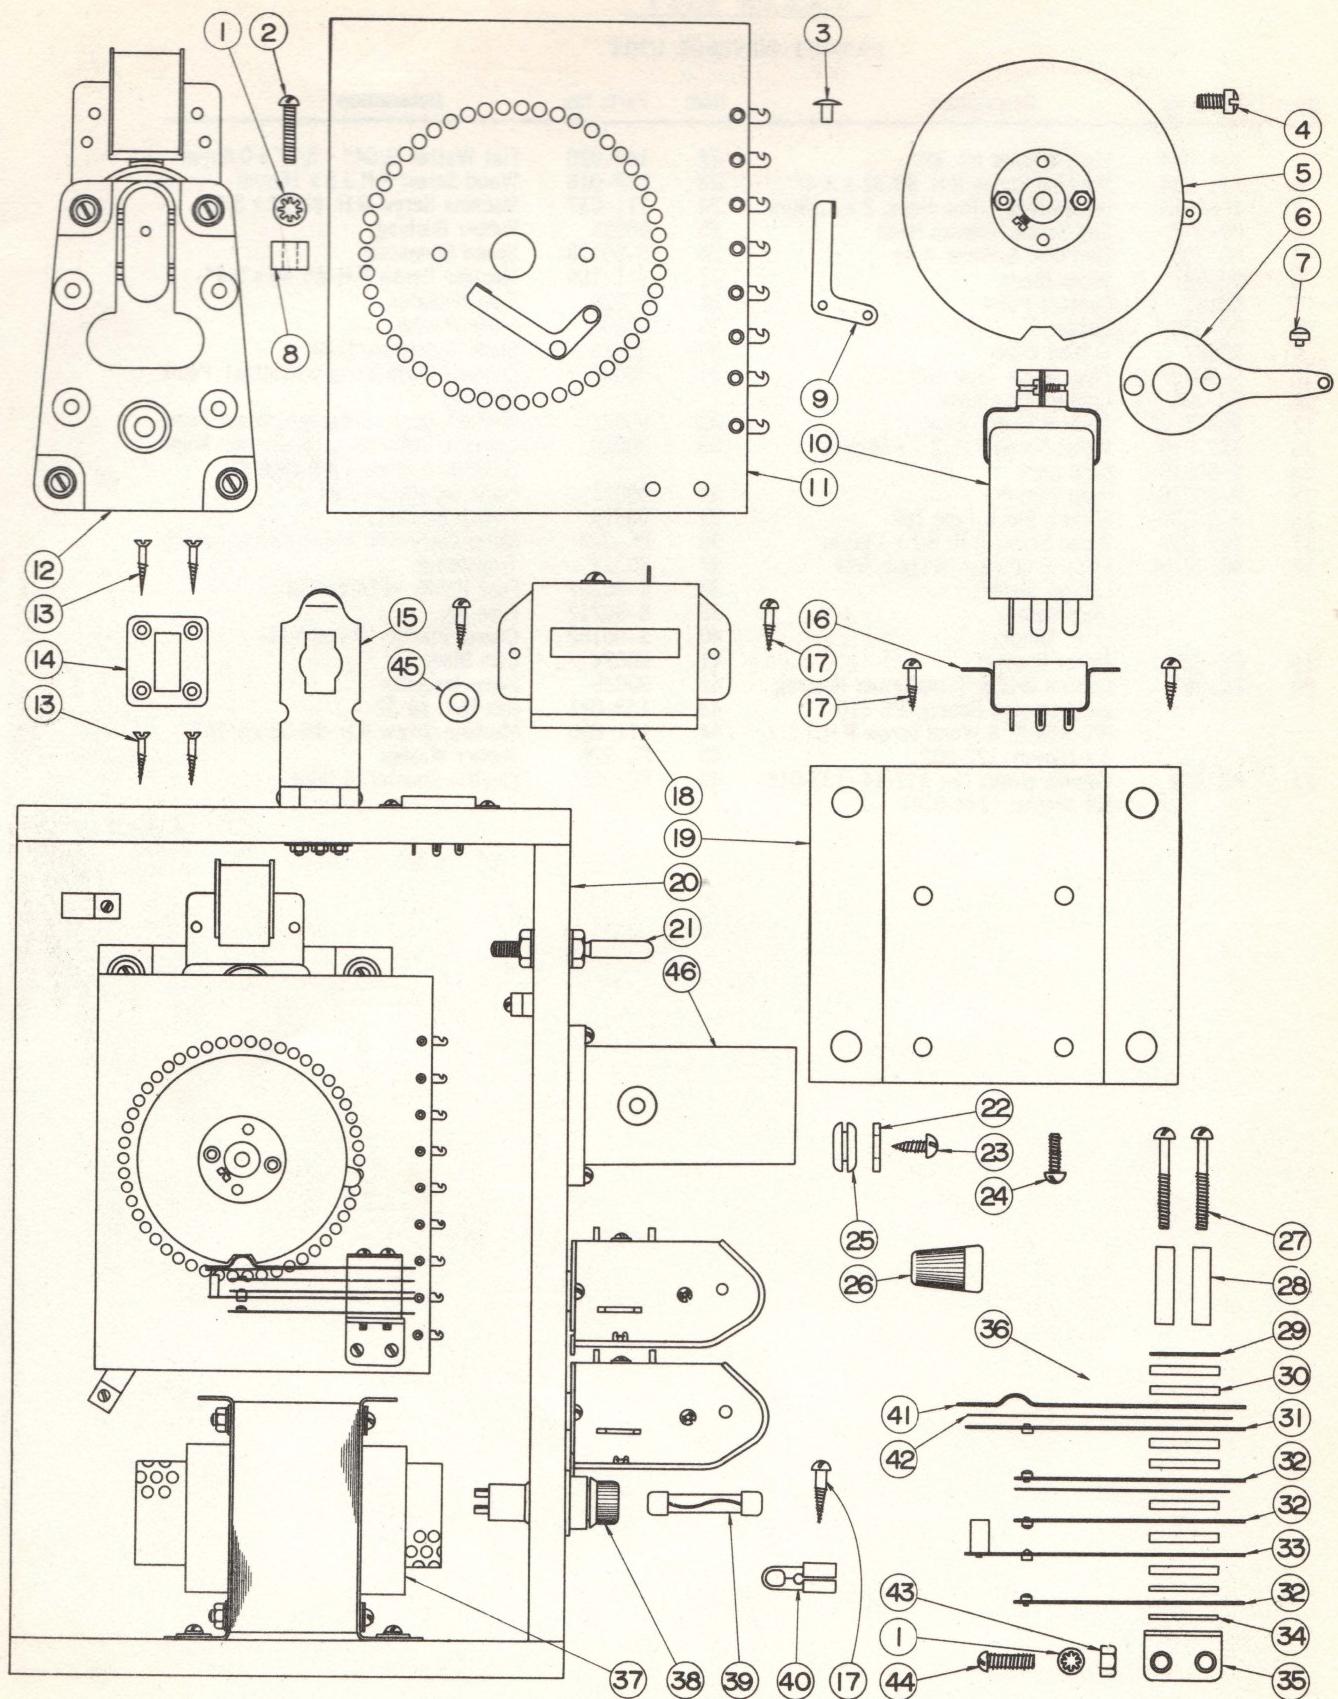


SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

PARTS LIST

## PAYOUT CONTROL UNIT

Item	Parts No.	Description	Item	Parts No.	Description
1	144-044	Lock Washer Int. #8	22	144-020	Flat Washer 9/64" - 3/8" x 0.8m/m
2	111-034	Machine Screw R.H. #8-32 x 3/4"	23	122-016	Wood Screw R.H. 3.5 x 16m/m
3	166-013	Hollow Rivet, Thin Head, 2 x 3.5m/m	24	111-037	Machine Screw R.H. #8-32 x 3/8"
4	PC-311	Cap Screw, Cheese Head	25	90008	Rubber Bushing
5	PC-305	Cam Disc & Wiper Assy	26	S-90178	Speed Connector
6	90352	Wiper Blade	27	111-105	Machine Screw R.H. #5-40 x 3/4"
7	90121	Contact Point	28	90028	Pipe Insulator
8	PC-326	Spacer	29	90031	Blade Washer
9	90087	Ground Wiper	30	90026	Blade Separator-Thick
10	S-90237-2	Plug, Block Type 18P	31	90020	Contact Blade-Long w/Contact Point (90021)
11	PC-304	Contact Disc Assy.	32	90022	Contact Blade-Short w/Contact Point
12	90357-25	Control Motor Assy.	33	90020	Contact Blade-Long w/Contact Point (90350) & Blade Tip-9 (90030)
13	122-018	Wood Screw F.H. 2.7 x 16m/m	34	90027	Blade Separator-Thin
14	S-80016-1	Hasp Lock	35	90316	Switch Bracket
15	S-80016-2	Hasp 75m/m	36	PC-323	Motor Carry-over & Main Payout Switch
16	S-90237-1	Socket, Block Type 18P	37	90317	Transformer
17	122-017	Wood Screw R.H. 3.1 x 13m/m	38	S-90207	Fuse Holder w/Screw Cap
18	90303-50	Electric Counter, 4 Digit, 50V (3 Star Meter) (Pay Meter) (J. P. Meter)	39	S-90212	Fuse 2A
19	PC-325	Motor Bracket	40	S-90182	Clamp, Plastic 12.7m/m I.D.
20	PC-301	Control Unit & Transformer Housing w/Perforated Sheets (PC-310-1) (PC-310-2) & Wood Screw R.H. 3 x 10m/m (122-002)	41	90024	Cam Blade
21	PC-309	Handle, w/Hex Nut #12-14 (133-015) & F.Washer (144-014)	42	90025	Paper Insulator
			43	133-011	Hex Nut, #6-32
			44	111-085	Machine Screw R.H. #6-32 x 5/16"
			45	PC-329	Rubber Washer
			46	PC-328	Electric Counter, 5 Digit

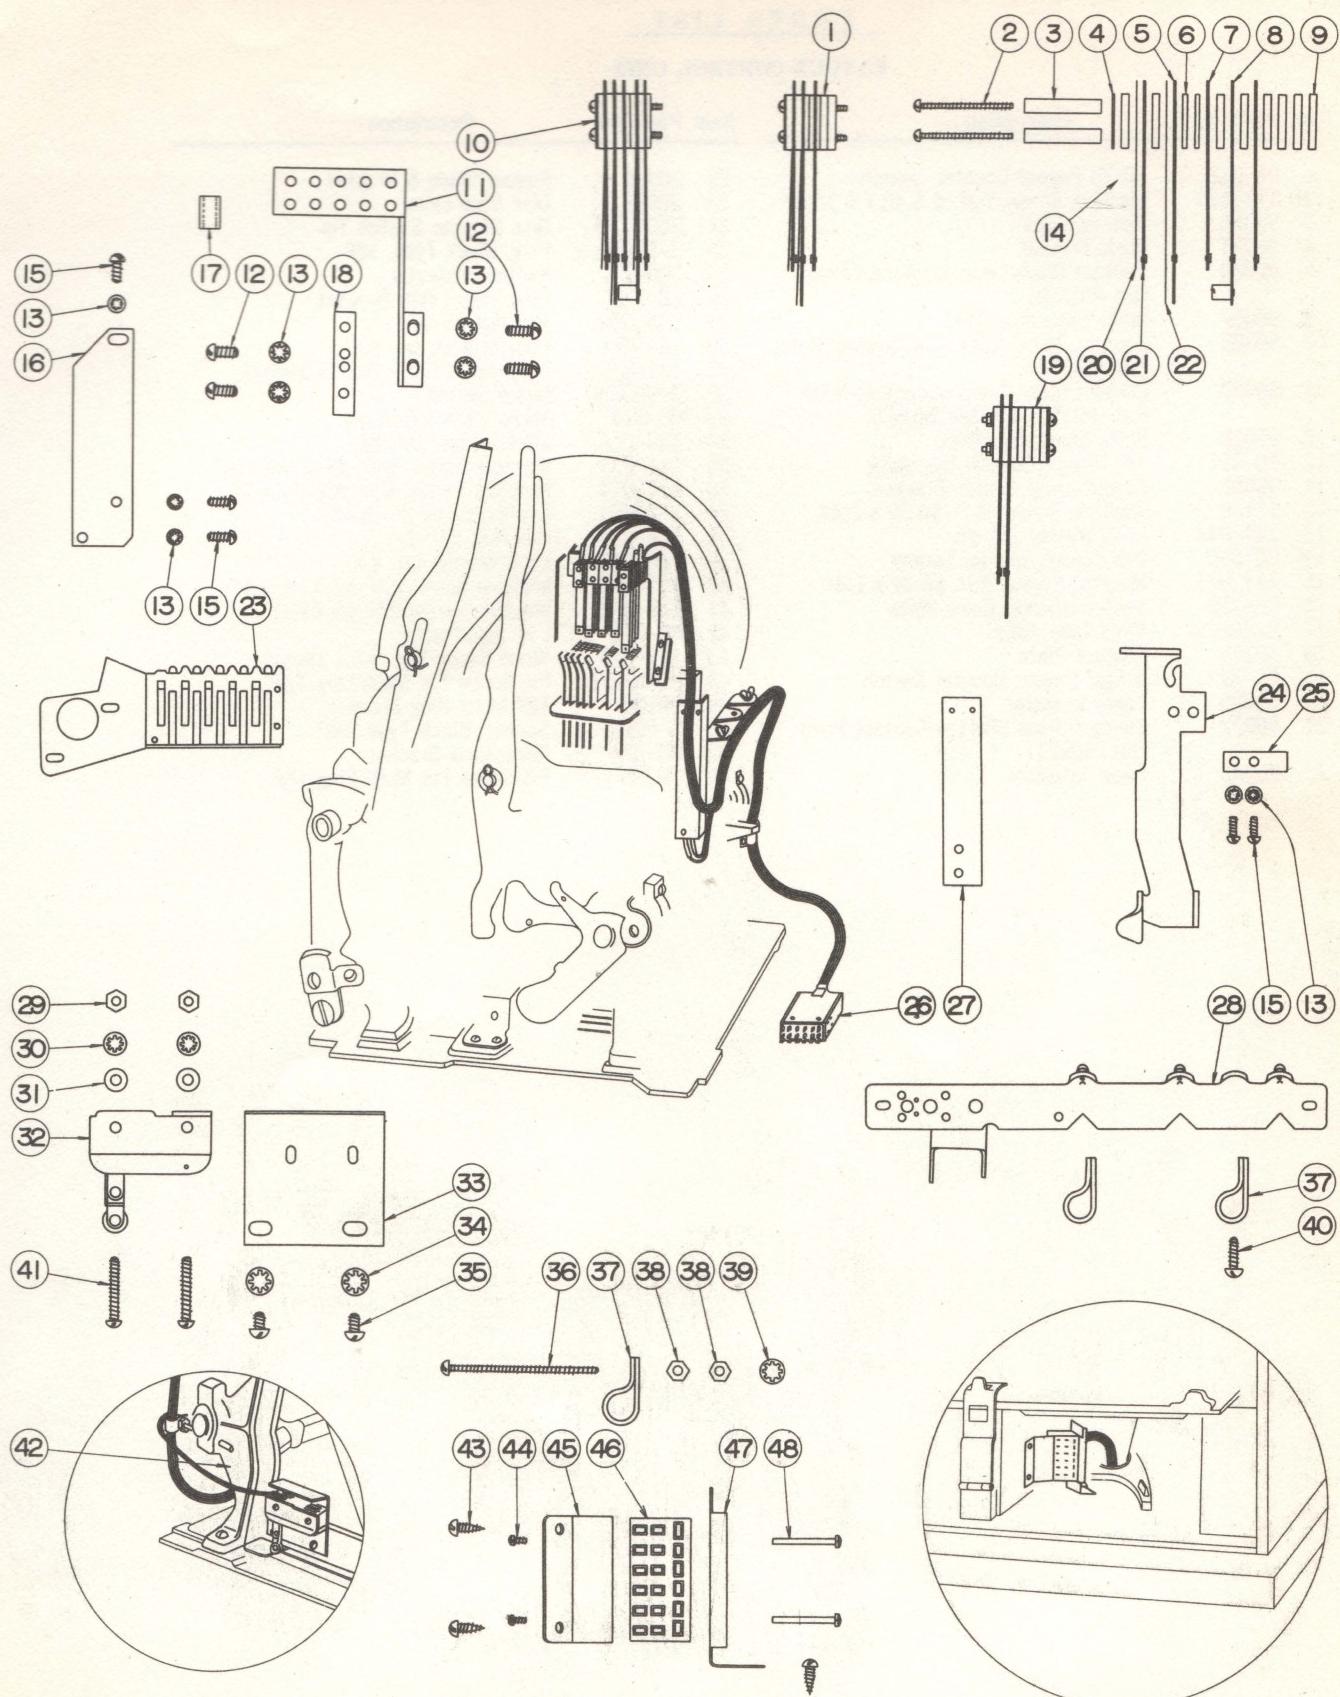



SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE

P A R T S   L I S T

## PAYOUT CONTROL UNIT


Item	Parts No.	Description	Item	Parts No.	Description
1	PC-319	10-20 Payout Counter Switch	23	30095	Payout Guide & Bracket
2	111-125	Machine Screw, R.H. # 5-40 x 1 3/16"	24	30082	Disc Stop Lever
3	90028	Pipe Insulator	25	30080	Disc Stopper Switch Tip
4	90031	Blade Washer	26	S-90237-2	Plug, Block Type, 18P
5	90020	Contact Blade-Long w/Contact Point Flat (90350)	27	30052	Switch Protector
6	90027	Blade Separator-Thin	28	PC-312	Disc Stop Lever Bracket
7	90399	Contact Blade, 0.3 x 43 w/Contact Point, Flat (90350)	29	133-009	Hex Nut #5-40
8	90020	Contact Blade-Long w/Contact Point Flat (90350) & Blade Tip-6.5	30	144-041	Lock Washer Int. #5
9	90026	Blade Separator-Thick	31	144-020	F.Washer 9/64" - 3/8" x 0.8m/m
10	PC-321	J.P. Payout Counter Sw. Assy.	32	S-90353	Micro Switch
11	30053	Payout Lever Switch Bracket	33	PC-318	Micro Switch Bracket
12	111-023	Machine Screw, R.H. #6-32 x 1/4"	34	144-044	Lock Washer Int. #8
13	144-043	Lock Washer Int. #6	35	111-035	Machine Screw, R.H. #8-32x 3 /16"
14	PC-320	2/5 Payout Counter Switch	36	111-044	Machine Screw, R.H. #10-24 x 2"
15	111-023	Machine Screw, R.H. #6-32 x 1/4"	37	S-90181	Clamp Plastic 8m/m I.D.
16	PC-316	Switch Bracket Guide Plate	38	133-014	Hex Nut, #10-24
17	S-90225	Vinyl Tube 4m/m	39	144-045	Lock Washer Int. #10
18	30116	Adaptor Plate	40	111-037	Machine Screw R.H. #8-32 x 3/8"
19	PC-322	3-Star Payout Counter Switch	41	111-083	Machine Screw R.H. #5-40 x1"
20	90025	Paper Insulator	42	PC-315	L.H. Side Frame
21	90022	Contact Blade-Short w/Contact Point Flat (90021)	43	122-016	Wood Screw R.H. 3.5 x 16m/m
22	90345	Paper Insulator	44	(S-90237)	Pin Screw For Multi-Plug 18P
			45	90100	18P Multi-Plug Bracket
			46	S-90237-1	Socket, Block Type, 18P
			47	PC-324	Receptacle Bracket
			48	(S-90237)	Pin Screw For Multi-Plug 18P

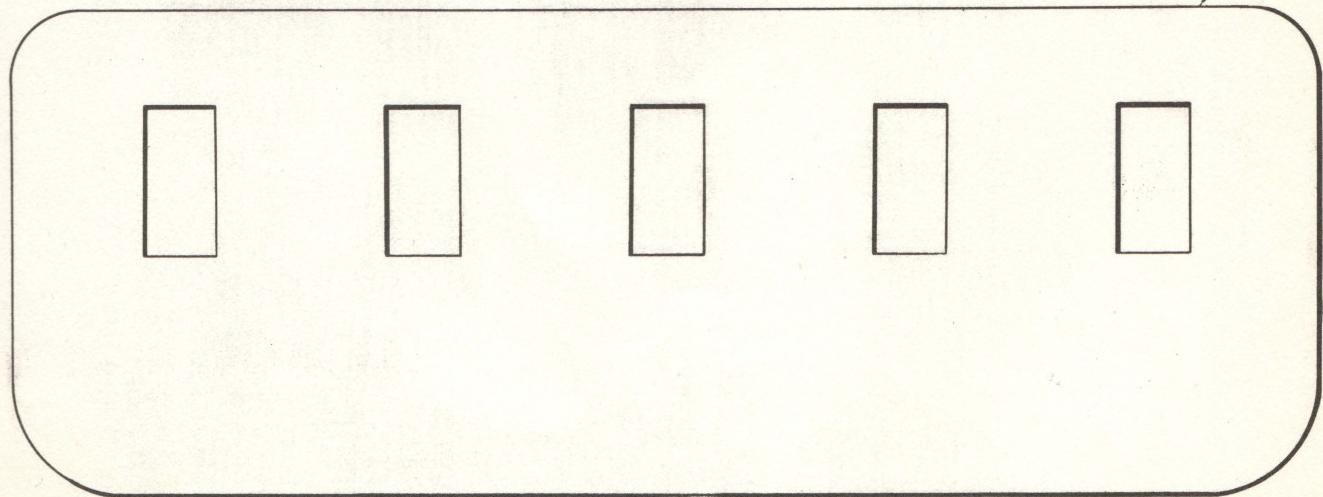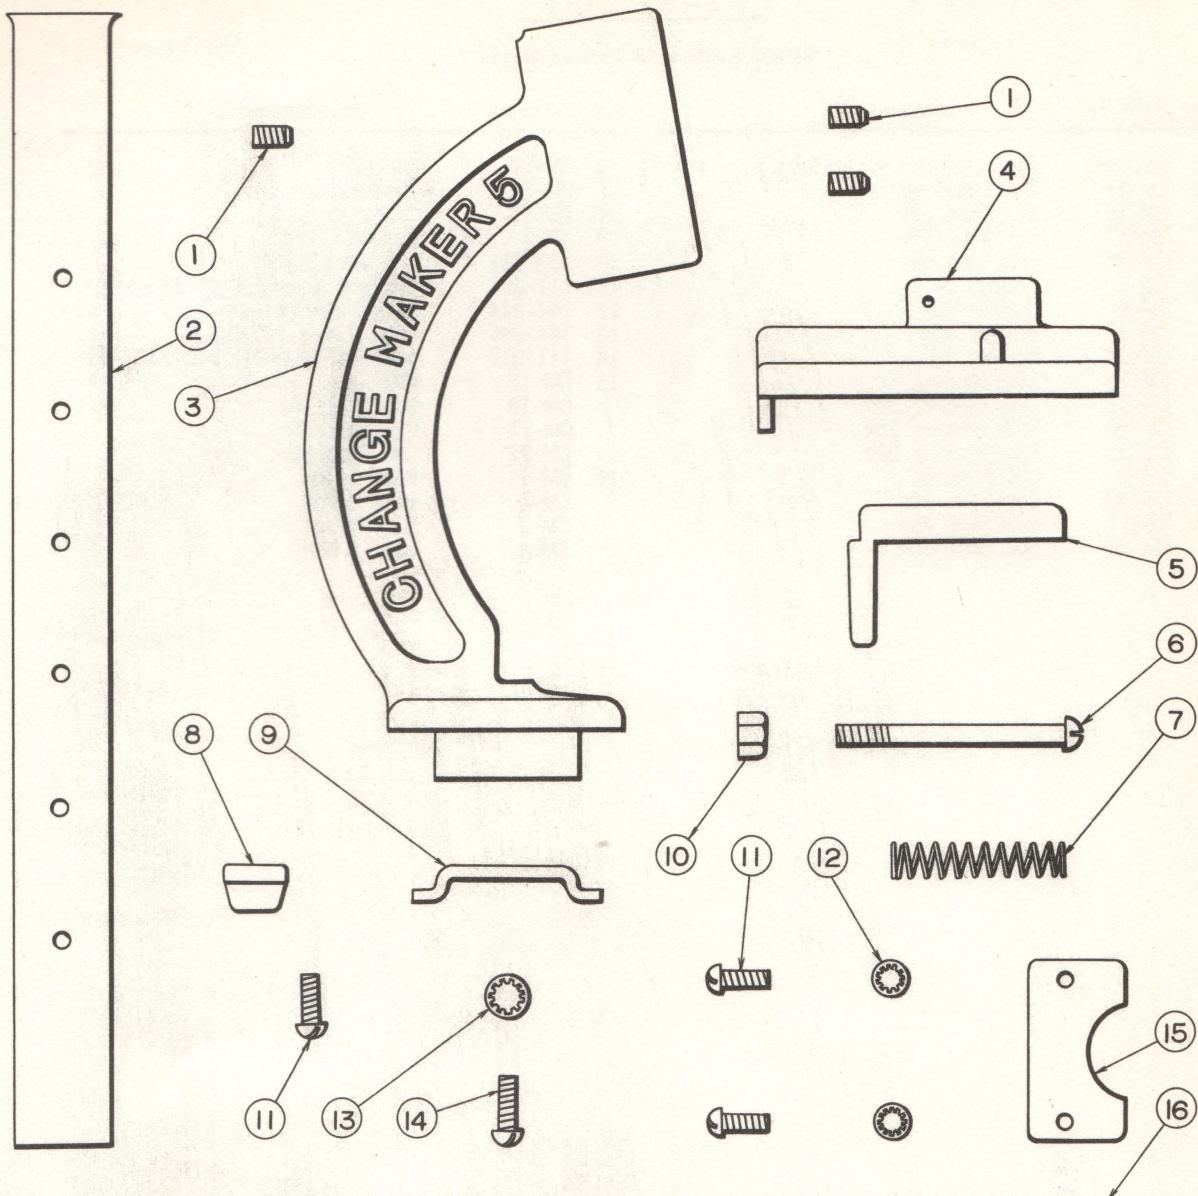

SEGA PARTS CATALOG

PARTS LIST ON REVERSE PAGE













SECTION 13 PAGE 1

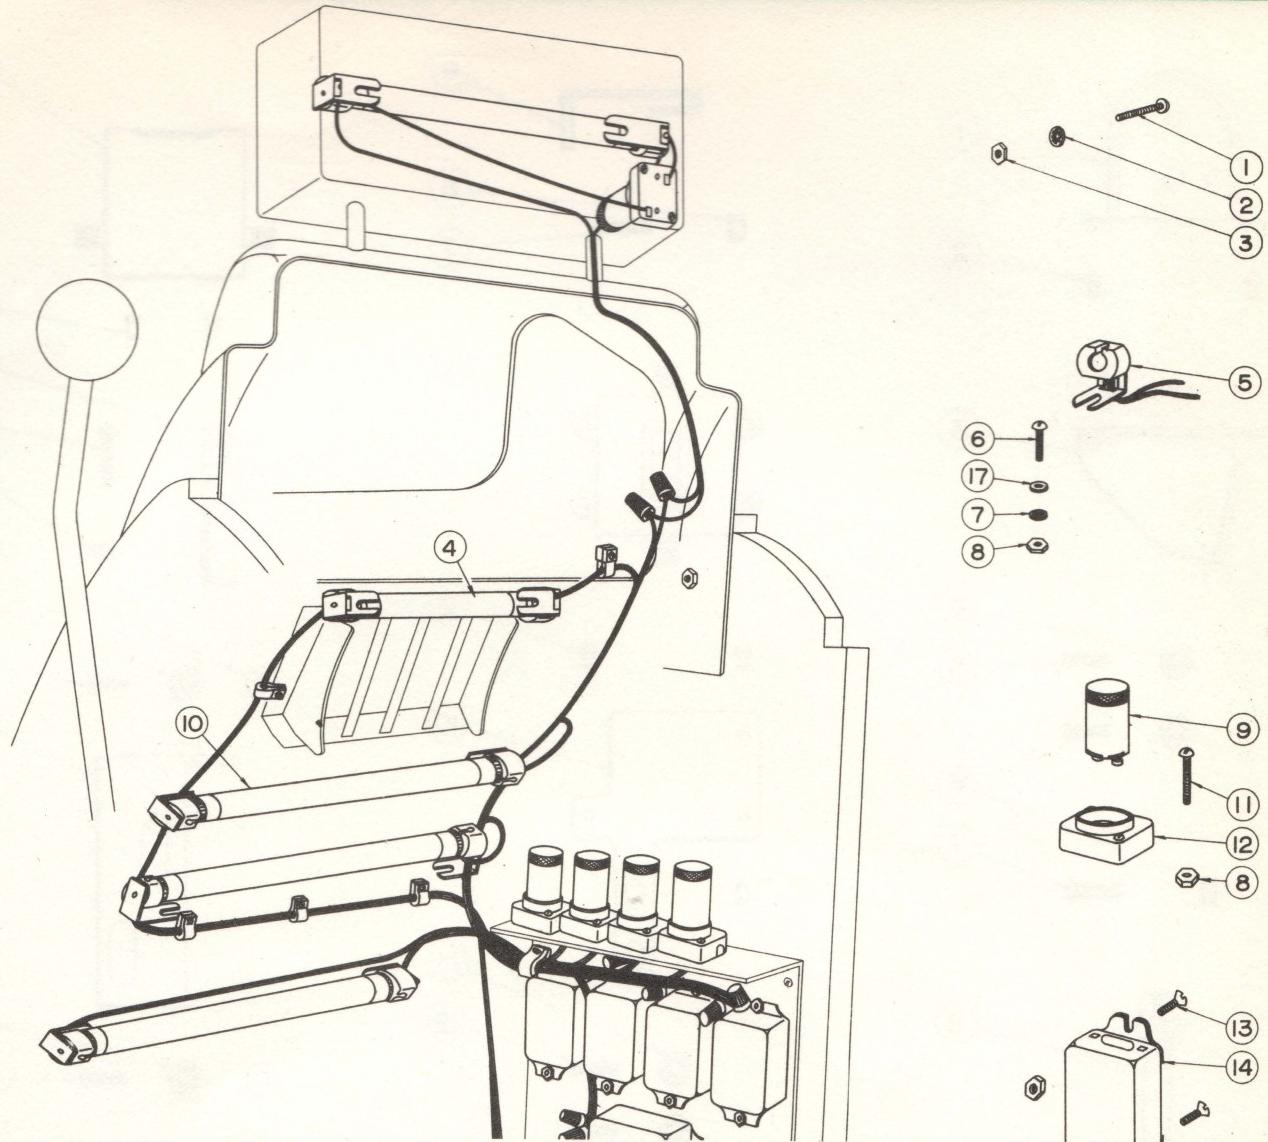**PARTS LIST****LIGHTING SYSTEM, SEGA STAR**

Item	Part No.	Description	Item	Part No.	Description
1	111-027	Machine Screw, R.H. #8-32 x 5/16	10	S-90199	Fluorescent Light, 6W
2	144-044	Lock Washer, Int. #8	11	111-022	Machine Screw, R.H. #6-32 x 3/4
3	133-012	Hex. Nut #8-32	12	S-90264	Socket, Starter, Fluor. Bayonet Type
4	S-90197	Fluorescent Light, 4W	13	111-086	Machine Screw, F.H. #8-32 x 5/16
5	S-90321-1	Socket & Cord Assy. Black/White	14	S-90172	Ballast Coil, 6W
	S-90321-2	Socket & Cord Assy. Black/Yellow		S-90650	Ballast Coil, 220V 6W
	S-90321-3	Socket & Cord Assy. Black/Gray	15	122-016	Wood Screw, R.H. 3.5 x 16
	S-90321-4	Socket & Cord Assy. Black/Blue	16	S-90182	Clamp, Cord, Plastic, 12.7mm I.D.
	S-90321-5	Socket & Cord Assy. Red/White		S-90181	Clamp, Cord, Plastic, 8mm I.D.
	S-90321-6	Socket & Cord Assy. Red/Yellow	17	144-023	Flat Washer, 9/64 - 3/8 x 0.6
	S-90321-7	Socket & Cord Assy. Red/Gray	18	S-90185	Clamp, T.V. Feeder Type, Plastic
	S-90321-8	Socket & Cord Assy. Red/Blue	19	S-90688-8	Cable, Captive Vinyl, 0.18 x 20 STR. x 3 Black
6	111-023	Machine Screw, R.H. #6-32 x 1/4	20	S-90233	Plug, AC, Rubber, Self-Locking Type
7	144-043	Lock Washer, Int. #6	21	S-90178	Connector, Speed
8	133-011	Hex. Nut #6-32	22	144-045	Lock Washer, Int. #10
9	S-90244	Starter, Fluor. Bayonet Type. FG-1P	23	133-014	Hex. Nut #10-24
	S-90245	Starter, Fluor. Bayonet Type, FG-4P			

THESE PARTS ARE FOR THE ABOVE MODEL ONLY. REFER TO  
RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS.


**SEGA PARTS CATALOG**

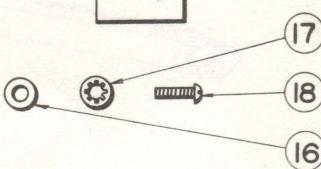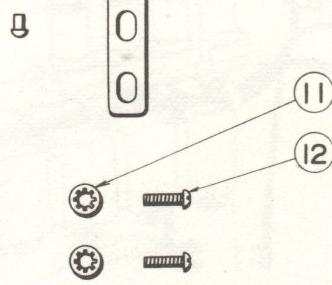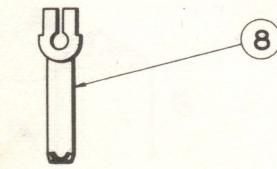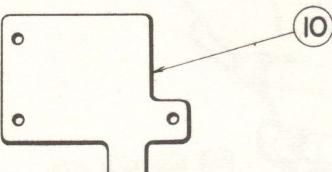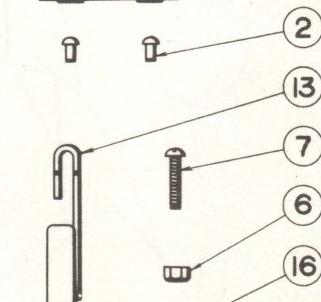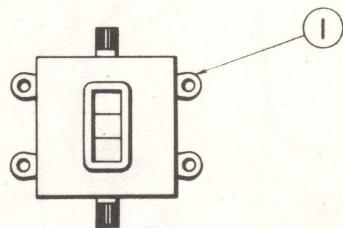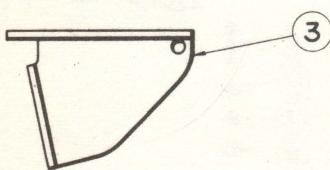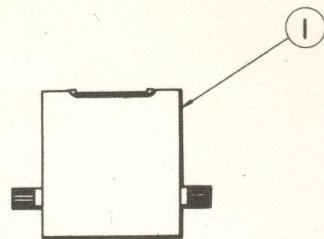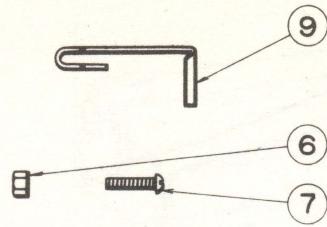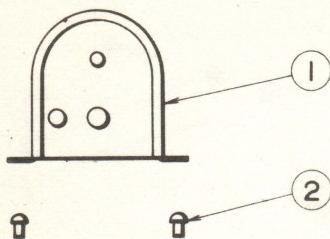

## PARTS LIST


### GUARANTEED PAYOUT METER

Item	Part No.	Description	Item	Part No.	Description
1	10J-10018	Meter, 3-Digit.	9	10N-10041	Arm for 777 Meter.
2	166-005	Rivet R.H. Aluminium, 2.5 x 6	10	10N-10026	Bracket, 7-7-7 Meter
3	10P-10056	Jackpot Meter Bracket, Payout Lever Position	11	144-044	Lock Washer Int. #8
4	144-043	Lock Washer Int. #6	12	111-026	Machine Screw, R.H. #8-32 x 1/4
5	111-023	Machine Screw, R.H. #6-32 x 1/4	13	10Q-1-10430	J.P. Meter Arm, Slide Position
6	133-010	Hex Nut, #4-40	16	144-013	Flat Washer, 7/32 - 1/2 x 1.2
7	111-009	Machine Screw, R.H. #4-40 x 1/2	17	144-045	Lock Washer, Int. #10
8	10P-10024	Arm For Regular J.P. Meter.	18	111-055	Machine Screw, R.H. #10-32 x 3/8
			19	10Q-10501	Meter Bracket, J.P. Installation

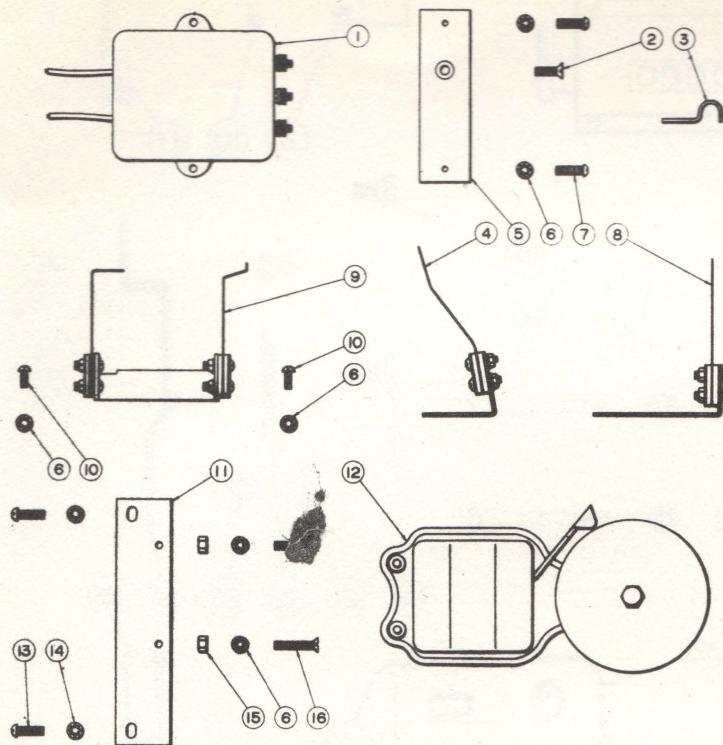

## Sega Star Jackpot Bell System

Item	Part No.	Description
1	SGB-1313	Jackpot Bell Transformer
2	111-087	Machine Screw F.H. #8-32 x 3/8
3	S-90609	Clamp Cord, Plastic, Half Round 5mm I.D.
4	SGB-1303	Contact Blade Assy, Cabinet
5	SGB-1310	Transformer Bracket
6	144-146	Lock Washer, Int., #4
7	111-103	Machine Screw R.H. #6-32 x 3/8
8	SGB-1305	Contact Blade Assy, Mechanism
9	SGB-1307	Contact Blade Assy, Jackpot
10	111-132	Machine Screw R.H. #6-32 x 3/16
11	SGB-1309	Bell Bracket
12	S-90171	Bell 3" 6V
13	111-027	Machine Screw R.H. #8-32 x 5/16
14	144-044	Lock Washer, Int., #8
15	133-010	Hex Nut #4-40
16	111-295	Machine Screw F.H. #4-40 x 1/2

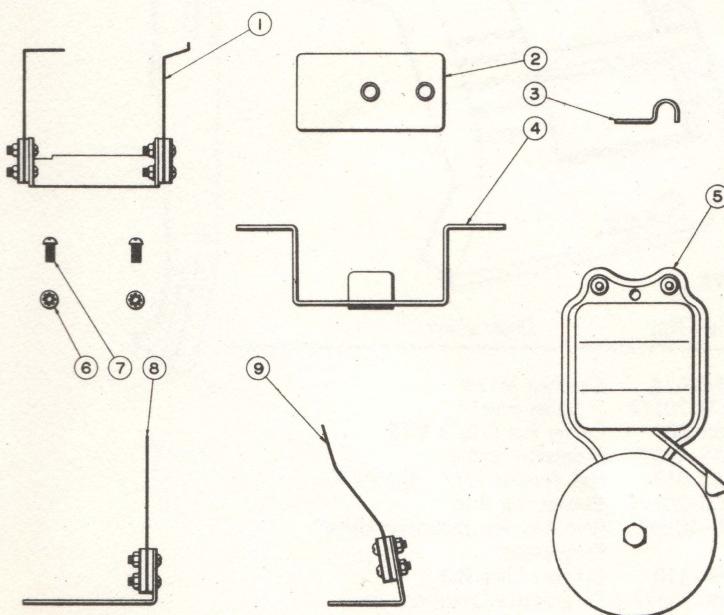


## Sega Bell Jackpot Bell System

Item	Part No.	Description
1	SGB-1307	Contact Blade Assy, J.P.
2	S-90169	Battery, Dry, 1.5V FM-4
3	S-90609	Clamp, Cord, Plastic, Half-Round, 5mm I.D.
4	SGB-1038	Battery Holder
5	90663	Bell, 3", 6V, 21 Bell
6	144-043	Lock Washer, Int., #6
7	111-132	Machine Screw R.H. #6-32 x 3/16
8	SGB-1305	Contact Blade Assy, Mechanism
9	SGB-1303	Contact Blade Assy, Cabinet

THESE PARTS ARE FOR THE ABOVE MODEL ONLY. REFER TO RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS.

SEGA PARTS CATALOG

# COIN MACHINE 16

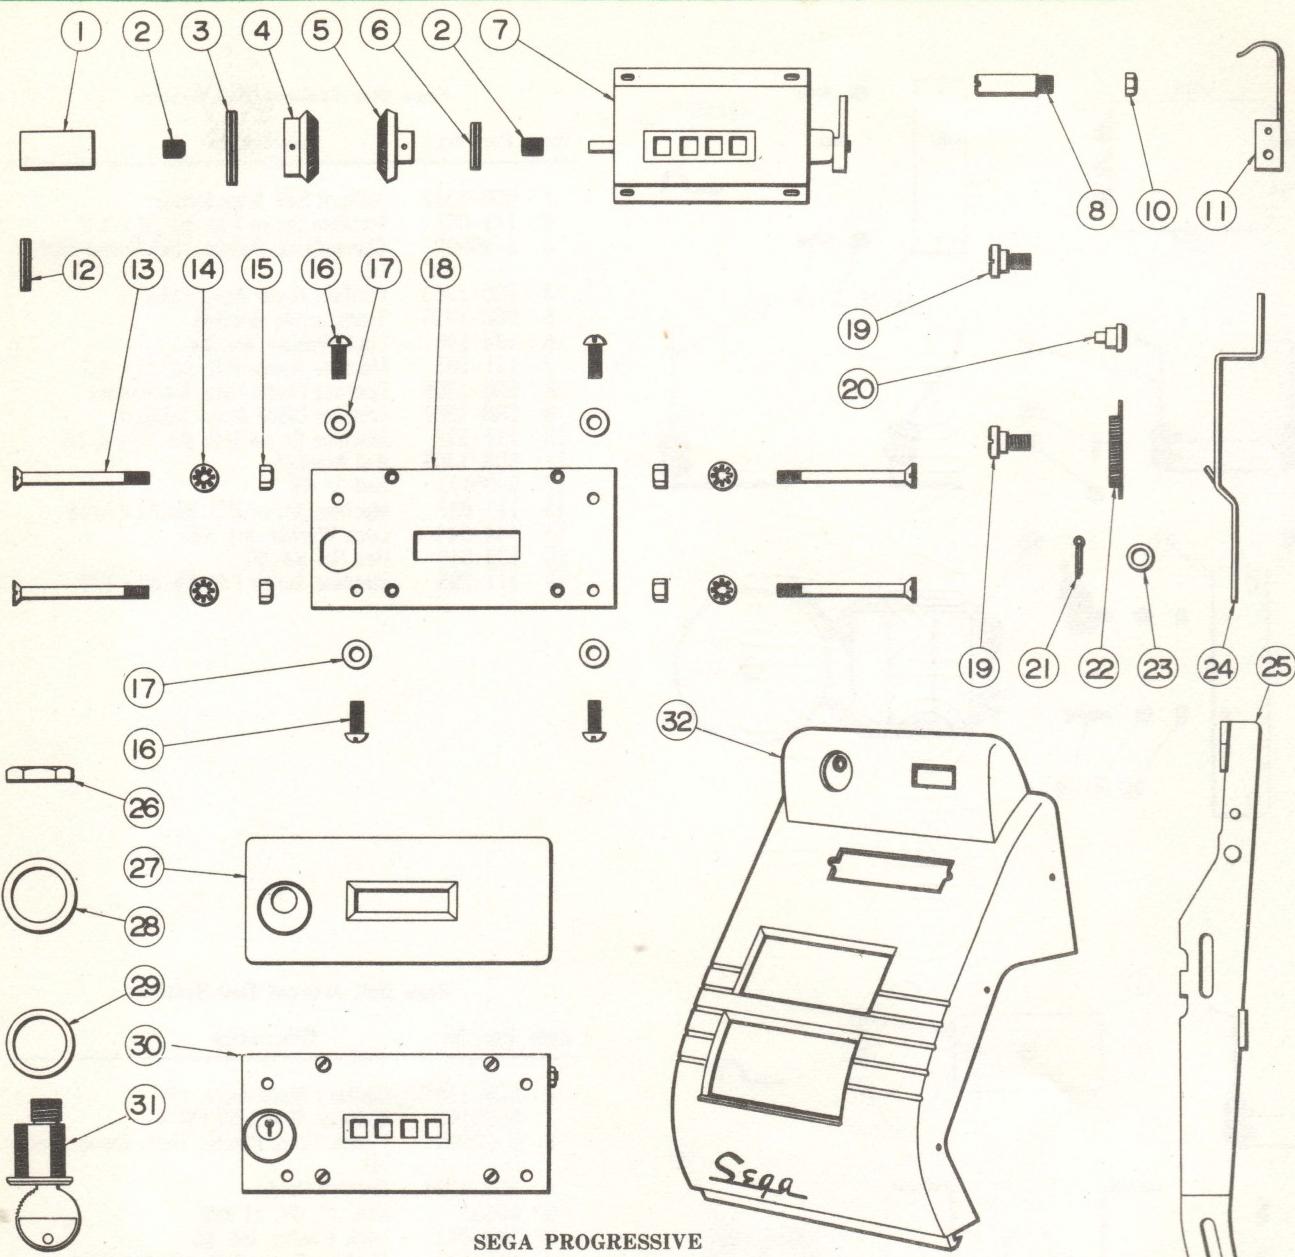


**SEGA PROGRESSIVE**

Item	Part No.	Description	Item	Part No.	Description
1	2ED-20283	Adaptor	19	6AC-674	Shoulder Screw
2	111-174	Set Screw, Hex Socket Cup Point, M3x4	20	2CU-20172	Shoulder Rivet
3	155-020	Roll Pin, 2 x 20	21	155-007	Cotter Pin 3/32 x 9/16
4	2EB-20281	Bevel Gear (Lock)	22	5AS-1887	Extension Spring
5	2EC-20282	Bevel Gear (Counter)	23	144-013	Flat Washer 7/32 - 1/2 x 1.2
6	155-022	Roll Pin, 1.5 x 10	24	2CU-20171	Connecting Arm
7	2DZ-20279	Progressive Counter RS-116 4 Digits	25	5N-10399	Coin Adv. Bar Operating Lever, Progressive
8	2FD-20363	Meter Arm Pin	26	PBF-110	Cylinder Lock Nut
10	2DY-20247	Hex. Nut #8-32, Special 1/4" O.D.	27	1BL-20277-1	Progressive Ornament, 5¢
11	2CW-20173	Operating Link		1BL-20277-2	Progressive Ornament, 10¢
12	155-021	Roll Pin, 1.5 x 12		1BL-20277-3	Progressive Ornament, 25¢
13	111-175	Machine Screw, F.H #8-32 x 2 1/8" S=3/8	28	2EK-20285	Flat Washer
14	144-043	Lock Washer Int, #6	29	2EE-1-20292	Lock Spacer Ring
15	133-011	Hex. Nut #6-32	30	2ET-20299	Progressive Counter & Reset Assy.
16	111-027	Machine Screw R.H #8-32 x 5/16	31	2EE-20284	Cylinder Lock (Reset)
17	144-022	Flat Washer 17/64-3/8 x 0.6	32	1C-20278	Upper Front Casting, Progressive, Front Reset
18	2EA-20280	Mounting Plate			

## SEGA PARTS CATALOG

THESE PARTS ARE FOR THE ABOVE MODEL ONLY. REFER TO RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS.

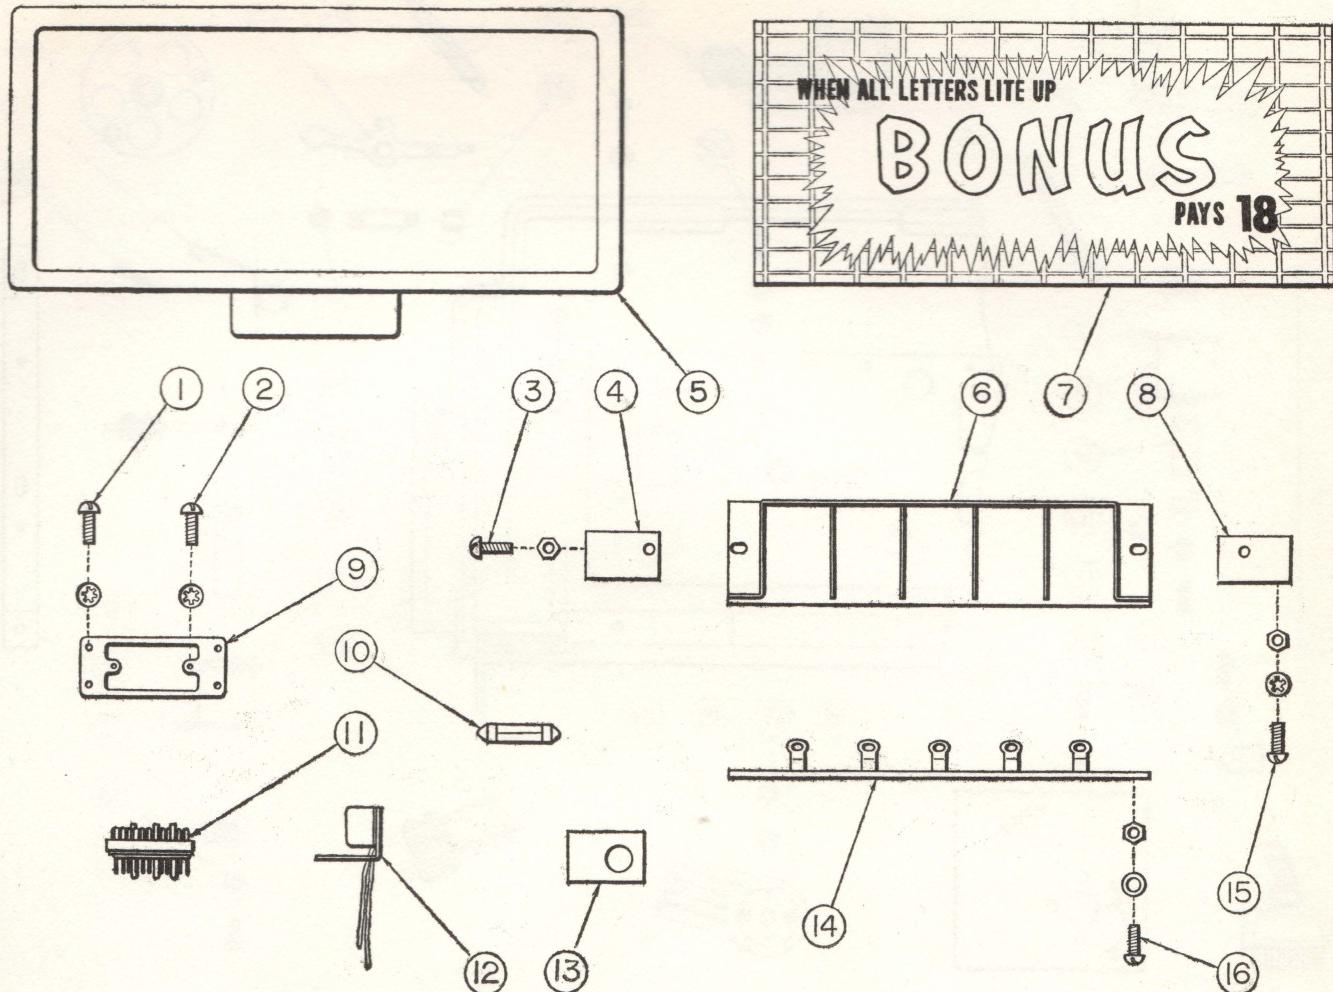

## Item Part No.

## Description

1	111-023 144-043	Machine Screw R.H. #6-32 x 1/4 Lock Washer Int. #6
2	111-085 144-043	Machine Screw R.H. #6-32 x 5/16 Lock Washer Int. #6
3	111-023 133-011	Machine Screw R.H. #6-32 x 1/4 Hex Nut #6-32
4	31024	Lamp Socket Bracket, Right
5	31020-1	Light Box, Connector Type
6	31022	Lamp Panel
7	1BD-20371	Billboard Glass, Bonus
8	31025	Lamp Socket Bracket, Left
9	90714	Connector Bracket


## Item Part No.

## Description


10	S-90458	Bulb Festoon Type 24V 3W 8 x 36
11	S-90713-2	Plug 15p
12	S-90321-3	Socket & Cord Assy.
13	31036	Glass Holding Plate
14	31023	Lamp Socket Assy.
15	111-085 144-043	Machine Screw R.H. #6-32 x 5/16 Lock Washer Int. #6
16	111-103 133-011 144-059	Machine Screw R.H. #6-32 x 3/8 Hex Nut. #6-32 Flat Washer 5/32-5/16 x 0.8

THESE PARTS ARE FOR THE ABOVE MODEL ONLY. REFER TO RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS.

SEGA PARTS CATALOG

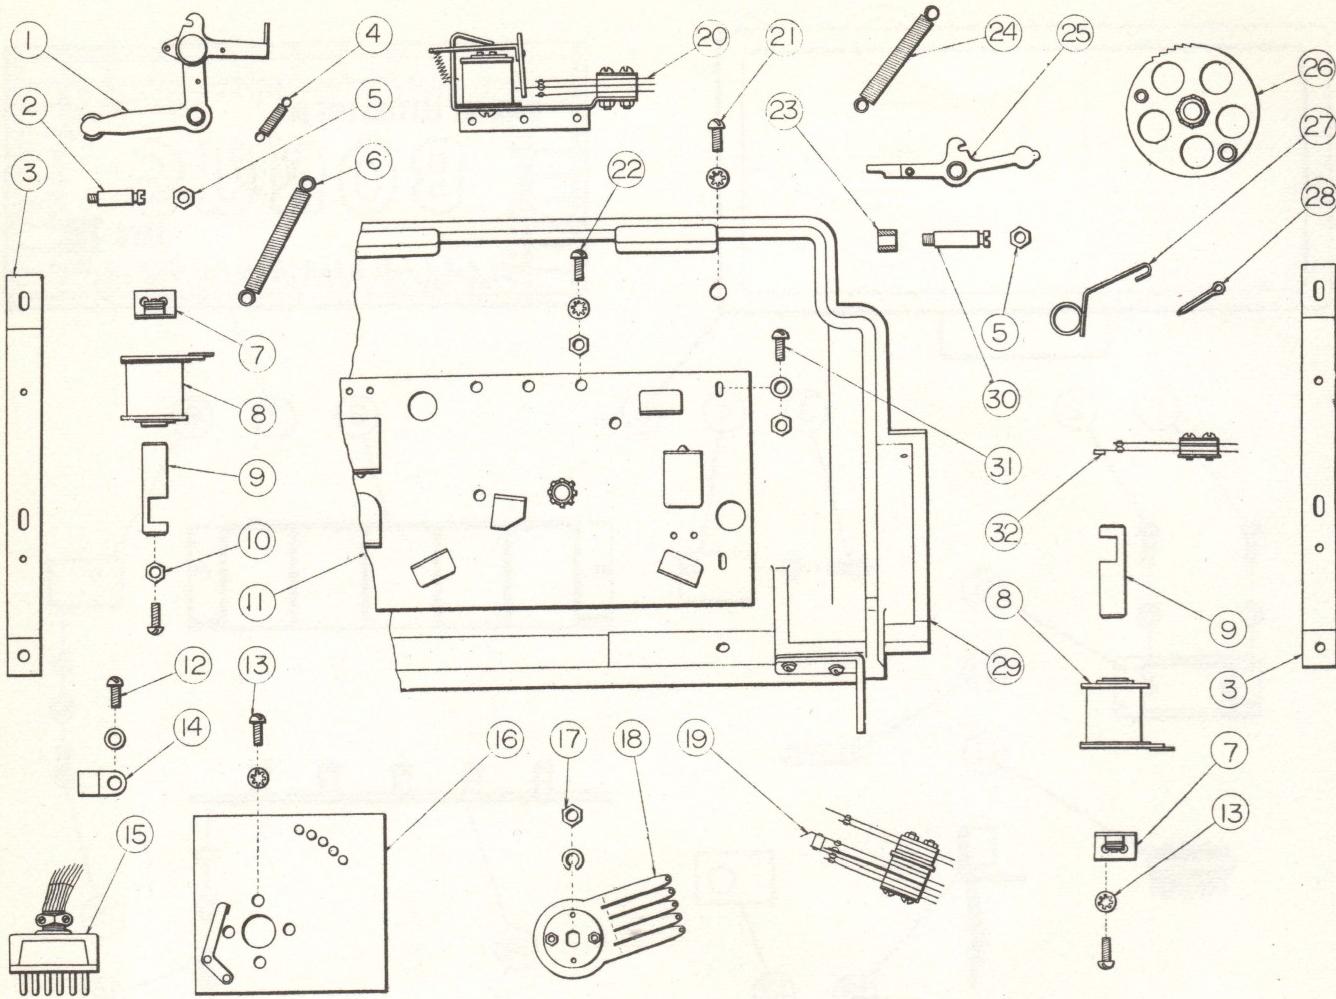


Item	Part No.	Description	Item	Part No.	Description	
1	90691	Step-up Lever	133-009		Hex Nut #5-40	
2	90061	Step-up Arm Post	144-041		Lock Washer Int. #5	
3	31009	Step-up Unit Bracket	20	31010	Switch Assy.	
4	AF-2308	Extension Spring	21	111-026	Machine Screw R.H. #8-32 x 1/4	
5	133-013	Hex-Nut #10-32		144-044	Lock Washer Int. #8	
6	90068	Extension Spring	22	111-037	Machine Screw R.H. #8-32 x 3/8	
7	90071	Coil Stop		133-012	Hex Nut #8-32	
8	202C-6H	Coil, JG Unit Reset		144-044	Lock Washer Int. #8	
9	90073	Reset Plunger	23	90070	Spring Spacer	
10	111-064	Machine Screw R.H. #10-32 x 1/2		24	90067	Extension Spring
	133-013	Hex Nut #10-32		25	90692	Reset Arm Assy.
11	31004	Step-up Unit Base		26	90690	Step-up Gear 6 Teeth Assy.
12	111-023	Machine Screw R.H. #6-32 x 1/4		27	90696	Reset Torsion Spring
	144-059	Flat Washer 5/32-5/16 x 0.8		28	155-002	Cotter Pin 1/8 x 1
13	111-023	Machine Screw R.H. #6-32 x 1/4		29	31002	Top Rear Casting Assy.
	144-043	Lock Washer Int. #6		30	90063	Reset Arm Post
14	S-90182	Clamp, Cord, Plastic 12.7m/m I.D.		31	111-085	Machine Screw R.H. #6-32 x 5/16
15	S-90700-2	Plug, 13p, Red TV-QP13A			144-059	Flat Washer 5/32-5/16 x 0.8
16	31007	Point Disc Assy.			133-011	Hex Nut #6-32
17	133-008	Hex Nut #1/4-20	32	31006	Switch Assy.	
	144-039	Spring Washer #1/4			111-401	Machine Screw R.H. #5-40 x 5/8
18	31008	Wiper Blade Assy.			133-009	Hex Nut #5-40
19	31005	Switch Assy.			144-041	Lock Washer Int. #5
	111-125	Machine Screw R.H. #5-40 x 1 3/16				

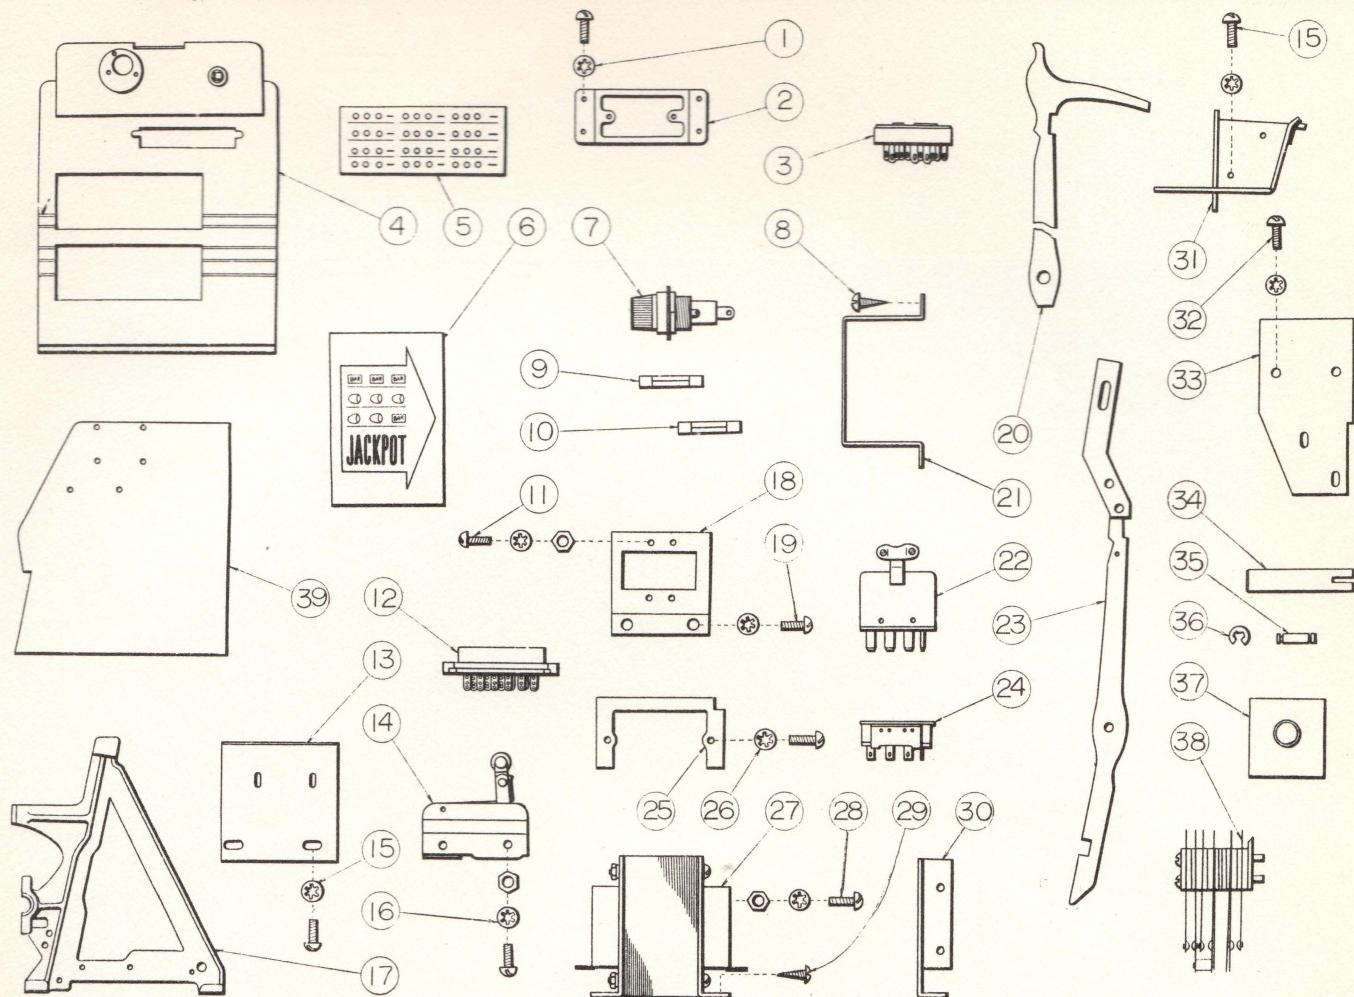

Item	Part No.	Description	Item	Part No.	Description
1	144-043	Lock Washer, Int. #6	144-044	Lock Washer, Int. #8	
	111-023	Machine Screw R.H. #6-32 x 1/4	20	31016	Advance Switch Lever
2	90714	Connector Bracket	21	90697	Fuse Holder Bracket Double
3	S-90713-1	Socket, 15p	22	S-90401-2	Plug, Block Type, 8p
4	31037	Upper Front Casting, Connector Type	23	31031	Bonus Payout Lever
5	2BF-20379	Reward Glass, 3J.P. No Star	24	S-90401-1	Socket, Block Type, 8p
6	1Y-20380	Reel Window Ornament, 3 J.P. No Star	25	31014	Socket Clamp
7	S-90637	Fuse Holder, w/Bayonet Cap	26	111-004	Machine Screw R.H. M3 x 10
8	122-008	Wood Screw, R.H. 4.1 x 13	27	144-075	Lock Washer Int. M3
9	S-90711	Fuse, 3 Amp, 6.4x x 30	28	90699	Transformer, Power, 110-28V 1.5A
10	S-90645	Fuse, 1 Amp, 6.4x x 30	29	111-024	Machine Screw R.H. #6-32 x 1 3/4
11	111-082	Machine Screw R.H. #5-40 x 1/4	30	144-043	Lock Washer Int. #6
12	144-041	Lock Washer, Int. #5	31	133-011	Hex Nut #6-32
13	133-099	Hex Nut #5-40	32	122-009	Wood Screw R.H. 4.1 x 16
14	S-90700-1	Socket, 13p, Red TV-QS 13A	33	31032	Transformer Bracket
15	PC-318	Micro Switch, Bracket	34	31033	Payout Guide & Bracket
16	S-90353	Switch, Micro Type	35	144-043	Lock Washer Int. #6
17	111-026	Machine Screw R.H. #8-32 x 1/4	36	111-132	Machine Screw R.H. #6-32 x 3/16
18	144-044	Lock Washer, Int. #8	37	31030	Coil Bracket
19	111-236	Machine Screw R.H. #5-40 x 15/16	38	31028	Solenoid Plunger
20	144-041	Lock Washer, Int. #5	39	31027	Link Pin
21	133-009	Hex Nut #5-40	40	144-048	E. Washer 3.2m/m
22	PC-315	L.H. Side Frame	41	211C-12	Coil, Bonus Star
23	31013	Bracket, Multi. Socket 8p	42	31029	Switch Assy.
24	111-035	Machine Screw R.H. #8-32 x 3/16	43	111-403	Machine Screw R.H. #5-40 x 1 7/6
			44	144-041	Lock Washer Int. #5
			45	133-009	Hex Nut #5-40
			46	31019	L.H. Guard Plate

THESE PARTS ARE FOR THE ABOVE MODEL ONLY. REFER TO RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS.

SEGA PARTS CATALOG

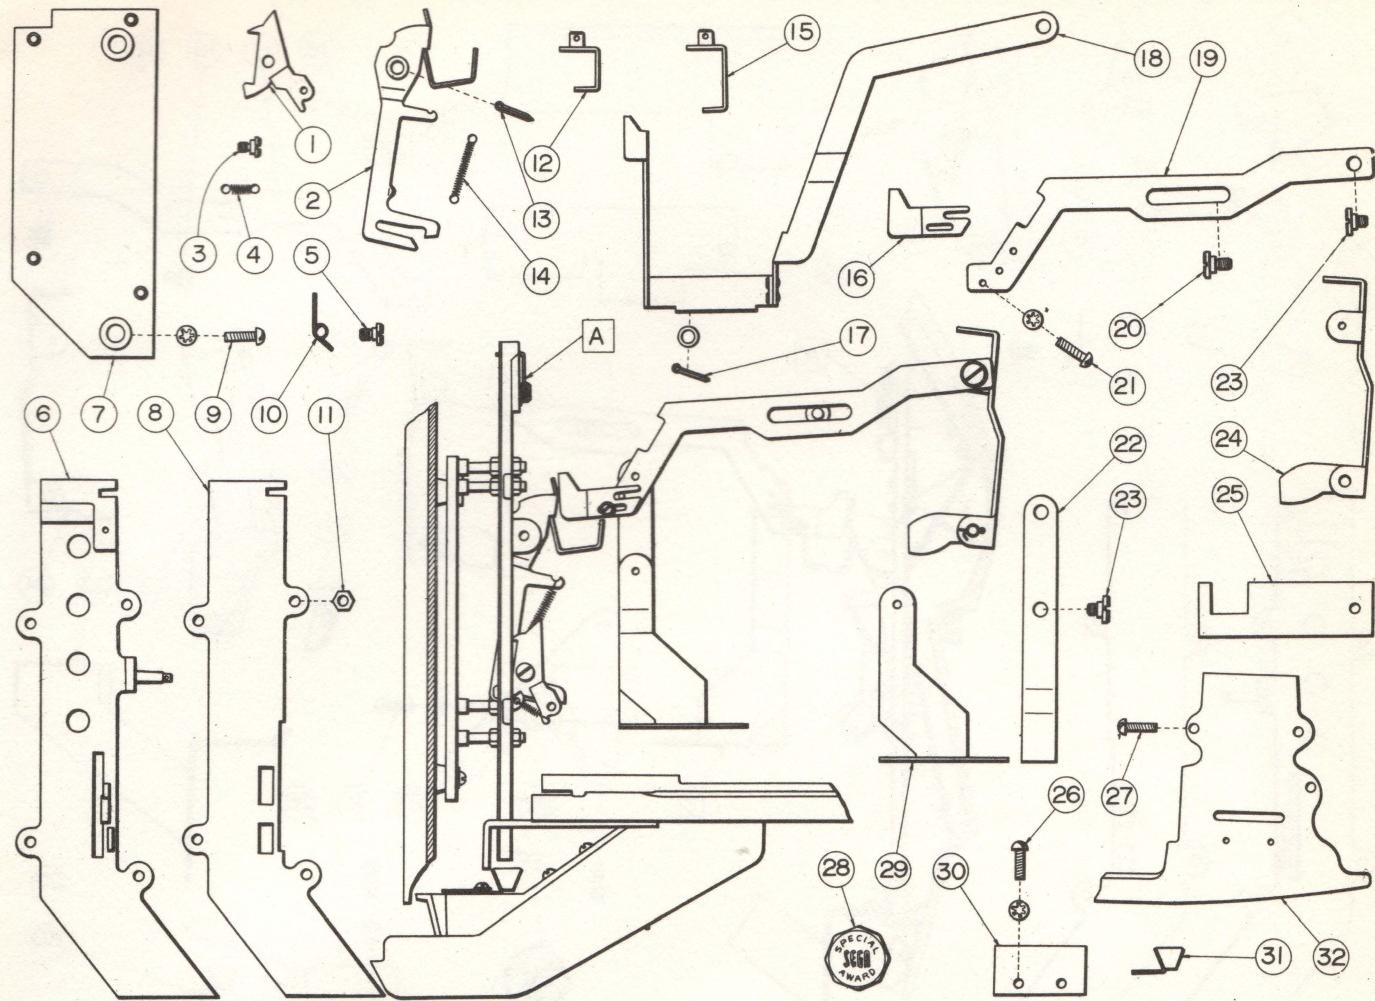


Item	Part No.	Description
1	9X-10758	Token Release Finger Assy.
2	9W-10753	Token Release Arm Assy.
3	9U-10756	Shoulder Screw, Token Holding Lever
4	9T-10755	Extension Spring, Token Release Finger
5	9Y-10759	Shoulder Screw, Token Stop Spring
6	9R1-10754	Token Chute
7	9AW-10747	Token Chute Unit Bracket
8	9AB-10752	Token Chute Cover
9	111-032	Machine Screw, R.H. #8-32x1/2
10	144-122	Flat Washer, 4.4 x 16 x 1.6
11	9Z-10760	Token Stop Spring
11	133-012	Hex Nut, #8-32
12	3BX-10748	Guide Bracket, (for 1d 20 pay)
13	155-014	Cotter Pin, 1/16 x 1/2
14	144-016	Flat Washer 7/32 - 1/2 x 0.5
14	9S-10757	Extension Spring, Token Release Lever
15	3BX-10749	Guide Bracket, (for 1d 12 pay)
16	3CD-10841	Push Bar Tip
17	155-004	Cotter Pin, 1/16 x 5/8
18	144-010	Flat Washer, 21/64 - 9/16 x 0.5
18	3J-10761	Token Release Push Bar Assy. (for 1d)

Item	Part No.	Description
19	3J-10840	Award Check Release Push Bar
20	3K-10842	Shoulder Screw
	144-010	Flat Washer 21/64 - 9/16 x 0.5
21	144-043	Lock Washer, Int. #6
	111-132	Machine Screw R.H. #6 - 32 x 3/16
22	3BZ-10828	Token Release Operating Bar (for JP)
23	3BY-10767	Shoulder Screw
24	3AR-9118	Disc Stop Lever
25	2AU-10765	Front Mounting Bracket
26	111-037	Machine Screw, R.H. #8 - 32 x 3/8
	144-044	Lock Washer, Int. #8
27	111-027	Machine Screw, R.H. #8 - 32 x 5/16
28	9AC-10763	Award Token
29	3CA-10829	Token Release Operating Bracket
	144-045	Lock Washer Int. #10
	133-013	Hex Nut #10 - 32
30	1P-10751	Money Bowl Chute Cover
31	1P-10750	Money Bowl Chute
32	1P-10762	Money Bowl Cover, Token Chute Type
A	9AV-10746	Token Chute Unit


THESE PARTS ARE FOR THE ABOVE MODEL ONLY. REFER TO RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS.

SEGA PARTS CATALOG

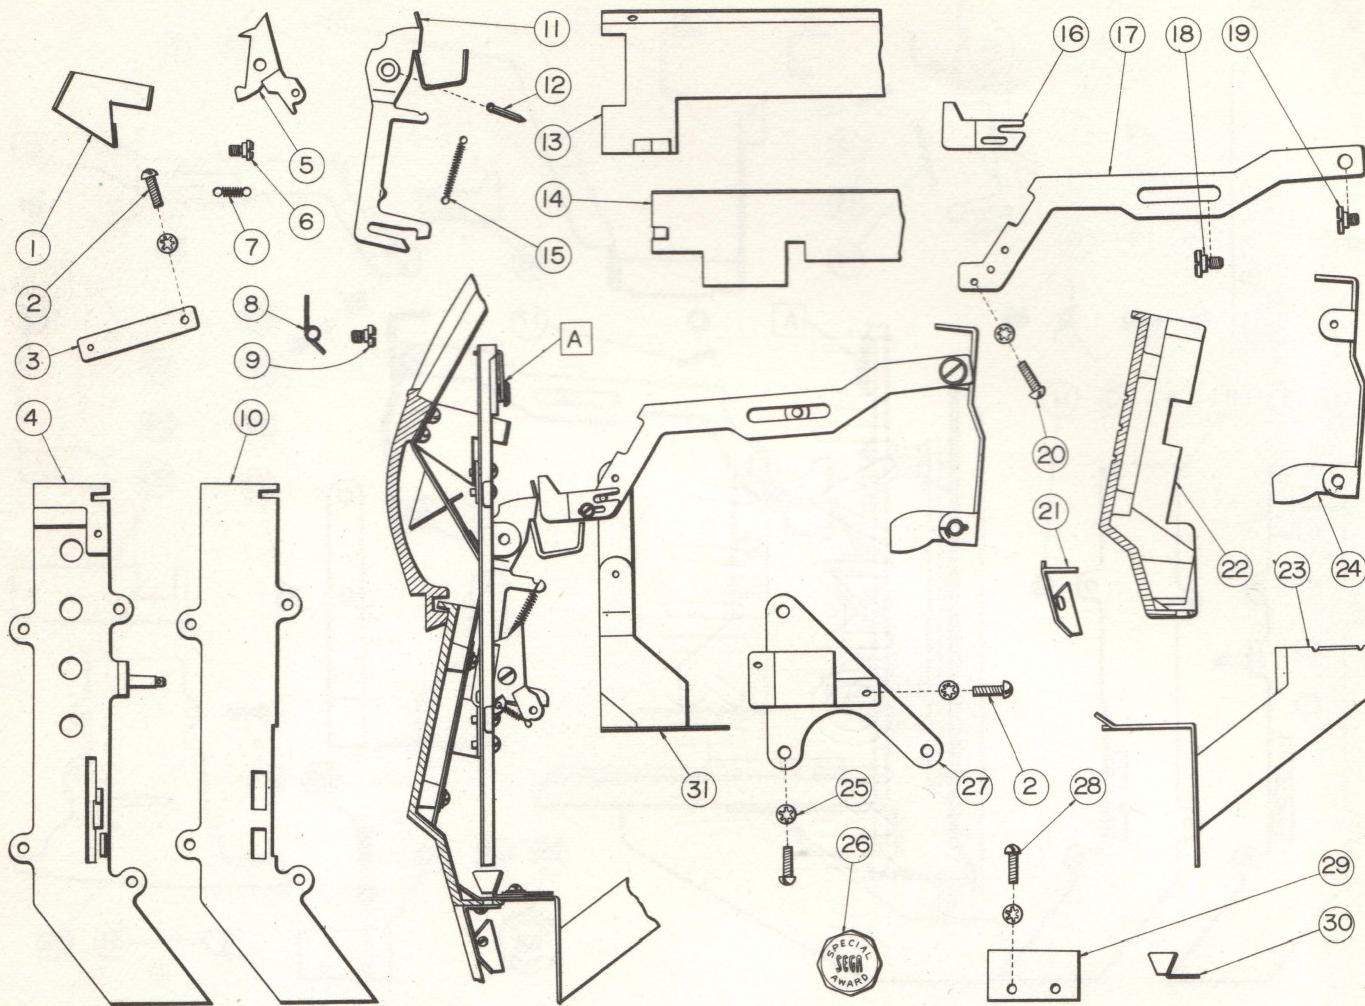

Item	Part No.	Description
1	9AY-20504	Upper Bracket, Token Chute Unit
2	111-032	Machine Screw, R.H. #8-32 x 1/2
	144-044	Lock Washer, Int. #8
3	9AZ-20506	Chute Cover Bracket
4	9R1-10754	Token Chute
5	9X-10758	Token Release Finger Assy.
6	9U-10756	Shoulder Screw, Token Holding Lever
7	9T-10755	Extension Spring, Token Release Finger
8	9Z-10760	Token Stop Spring
9	9Y-10759	Shoulder Screw, Token Stop Spring
10	9AB-10752	Token Chute Cover
11	9W-10753	Token Release Arm Assy.
12	155-014	Cotter Pin 1/16 x 1/2
	144-016	Flat Washer 7/32 - 1/2 x 0.5
13	2BU-20507	Lower Light Bracket, Token Type
14	2BU-20508	Sliding Door, Token Type
15	9S-10757	Extension Spring, Token Release Lever
16	3CD-10841	Push Bar Tip
17	3J-10840	Award Check Release Push Bar

Item	Part No.	Description
18	3K-10842	Shoulder Screw
	144-010	Flat Washer 21/64 - 9/16 x 0.5
19	3BY-10767	Shoulder Screw
20	144-043	Lock Washer, Int. #6
	111-132	Machine Screw, R. H. #6-32 x 3/16
21	1BP-21039	Jackpot Protector
22	1D-21037	Lower Casting, Token Type
23	1AF-21038	Payout Chute & Bracket
24	3AR-9118	Disc Stop Lever
25	111-027	Machine Screw, R. H. #8-32 x 5/16
	144-044	Lock Washer, Int. #8
26	9AC-10763	Award Token
27	9AX-20505	Lower Bracket, Token Chute Unit
28	111-037	Machine Screw, R. H. #8-32 x 3/8
	144-044	Lock Washer, Int. #8
29	1P-10751	Money Bowl Chute Cover
30	1P-10750	Money Bowl Chute
31	(See Item 22, 23 and 29 on the back page)	
A	9AV-10746	Token Chute Unit

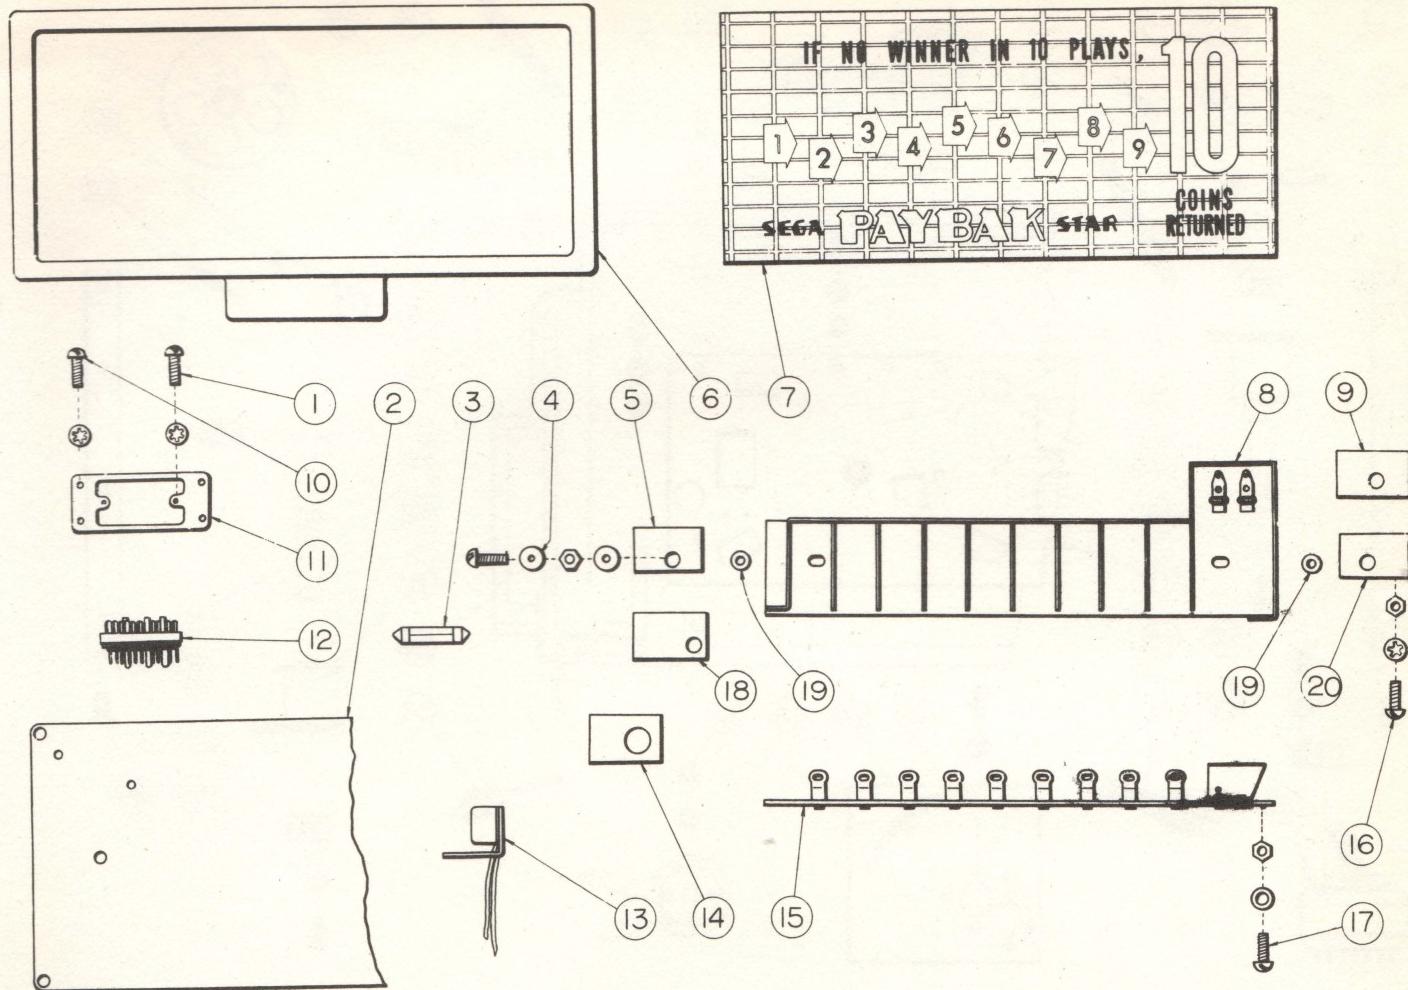


Item Part No.	Description
1 - 111-085 144-043	Machine Screw R.H. #6-32 x 5/16 Lock Washer Int. #6
2 32007	Light Box, Back Plate
3 S-90722	Bulb, Festoon Type, 28V 3W 8 x 36
4 111-103 32042 133-011	Machine Screw R.H. #6-32 x 1/4 Insulator Washer Hex Nut, #6-32
5 32009	Lamp Socket Bracket, Left
6 31020-1	Light Box, Connector Type
7 IBD-20388	Billboard Glass, Paybak
8 32010	Lamp Panel
9 32041	Insulator Plate, Left
10 111-023 144-043	Machine Screw R.H. #6-32 x 1/4 Lock Washer, Int. #6

Item Part No.	Description
11 90714	Connector Bracket
12 S-90713-2	Plug, 15P
13 S-90321-7	Socket & Cord Assy.
14 31036	Glass Holding Plate
15 32011	Lamp Socket Assy.
16 111-085 144-043	Machine Screw R.H. #6-32 x 5/16 Flat Washer, Int. #6
17 111-103 133-011	Machine Screw R.H. #6-32 x 3/8 Hex Nut, #6-32
18 32040	Insulator Plate, Right
19 32043	Insulator Tube
20 31024	Lamp Socket Bracket, Right


THESE PARTS ARE FOR THE ABOVE MODEL ONLY. REFER TO RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS.

SEGA PARTS CATALOG

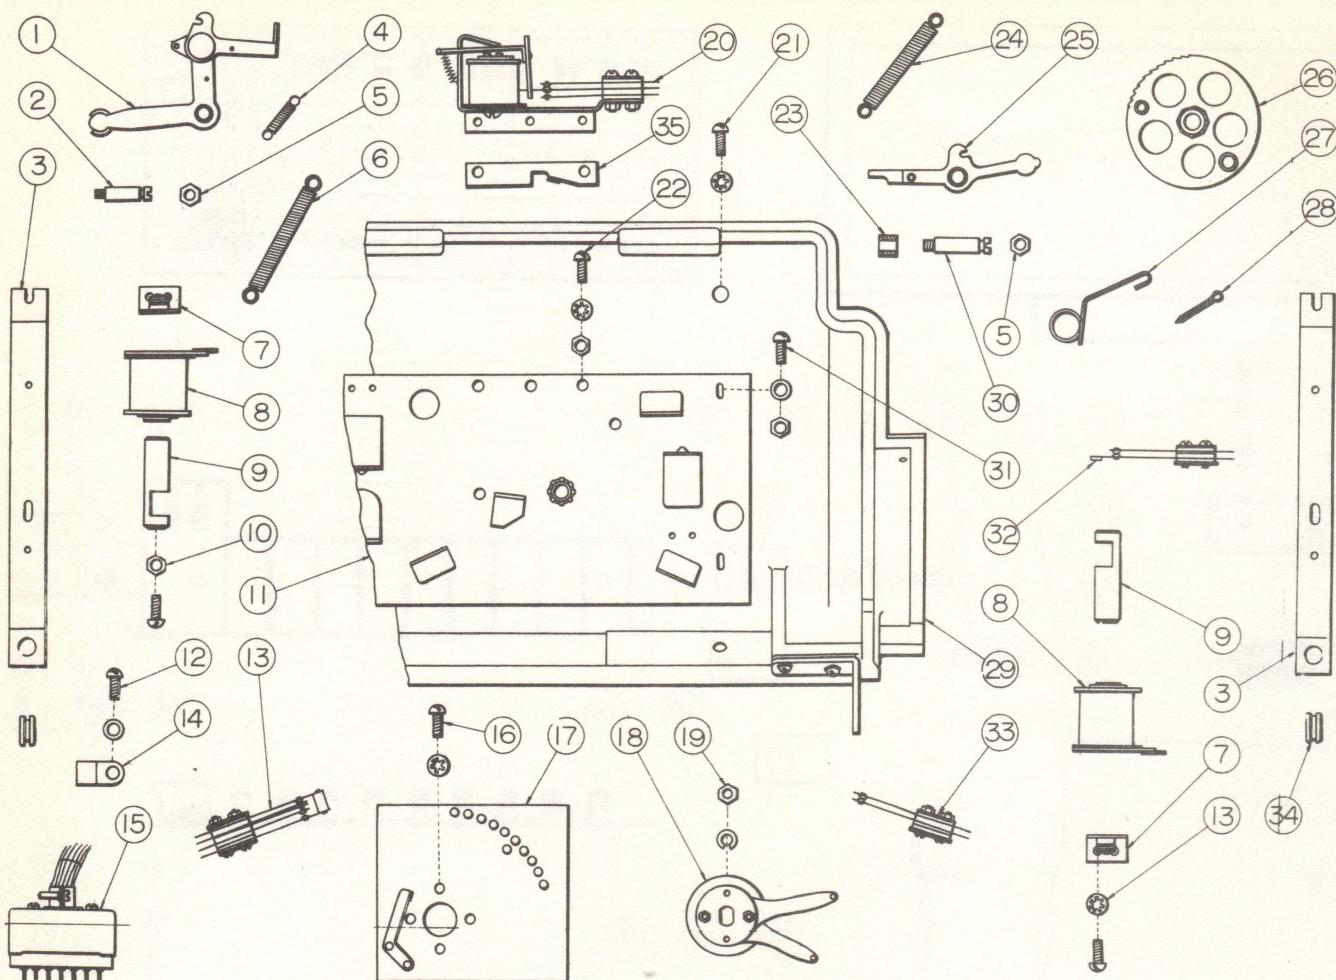

Item	Part No.	Description
1	90691	Step-up Lever
2	90061	Step-up Arm Post
3	31009	Step-up Unit Bracket
4	AF-2308	Extension Spring
5	133-013	Hex Nut, #10-32
6	90068	Extension Spring
7	90071	Coil Stop
8	202C-6H	Coil, JG Unit Reset
9	90073	Reset Plunger
10	133-013	Hex Nut, #10-32
11	111-064	Machine Screw R.H. #10-32 x 1/2
12	31004	Step-up Unit Base
13	111-023	Machine Screw R.H. #6-32 x 1/4
14	144-059	Flat Washer, 5/32-5/16 x 0.8
15	32005	Switch Assy.
16	133-009	Hex Nut, #5-40
17	144-041	Lock Washer Int. #5
18	111-105	Machine Screw, R.H. #5-40 x 3/4
19	S-90182	Clamp, Cord, Plastic, 12.7m/m 1.D
20	S-90703-2	Plug, 20P CL 204-1 Red
21	111-023	Machine Screw R.H. #6-32 x 1/4
22	144-043	Lock Washer, Int. #6
23	32022	Point Disc Assy.
24	32003	Wiper Blade Assy.
25	144-039	Spring Washer, 1/4"
26	133-008	Hex Nut, #1/4-20
27	20	Switch Assy.

Item	Part No.	Description
21	111-026	Machine Screw R.H. #8-32 x 1/4
	144-044	Lock Washer Int. #8
22	111-037	Machine Screw R.H. #8-32 x 3/8
	133-012	Hex Nut, #8-32
	144 044	Lock Washer Int. #8
23	90070	Spring Spacer
	24 90067	Extension Spring
	25 90692	Reset Arm Assy.
	26 90708	Step-up Gear Assy. 11 Teeth
	27 90696	Reset Torsion Spring
	28 155-002	Cotter Pin, 1/8 x 1
	29 31002	Top Rear Casting Assy.
	30 90063	Reset Arm Post
	31 111-085	Machine Screw R.H. #6-32 x 5/16
	144-059	Flat Washer 5/32-5/16 x 0.8
	133-011	Hex Nut, #6-32
32	31006	Switch Assy.
	133-009	Hex Nut, #5-40
	111-401	Machine Screw R.H. #5-40 x 5/8
	144-041	Lock Washer Int. #5
33	32004	Switch Assy.
	111-386	Machine Screw R.H. #5-40 x 9/16
	133-009	Hex Nut, #5-40
	144-041	Lock Washer Int. #5
	34 90008	Rubber Bushing
	35 31041	Pawl Stopper

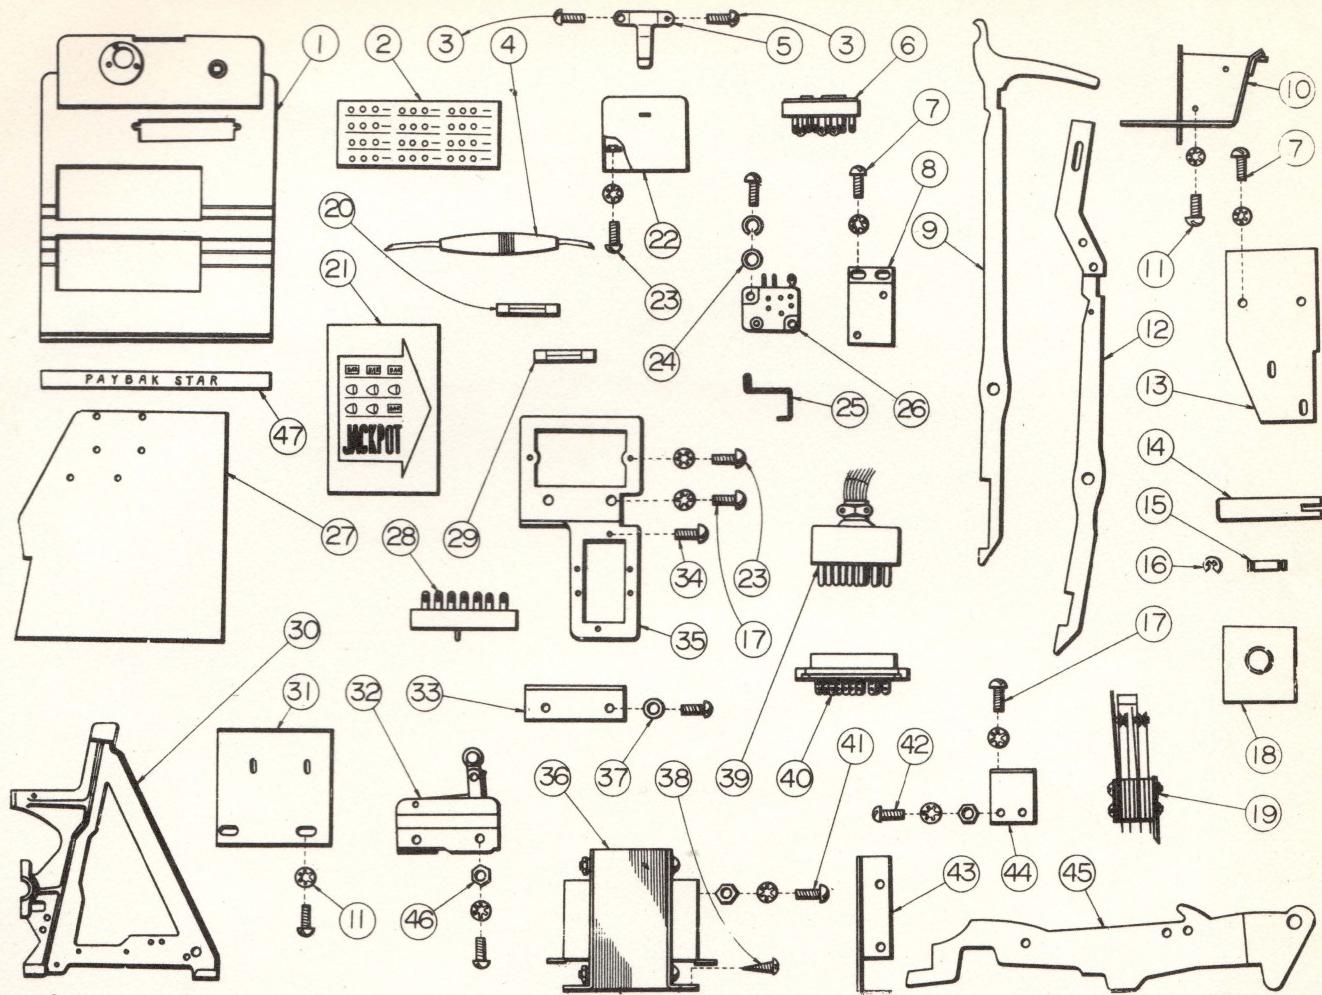

Item Part No.	Description	Item Part No.	Description
1 31037	Upper Front Casting, Connector Type	24 111-113	Machine Screw R.H. #4-40 x 3/4
2 2BF-20387	Reward Glass, Paybak	144-020	Flat Washer 9/64-3/8 x 0.8
3 111-004	Machine Screw R.H. M3 x 10	144-032	Spring Washer, #4
4 S-90731	Fuse Holder, Single Connector Type	25 32039	Micro Switch Finger
5 90737	Junction Shell Cord Clamp	26 S-90649	Switch, Micro Type, V4-14
6 S-90713-1	Socket, 15P	27 32019	L.H. Guard Plate
7 111-132	Machine Screw R.H. #6-32 x 3/16	28 S-90703-1	Socket, 20P CL 204-4, Red
144-043	Lock Washer, Int. #6	29 S-90645	Fuse, 1 Amp. 6.4φ x 30
8 32038	Micro Switch Bracket	30 32034	L.H. Side Frame, Paybak
9 32018	2 Payout Lever, 6d, 10¢	31 PC-318	Micro Switch Bracket
32030	2 Payout Lever, 5¢, 25¢	32 S-90353	Switch, Micro Type, AM 1543
10 31015	Payout Guide & Bracket	33 32032	Transformer Bracket
11 111-026	Machine Screw R.H. #8-32 x 1/4	34 111-016	Machine Screw R.H. #5-40 x 1/2
144-044	Lock Washer, Int. #8	35 32031	Connector Bracket
12 32017	Paybak Payout Lever Assy. 6d	36 90735	Transformer, Power 120-28V 1.5A
32029	Paybak Payout Lever, 25¢	37 111-026	Machine Screw R.H. #8-32 x 1/4
32028	Paybak Payout Lever, 5¢	144-078	Flat Washer, M4
13 32016	Coil Bracket	38 122-009	Wood Screw R.H. 4.1 x 16
14 31028	Solenoid Plunger	39 S-90574-2	Plug, 13P. TV-QS 13A
15 31027	Link Pin	40 S-90574-1	Socket, 13P. TV-QR 13A
16 144-048	E-Washer 3.2m/m	41 111-024	Machine Screw R.H. #6-32 x 1 3/4
17 111-035	Machine Screw R.H. #8-32 x 3/16	144-043	Lock Washer Int. #6
144-044	Lock Washer, Int. #8	133-011	Hex Nut, #6-32
18 211C-12	Coil, Bonus Star	42 111-124	Machine Screw R.H. #5-40 x 7/8
19 32025	Switch Assy.	114-041	Lock Washer, Int. #5
111-124	Machine Screw R.H. #5-40 x 7/8	133-009	Hex Nut, #5-40
133-009	Hex Nut, #5-40	43 31033	Transformer Bracket
144-041	Lock Washer Int. #5	44 32036	Stopper Lever Switch Bracket
20 S-90711	Fuse, 3 Amp. Japanese Size 6.4φ x 30	45 32012	Reel Timing Lever
21 Y-20380	Reel Window Ornament 3 J.P. No. Star	46 111-236	Machine Screw R.H. #5-40 x 15/16
22 90736	Junctoin Shell	144-041	Lock Washer, Int. #5
23 111-004	Machine Screw R.H. M3 x 10	133-009	Hex Nnt, #5-40
144-075	Lock Washer, Int. M3	47 1Z-20393	Name Plate, Paybak Star

THESE PARTS ARE FOR THE ABOVE MODEL ONLY. REFER TO  
RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS.

SEGA PARTS CATALOG

PARTS LIST

SUPPLEMENT (A)

**ENGLISH 6d**

Section	Page	Item	Part No.	Description
1	1	38	1X-20231	Denominator, 6d
1	3	3	1X-1-10022	Denominator Button, 6d
3	1	57	3B1-10502	Safety Slide, 6d 1¢
3	1	56	3B2-10503	Bottom Slide, 6d
3	1	55	3B3-10401	5 Payout Slide, 6d
3	1	54	3B4-10402	10 Payout Slide, 6d
3	1	53	3B5-10403	14-18 Payout Slide, 6d
3	1	52	3B6-10504	Top Payout Slide, 6d, 1¢
3	1	51	3C-10505	Payout Slide Cover, 6d
3	1	37	3BE-10506	Service Post, 6d
3	1	47	3BE-10507	Service Post, Adjustable, 6d
4	1	14	4X-10508	Coin Tube, 6d
			7G-2917	Coin Holding Lever Assy. 10¢ 6d

**ENGLISH 1d**

Section	Page	Item	Part No.	Description
1	3	21	1R-10565	Reward Plate, E. Penny 12 Pay
1	1	38	1X-20339	Denominator, 1d
1	3	3	1X-1-10564	Denominator Button, 1d
1	1	42	1Y-20340	Reel Window Ornament, E. Penny
1	3	17	1Y-10563	Reel Window Ornament, E. Penny "3 Bars Pays 12"
1	1	49	1Z-20342	Name Plate, "Copper Star"
1	3	16	1Z-10594	Name Plate, "Copper Segs"
1	1	64	1AF-20345	Payout Chute & Bracket, 1d, 50¢ & \$
1	1	34	1BD-20338	Bill Board Glass, E. Penny
2	1	34	2BF-20337	Reward Glass, E. Penny
2	1	48	2Z-20343	Cash Box, E. Penny
2	5	37	2Z-10602	Cash Box, E. Penny
3	1	68	3A-10611	Mechanism Base, 50¢, E. Penny
3	1	56	3B2-10536	Bottom Slide, E. Penny, 12 Pay
3	1	—	3B-10537	4 Payout Slide, E. Penny, 12 Pay
3	1	—	3B-10538	6 Payout Slide, E. Penny, 12 Pay
3	1	—	3B-10539	8 Payout Slide, E. Penny, 12 Pay
3	1	—	3B-10540	10 Payout Slide, E. Penny, 12 Pay
3	1	—	3B-10541	12 Payout Slide, E. Penny, 12 Pay
3	1	—	3B-10557	Bottom Slide Spring, E. Penny, 12 Pay
3	1	—	3B-10558	4-6 Payout Slide Spring, E. Penny, 12 Pay
3	1	—	3B-10559	8 Payout Slide Spring, E. Penny, 12 Pay
3	1	—	3B-10560	10 Payout Slide Spring, E. Penny, 12 Pay
3	1	—	3B-10561	12 Payout Slide Spring, E. Penny, 12 Pay
3	1	56	3B2-10480	Bottom Slide, E. Penny
3	1	55	3B3-10475	5 Payout Slide, E. Penny
3	1	54	3B4-10476	10 Payout Slide, E. Penny
3	1	53	3B5-10699	14-18 Payout Slide, E. Penny
3	1	52	3B6-10479	Top Payout Slide, E. Penny
3	1	51	3C-10542	Payout Slide Cover, E. Penny
3	1	45	3D-10532	Payout Slide Stop, E. Penny
3	1	24	3AF-10612	Payout Slide Push Bar, E. Penny
3	1	64	3AH-10610	Payout Slide Stop Lever, E. Penny
3	1	37	3BE-10534	Service Post, E. Penny, 12 Pay
3	1	47	3BE-10533	Service Post, Adjustable, E. Penny, 12 Pay
3	1	37	3BE-10656	Service Post, E. Penny, 2-20 Pay
3	1	47	3BE-10657	Service Post, Adjustable, E. Penny 2-20 Pay
4	1	14	4X-10549	Coin Tube, E. Penny, 12 Pay
4	1	14	4X-10658	Coin Tube, E. Penny, 2-20 Pay
4	1	30	4AG-10546	Reel Disc, E. Penny, SG-1E
4	1	30	4AG-10547	Reel Disc, E. Penny, SG-2E
4	1	30	4AG-10548	Reel Disc, E. Penny, SG-3E
4	1	30	4AG-10605	Reel Disc, E. Penny, SG-1EL
4	1	30	4AG-10606	Reel Disc, E. Penny, SG-3EL
4	1	4	4AK-10543	Reel Strip, E. Penny, SG-1E
4	1	4	4AK-10544	Reel Strip, E. Penny, SG-2E
4	1	4	4AK-10545	Reel Strip, E. Penny, SG-3EL
4	1	4	4AK-10588	Reel Strip, E. Penny, SG-1E
4	1	4	4AK-10590	Reel Strip, E. Penny, SG-3E
5	1	13	5E-10551	10 Payout Lever, E. Penny
5	1	14	5G-10552	8 Payout Lever, E. Penny
5	1	15	5J-10553	6 Payout Lever, E. Penny
5	1	16	5L-10554	2/4 Payout Lever, E. Penny
5	1	69	5AX-10555	Slide Lever Guide, E. Penny
			7G-10596	Coin Holding Lever Assy. E. Penny

SEGA PARTS CATALOG

SUPPLEMENT (A) PAGE 1

**PANAMANIAN 25¢**

Section	Page	Item	Part No.	Description
1	1	37	1AM-20346	Coin Entry Ring, Panama 25¢
3	1	57	3B1-10624	Safety Slide, Panama 25¢
3	1	56	3B2-10625	Bottom Slide, Panama 25¢
3	1	55	3B3-10626	5 Payout Slide, Panama 25¢
3	1	54	3B4-10627	10 Payout Slide, Panama 25¢
3	1	53	3B5-10628	14-18 Payout Slide, Panama 25¢
3	1	37	3BE-10630	Service Post, Panama 25¢
3	1	47	3BE-1-10631	Service Post, Adjustable, Panama 25¢
3	1	51	3C-10623	Payout Slide Cover, Panama 25¢
7	1	3	7C-10632	Coin Chute Front Plate, Panama 25¢

**HONG KONG 10¢**

Section	Page	Item	Part No.	Description
3	1	56	3B2-10663	Bottom Slide, Hong Kong 10¢
3	1	55	3B3-10664	5 Payout Slide, Hong Kong 10¢
3	1	54	3B4-10665	10 Payout Slide, Hong Kong 10¢
3	1	53	3B5-10666	14-18 Payout Slide, Hong Kong 10¢
3	1	37	3BE-10660	Service Post, Hong Kong 10¢
3	1	47	3BE-10661	Service Post, Adjustable, Hong Kong 10¢
4	1	14	4X-10662	Coin Tube, Hong Kong 10¢
7	1	3	7C-10653	Coin Chute Front Plate, Hong Kong 10¢

**HONG KONG 50¢**

Section	Page	Item	Part No.	Description
3	1	56	3B2-10524	Bottom Slide, Hong Kong 50¢
3	1	55	3B3-10525	5 Payout Slide, Hong Kong 50¢
3	1	54	3B4-10526	10 Payout Slide, Hong Kong 50¢
3	1	53	3B5-10527	14-18 Payout Slide, Hong Kong 50¢
3	1	37	3BE-10528	Service Post, Hong Kong 50¢
3	1	47	3BE-10529	Service Post, Adjustable, Hong Kong 50¢
4	1	14	4X-10530	Coin Tube, Hong Kong 50¢
7	1	3	7C-10531	Coin Chute Front Plate, Hong Kong 50¢

**HONG KONG 50¢, FOUR REELER**


Section	Page	Item	Part No.	Description
10	1	2	3B2-10639	Bottom Slide, Hong Kong 50¢, FR
15	1	3	3BE-10640	Service Post, Hong Kong 50¢, FR
10	1	4	3BE-1-10641	Service Post, Adjustable, Hong Kong 50¢, FR
10	1	24	4X-10642	Coin Tube, Hong Kong 50¢, FR

**HONG KONG \$**

Section	Page	Item	Part No.	Description
3	1	56	3B2-10646	Bottom Slide, Hong Kong \$
3	1	55	3B3-10647	5 Payout Slide, Hong Kong \$
3	1	54	3B4-10648	10 Payout Slide, Hong Kong \$
3	1	53	3B5-10649	14-18 Payout Slide, Hong Kong \$
3	1	52	3B6-10650	Top Payout Slide, Hong Kong \$
3	1	37	3BE-10643	Service Post, Hong Kong \$
3	1	47	3BE-1-10644	Service Post, Adjustable, Hong Kong \$
4	1	14	4X-10645	Coin Tube, Hong Kong \$

**MALAYAN 20¢**

Section	Page	Item	Part No.	Description
1	1	38	1X-20275	Denominator, 20
1	3	3	1X-1-10521	Denominator Button, 20
3	1	55	3B3-10569	5 Payout Slide, Singapore 20¢
3	1	37	3BE-10567	Service Post, Singapore 20¢
3	1	47	3BE-10568	Service Post, Adjustable, Singapore 20¢
7	1	3	7C-10531	Coin Chute Front Plate, Hong Kong 50¢

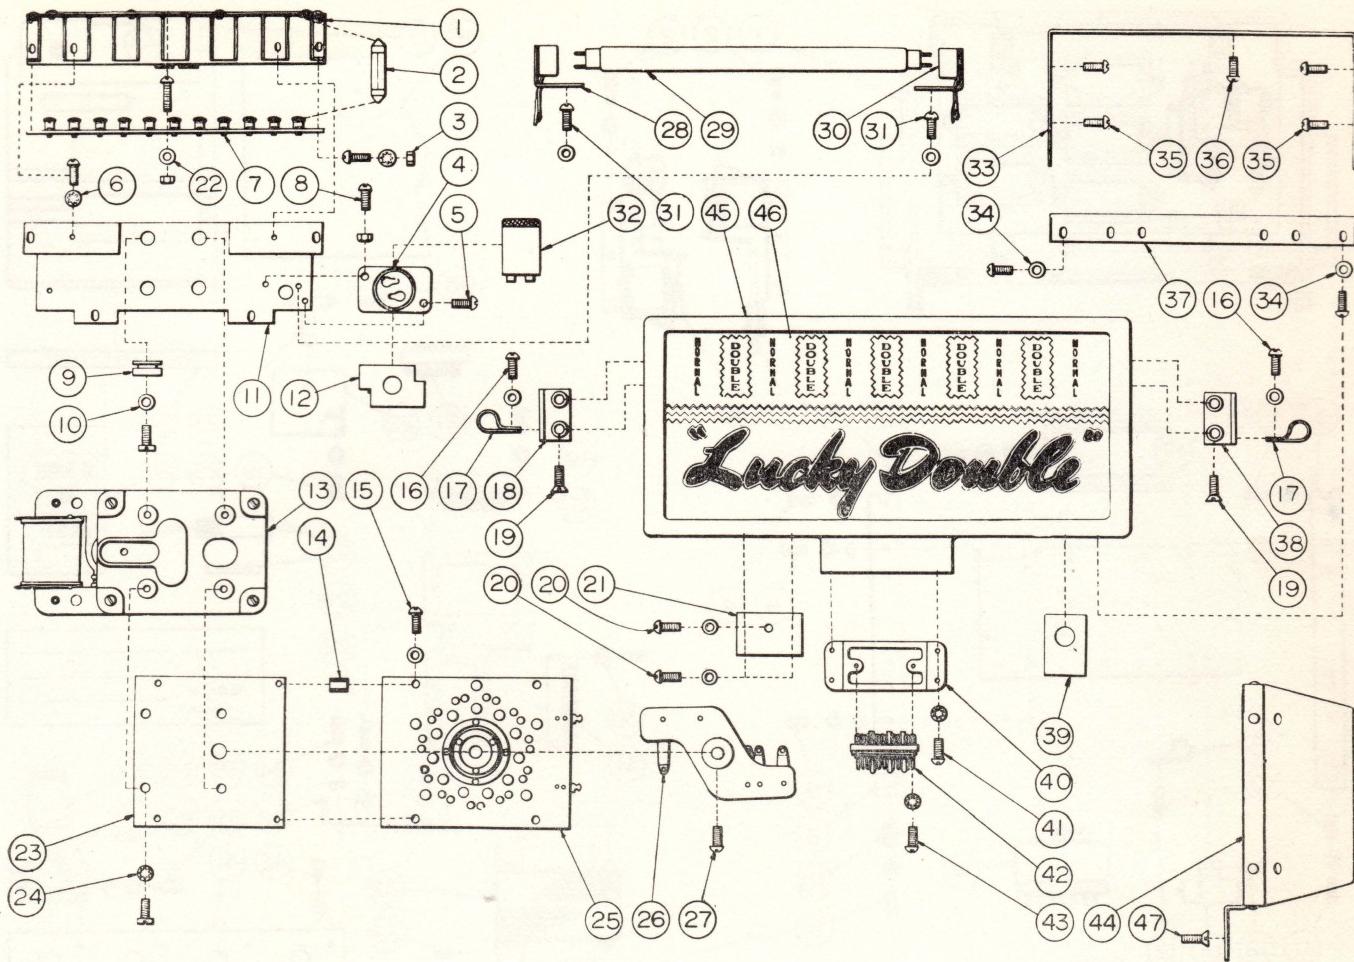

Item Part No.	Description
---------------	-------------


1	33014	Lamp Panel, w/o Lamp Socket
2	S-90752	Bulb, Festoon Type, 28V, 2W, 8×36
3	111-103	Machine Screw, R. H. #6-32×3/8
4	144-043	Lock Washer, Int. #6
5	133-011	Hex Nut, #6-32
6	S-90264	Socket, Fluor. Starter Bayonet Type
7	111-021	Machine Screw, R. H. #6-32×1/2
8	111-035	Machine Screw, R. H. #8-32×3/16
9	144-044	Lock Washer, Int. #8
10	33015	Lamp Socket Assy. Lower
11	111-410	Machine Screw, R. H. #6-32×5/8
12	133-011	Hex Nut #6-32
13	AF-2044	Rubber Grommet
14	111-204	Machine Screw, C. H. M4×12
15	144-016	Flat Washer, 7/32-1/2×0.5
16	33016	Motor Bracket
17	33019	Starter Insulator
18	106M-14	Hect Motor, 0.2A×220V 14RPM, 6φ×26L
19	33017	Point Disc Spacer
20	111-021	Machine Screw, R. H. #6-32×1/2
21	144-059	Flat Washer, 5/32-5/16×0.8
22	111-037	Machine Screw, R. H. #8-32×3/8
23	144-078	Flat Washer, M4
24	S-90181	Clamp, Cord, Plastic, 8mm I.D.
25	33022	Lamp Panel Bracket, Right
26	111-086	Machine Screw, F. H. #8-32×5/16
27	20	Machine Screw, R. H. #8-32×1/4
28	144-078	Flat Washer, M4
29	33024	Mechanism Bracket
30	111-333	Machine Screw, R. H. #5-40×2
31	144-023	Flat Washer, 9/64-3/8×0.6
32	133-009	Hex Nut, #5-40

Item Part No.	Description
---------------	-------------

23	33018	Point Disc Bracket
24	111-201	Machine Screw, C. H. M4×6
25	144-044	Lock Washer, Int. #8
26	33011	Point Disc Assy.
27	33012	Contact Wiper Assy.
28	111-082	Machine Screw, R. H. #5-40×1/4
29	S-90321-3	Socket & Cord Assy.
30	S-90199	Fluorescent Light, 6W
31	S-90321-7	Socket & Cord Assy.
32	111-023	Machine Screw, R. H. #6-32×1/4
33	144-059	Flat Washer, 5/32-5/16×0.8
34	S-90245	Starter Fluor. 40W, FG-4P
35	33026	Side Cover Light Box
36	111-035	Machine Screw, R. H. #8-32×3/16
37	144-078	Flat Washer, M4
38	111-026	Machine Screw, R. H. #8-32×1/4
39	111-035	Machine Screw, R. H. #8-32×3/16
40	33025	Bottom Cover Light Box
41	33023	Lamp Panel Bracket, Left
42	111-023	Glass Holding Plate
43	90714	Connector Bracket
44	144-043	Machine Screw, R. H. #6-32×1/4
45	S-90713-2	Lock Washer Int. #6
46	111-085	Plug 15P
47	144-043	Machine Screw, R. H. #6-32×5/16
48	33027	Back Cover
49	33021	Light Box Connector Type
50	1BD-20600	Billboard Glass, Lucky Double
51	111-084	Machine Screw, F. H. #6-32×5/16


SEGA PARTS CATALOG

THESE PARTS ARE FOR THE ABOVE MODEL ONLY REFER TO  
RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS

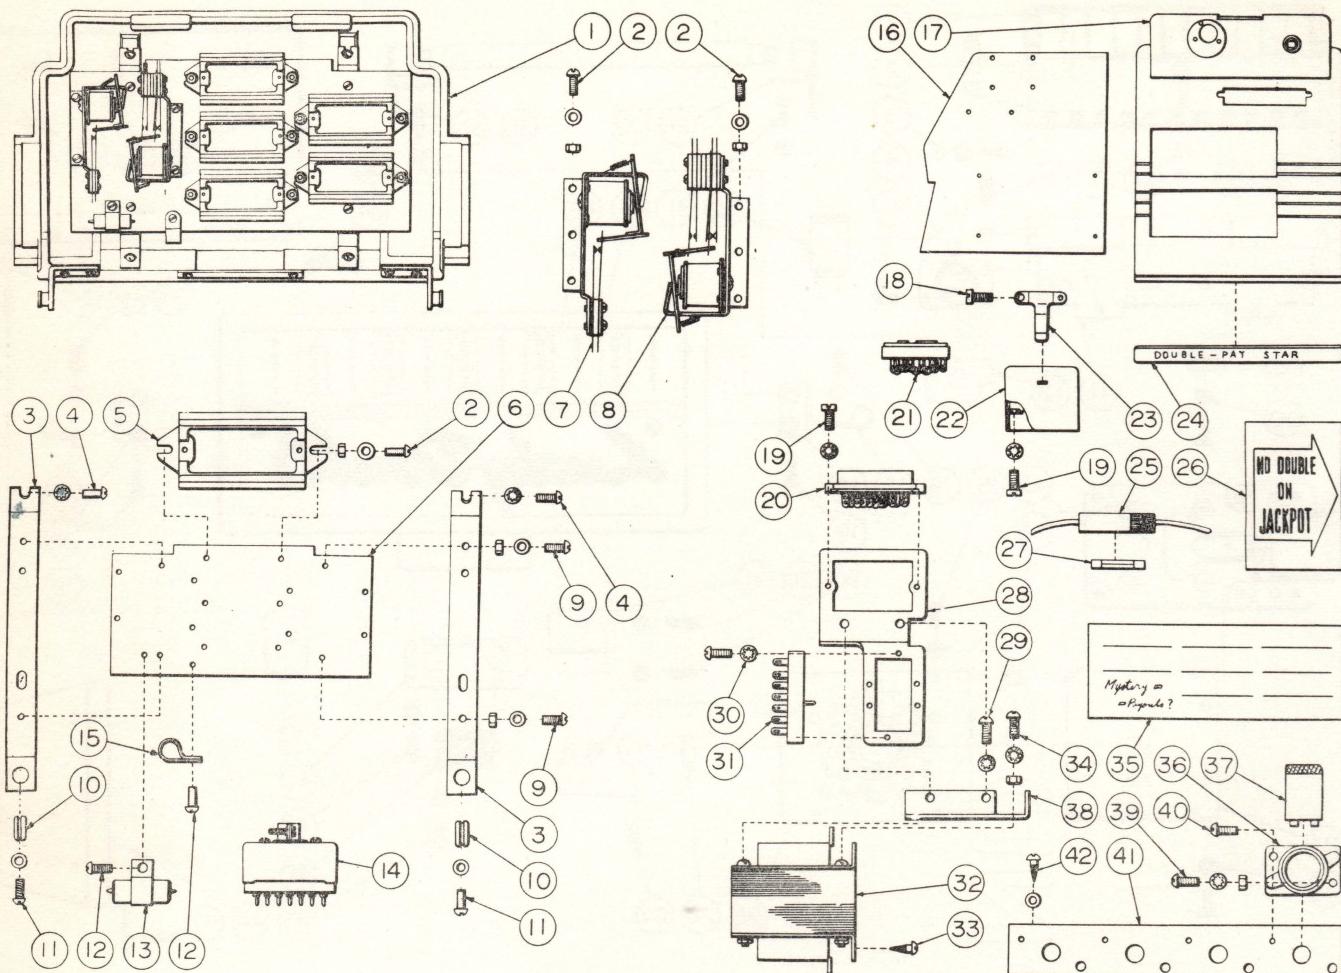

Item	Part No.	Description
1	31002	Top Rear Casting Assy.
2	111-103	Machine Screw, R. H. #6-32 x 3/8
	144-059	Flat Washer, 5/32-5/16 x 0.8
	133-011	Hex Nut, #6-32
3	31009	Step-up Unit Bracket
4	111-026	Machine Screw, R. H. #8-32 x 1/4
	144-044	Lock Washer, Int. #8
5	90730	Ballast Coil 230V, 6W Strip Type
6	33008	Fl. & Relay Base Plate
7	33003	Double-Pay Relay
8	33006	Anti-Cheat Relay
9	111-085	Machine Screw, R. H. #6-32 x 5/16
	144-059	Flat Washer, 5/32-5/16 x 0.8
	133-011	Hex Nut, #6-32
10	90008	Rubber Bushing
11	111-037	Machine Screw, R. H. #8-32 x 3/8
	144-078	Fla. Washer, M4
12	111-023	Machine Screw, R. H. #6-32 x 1/4
13	S-90685	Condenser, MP Tubular 0.2μ 350WV, w/Brkt
14	S-90703-2	Plug, 20P, CL204-1 Red
15	S-90181	Clamp, Cord, Plastic 8mm I. D.
16	31019	L.H. Guard Plate
17	33030	Upper Front Casting, Double-Pay
18	111-196	Machine Screw, C. H. M3 x 10
19	111-196	Machine Screw, C. H. M3 x 10
	144-075	Lock Washer, Int. M3
20	S-90700-1	Socket, 13P, Red, TV-QS-13A
21	S-90713-1	Socket, 15P
22	90736	Junction Shell

Item	Part No.	Description
23	90737	Junction Shell Cord Clamp
24	1Z-20544	Name Plate, Double-Pay Star
25	S-90771	Fuse Holder, Connector Type, w/Lead Wire
26	1Y-20541	Window Ornament, Double-Pay
	1Y-20601	Window Ornament, Double 150 Coins
27	S-90644	Fuse, 2A,
28	32031	Connector Bracket
29	111-035	Machine Screw, R.H. #8-32 x 3/16
	144-044	Lock Washer, Int. #8
30	111-016	Machine Screw, R.H. #5-40 x 1/2
	144-075	Lock Washer, Int. M3
31	S-90703-1	Socket, 20P, CL204-4, Red
32	90735	Transformer, Power, 120-28V, 1.5A
33	122-009	Wood Screw, R.H. 4.1 x 16
34	111-024	Machine Screw, R.H. #6-32 x 1 3/4
	144-106	Lock Washer, Int. M3.5
35	133-011	Hex Nut, #6-32
	2BF-20361	Reward Glass, 2J.P. (no + 20)
36	S-90264	Socket, Fluor. Starter, Bayonet Type
37	S-90245	Starter Fluor. 40W FG-4P
38	31033	Transformer Bracket
39	111-410	Machine Screw, R.H. #6-32 x 5/8
	144-043	Lock Washer, Int. #6
40	133-011	Hex Nut, #6-32
41	111-410	Machine Screw, R.H. #6-32 x 5/8
	33029	Starter Bracket
42	122-016	Wood Screw, R.H. 3.5 x 16
	144-070	Flat Washer, M3.5

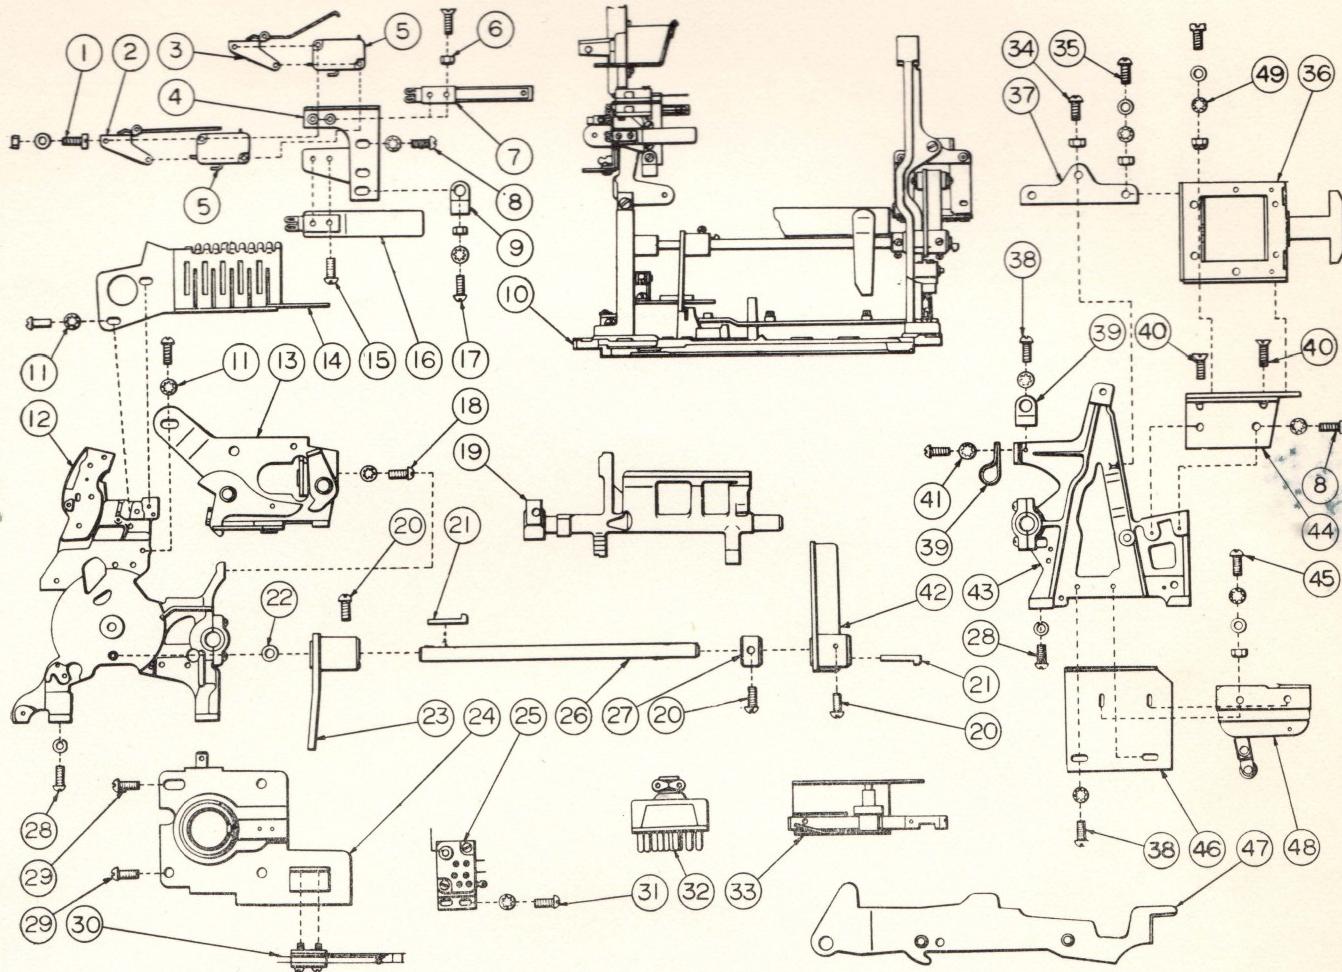

Item Part No.	Description
1 111-433	Machine Screw C. H. M2.6 x 30
144-104	Flat Washer, Small Type, M2.6
133-002	Hex Nut, M2.6
2 33060	Micro SW. Actuator Assy. Outer
3 33062	Micro SW. Actuator Assy. Inner
4 33057	Switch Bracket
5 S-90773	Switch Micro Type, AM-5300
6 111-220	Machine Screw, F. H. M3 x 16
133-009	Hex Nut, #5-40
7 33053	Switch Assy. Inner Stopper
8 111-037	Machine Screw, R. H. #8-32 x 3/8
144-044	Lock Washer, Int. #8
9 S-90591	Clamp, Cord, Plastic, 5mm I.D.
10 32033	Mechanism Base, Paybak
11 111-042	Machine Screw, R. H. #10-24 x 3/8
144-045	Lock Washer, Int. #10
12 33034	R. H. Side Frame, Double-Pay
13 33055	Anti-Check Payout Base, Double-Pay
14 33054	Payout Guide & Bracket, Double-Pay
15 111-386	Machine Screw, R. H. #5-40 x 9/16
16 33058	Switch Assy. Outer Stopper
17 111-037	Machine Screw, R. H. #8-32 x 3/8
144-044	Lock Washer, Int. #8
133-012	Hex Nut, #8-32
18 111-054	Machine Screw, R. H. #10-24 x 5/8
144-045	Lock Washer, Int. #10
19 33063	Operating Fork, Double-Pay
20 111-023	Machine Screw, R. H. #6-32 x 1/4
21 33040	Feather Key
22 144-006	Flat Washer, 21/64-9/16 x 0.1
23 33038	Slide Push Lever
24 33047	Payout Slide Cover, w/o Switch
25 32037	Micro Switch Assy.
26 33036	Crank Shaft, Double-Pay
27 33037	Crank Shaft, Collar
28 111-054	Machine Screw, R. H. #10-24 x 5/8
144-035	Spring Washer, #10

Item Part No.	Description
29 111-055	Machine Screw, R. H. #10-32 x 3/8
30 33048	Switch Assy.
31 111-023	Machine Screw, R. H. #6-32 x 1/4
144-043	Lock Washer, Int. #6
32 S-90700-2	Plug, 13P, Red, TV-QP-13A
33 SGB-1040	Variator Assy.
34 111-057	Machine Screw, R. H. #10-32 x 1 1/8
133-013	Hex Nut, #10-32
35 111-037	Machine Screw, R. H. #8-32 x 3/8
144-044	Lock Washer, Int. #8
144-016	Flat Washer, 7/32-1/2 x 0.5
133-012	Hex Nut, #8-32
36 33044	Coil Assy. Double-Pay
37 33045	Coil Bracket, Upper
38 111-026	Machine Screw, R. H. #8-32 x 1/4
144-044	Lock Washer, Int. #8
39 S-90181	Clamp, Cord, Plastic, 8mm I.D.
40 111-087	Machine Screw, F. H. #8-32 x 3/8
41 111-054	Machine Screw, R. H. #10-24 x 5/8
144-045	Lock Washer, Int. #10
42 33039	Double-Pay Crank Arm
43 33032	L. H. Side Frame, Double-Pay
44 33043	Coil Bracket Assy. Lower
45 111-083	Machine Screw, R. H. #5-40 x 1
144-041	Lock Washer, Int. #5
144-020	Flat Washer, 9/64-3/8 x 0.8
133-009	Hex Nut, #5-40
46 33042	Micro Switch Bracket
47 33041	Reel Timing Lever, Double-Pay
48 S-90353	Switch, Micro Type, AM 9087
49 111-276	Machine Screw, C. H. M5 x 14
144-098	Flat Washer, Small Type, M5
144-073	Lock Washer, Int. M5
133-060	Nylon Nut, 5mm

SEGA PARTS CATALOG

THESE PARTS ARE FOR THE ABOVE MODEL ONLY REFER TO  
RESPECTIVE SECTIONS OF THIS CATALOG FOR COMMON PARTS

# STANDARD FASTENERS



## MACHINE SCREW R. H.

111-385	M. Screw, R. H.	#4-40 × 6.4	(×1/4")
111-009	M. Screw, R. H.	#4-40 × 12.7	(×1/2")
111-113	M. Screw, R. H.	#4-40 × 19.1	(×3/4")
111-014	M. Screw, R. H.	#5-40 × 4	(×5/32")
111-082	M. Screw, R. H.	#5-40 × 6.4	(×1/4")
111-015	M. Screw, R. H.	#5-40 × 9.5	(×3/8")
111-016	M. Screw, R. H.	#5-40 × 12.7	(×1/2")
111-105	M. Screw, R. H.	#5-40 × 19.1	(×3/4")
111-236	M. Screw, R. H.	#5-40 × 23.8	(×15/16")
111-083	M. Screw, R. H.	#5-40 × 25.4	(×1")
111-018	M. Screw, R. H.	#6-32 × 3.2	(×1/8")
111-132	M. Screw, R. H.	#6-32 × 4.8	(×3/16")
111-023	M. Screw, R. H.	#6-32 × 6.4	(×1/4")
111-085	M. Screw, R. H.	#6-32 × 7.9	(×5/16")
111-103	M. Screw, R. H.	#6-32 × 9.5	(×3/8")
111-021	M. Screw, R. H.	#6-32 × 12.7	(×1/2")
111-410	M. Screw, R. H.	#6-32 × 15.9	(×5/8")
111-022	M. Screw, R. H.	#6-32 × 19.1	(×3/4")
111-035	M. Screw, R. H.	#8-32 × 4.8	(×3/16")
111-026	M. Screw, R. H.	#8-32 × 6.4	(×1/4")
111-027	M. Screw, R. H.	#8-32 × 7.9	(×5/16")
111-037	M. Screw, R. H.	#8-32 × 9.5	(×3/8")
111-028	M. Screw, R. H.	#8-32 × 25.4	(×1")
111-032	M. Screw, R. H.	#8-32 × 12.7	(×1/2")
111-038	M. Screw, R. H.	#8-32 × 15.9	(×5/8")
111-036	M. Screw, R. H.	#8-32 × 22.2	(×7/8")
111-029	M. Screw, R. H.	#8-32 × 28.6	(×1-1/8")
111-214	M. Screw, R. H.	#8-32 × 30.2	(×1-3/16")
111-215	M. Screw, R. H.	#8-32 × 34.9	(×1-3/8")
111-031	M. Screw, R. H.	#8-32 × 44.5	(×1-3/4")
111-040	M. Screw, R. H.	#8-32 × 69.9	(×2-3/4")
111-055	M. Screw, R. H.	#10-32 × 9.5	(×3/8")
111-064	M. Screw, R. H.	#10-32 × 12.7	(×1/2")
111-415	M. Screw, R. H.	#10-32 × 14.3	(×9/16")
111-060	M. Screw, R. H.	#10-32 × 15.9	(×5/8")
111-056	M. Screw, R. H.	#10-32 × 19.1	(×3/4")
111-057	M. Screw, R. H.	#10-32 × 28.6	(×1-1/8")
111-062	M. Screw, R. H.	#10-32 × 50.8	(×2")
111-048	M. Screw, R. H.	#10-24 × 6.4	(×1/4")
111-042	M. Screw, R. H.	#10-24 × 9.5	(×3/8")
111-052	M. Screw, R. H.	#10-24 × 11.1	(×7/16")
111-053	M. Screw, R. H.	#10-24 × 12.7	(×1/2")
111-054	M. Screw, R. H.	#10-24 × 15.9	(×5/8")
111-045	M. Screw, R. H.	#10-24 × 19.1	(×3/4")
111-067	M. Screw, R. H.	#12-24 × 12.7	(×1/2")
111-074	M. Screw, R. H.	1/4-20 × 9.5	(×3/8")
111-072	M. Screw, R. H.	1/4-20 × 12.7	(×1/2")
111-004	M. Screw, R. H.	M3 × 10	
111-172	M. Screw, R. H.	M3 × 40	




## MACHINE SCREW R.H. PHILL.

111-106 M. Screw, R. H. Phill. #8-32 × 25.4 (×1")




## MACHINE SCREW TRUSS H.

111-391 M. Screw, Truss H. Special #8-32(×5)



## MACHINE SCREW F. H.

111-084	M. Screw, F. H.	#6-32 × 7.9	(×5/16")
111-175	M. Screw, F. H.	#6-32 × 54 S = 9.5	(×2-1/8" S = 3/8")
111-086	M. Screw, F. H.	#8-32 × 7.9	(×5/16")
111-087	M. Screw, F. H.	#8-32 × 9.5	(×3/8")
111-409	M. Screw, F. H.	#8-32 × 25.4	(×1")
111-059	M. Screw, F. H.	#10-32 × 9.5	(×3/8")
111-090	M. Screw, F. H.	#10-32 × 12.7	(×1/2")
111-414	M. Screw, F. H.	#10-32 × 14.3	(×9/16")
111-091	M. Screw, F. H.	#12-24 × 19.1	(×3/4")
111-234	M. Screw, F. H.	1/4-20 × 50.8	(×2")
111-213	M. Screw, F. H.	1/4-20 × 63.5	(×2-1/2")
111-225	M. Screw, F. H.	M3 × 4	
111-219	M. Screw, F. H.	M3 × 6	
111-221	M. Screw, F. H.	M3 × 10	
111-220	M. Screw, F. H.	M3 × 16	
111-226	M. Screw, F. H.	M3 × 18	
111-245	M. Screw, F. H.	M4 × 10	
111-328	M. Screw, F. H.	M4 × 25	




## MACHINE SCREW F. H. PHILLIPS

111-020 M. Screw, F. H. Phill. Chromed #6-32 × 7.9 (×5/16")  
111-314 M. Screw, F. H. Phill. M3 × 8



## MACHINE SCREW C. H.

111-338	M. Screw, C. H.	M2 × 3
111-190	M. Screw, C. H.	M2.6 × 8
111-240	M. Screw, C. H.	M3 × 3
111-193	M. Screw, C. H.	M3 × 4
111-194	M. Screw, C. H.	M3 × 5
111-195	M. Screw, C. H.	M3 × 6
111-192	M. Screw, C. H.	M3 × 8
111-196	M. Screw, C. H.	M3 × 10
111-197	M. Screw, C. H.	M3 × 14
111-198	M. Screw, C. H.	M3 × 16
111-200	M. Screw, C. H.	M3 × 20
111-267	M. Screw, C. H.	M3 × 25
111-242	M. Screw, C. H.	M3.5 × 12
111-201	M. Screw, C. H.	M4 × 6
111-202	M. Screw, C. H.	M4 × 8
111-272	M. Screw, C. H.	M4 × 16



## MACHINE SCREW PAN H.

M. Screw, Pan H. #6-32 × 15.9 (×5/8")



## MACHINE SCREW OVAL H.

M. Screw, Oval H. Chromed M2.6 × 14



## MACHINE SCREW O. H. PHILLIPS

M. Screw, Oval H. Phill. M5 × 12




## CARRIAGE BOLT

111-298	Carriage Bolt, Chromed	#10-24 × 22.2	(×7/8")
111-435	Carriage Bolt, Chromed	#10-24 × 35.7	(×1-13/32")
2D1-10354	Carriage Bolt, Chromed	#10-24 × 25.4	(×1")
2CA-20108	Carriage Bolt, Chromed	#10-24 × 28.6	(×1-1/8")
2DK-10355	Carriage Bolt, Chromed	#10-24 × 31.8	(×1-1/4")
2CC-20110	Carriage Bolt, Chromed	#12-24 × 28.6	(×1-1/8")
2DW-10428	Carriage Bolt, Chromed	1/4-20 × 28.6	(×1-1/8")
2CB-20117	Carriage Bolt,	1/4-20 × 44.5	(×1-3/4")
2DM-10357	Carriage Bolt,	1/4-20 × 114.3	(×4-1/2")
2CD-20111	Carriage Bolt,	1/4-20 × 130.2	(×5-1/8")
2DU-10416	Carriage Bolt, Chromed	#12-24 × 22.2	(×7/8")
SST-221	Carriage Bolt,	1/4-20 × 50.8	(×2")
111-287	Carriage Bolt, Chromed	M5 × 22 S = 17	




## HEX. BOLT

111-425 Hex. Bolt 3/8-16 × 55 S = 40  
111-230 Hex. Bolt M4 × 12



## WOOD SCREW R. H. PHILLIPS


122-084	Wood Screw, R. H. Phill.	2.7 × 10
122-042	Wood Screw, R. H. Phill.	3.1 × 10
122-064	Wood Screw, R. H. Phill.	3.1 × 13
122-080	Wood Screw, R. H. Phill.	3.1 × 16
122-079	Wood Screw, R. H. Phill.	3.1 × 20
122-077	Wood Screw, R. H. Phill.	3.5 × 10
122-085	Wood Screw, R. H. Phill.	3.5 × 13
122-004	Wood Screw, R. H. Phill.	3.5 × 16
122-086	Wood Screw, R. H. Phill.	3.5 × 20
122-087	Wood Screw, R. H. Phill.	3.5 × 32
122-088	Wood Screw, R. H. Phill.	3.8 × 13
122-024	Wood Screw, R. H. Phill.	3.8 × 16
122-074	Wood Screw, R. H. Phill.	4.1 × 13
122-075	Wood Screw, R. H. Phill.	4.1 × 16
122-082	Wood Screw, R. H. Phill.	4.1 × 20
122-089	Wood Screw, R. H. Phill.	4.1 × 25



## WOOD SCREW OVAL H. PHILLIPS

122-037 Wood Screw, Oval H. Phill. 3.1 × 10

122-033 Wood Screw, Oval H. Phill. 3.1 × 13



## WOOD SCREW F. H. PHILLIPS

122-090	Wood Screw, F. H. Phill.	2.7 × 16
122-073	Wood Screw, F. H. Phill.	3.1 × 13
122-094	Wood Screw, F. H. Phill.	3.1 × 16
122-091	Wood Screw, F. H. Phill.	3.1 × 26
122-065	Wood Screw, F. H. Phill.	3.5 × 16

SEGA PARTS CATALOG

SECTION 20 PAGE 1

# STANDARD FASTENERS

122-078	Wood Screw, F. H. Phill.	4.1×16
122-081	Wood Screw, F. H. Phill.	4.1×25
122-083	Wood Screw, F. H. Phill.	4.5×38
122-092	Wood Screw, F. H. Phill.	4.5×45
122-093	Wood Screw, F. H. Phill.	6.2×50



## TAPPING SCREW

122-019	Tapping Screw, NO.1 Truss H. Phill.	4×20
---------	-------------------------------------	------



## HEX. NUT

133-010	Hex Nut	#4-40
133-009	Hex Nut	#5-40
133-011	Hex Nut	#6-32
133-057	Hex Nut, Special	#6-32
133-012	Hex Nut	#8-32
133-013	Hex Nut	#10-32
133-014	Hex Nut	#10-24
133-015	Hex Nut	#12-24
133-008	Hex Nut	1/4-20
133-006	Hex Nut	3/8-16
133-059	Hex Nut	5/16-18
133-001	Hex Nut, Brass	M2
133-041	Hex Nut	M2, #3
133-029	Hex Nut	M3
133-017	Hex Nut	M4
133-039	Hex Nut	M4, #3
133-033	Hex Nut	M5
133-036	Hex Nut	M5, #3
133-003	Hex Nut	M6
133-032	Hex Nut	M12




## FLAT WASHER

144-023	Flat Washer	3.6 - 9.5×0.6	(9/64" - 3/8")
144-020	Flat Washer	3.6 - 9.5×0.8	(9/64" - 3/8")
144-059	Flat Washer	4 - 7.9×0.8	(5/32" - 5/16")
144-016	Flat Washer	5.6 - 12.7×0.5	(7/32" - 1/2")
144-011	Flat Washer	5.6 - 12.7×0.6	(7/32" - 1/2")
144-013	Flat Washer	5.6 - 12.7×1.2	(7/32" - 1/2")
144-024	Flat Washer	5.6 - 19.1×1.2	(7/32" - 3/4")
144-150	Flat Washer	4.4 - 10.3×1.6	(11/64" - 13/32")
144-021	Flat Washer	6.7 - 9.5×0.1	(17/64" - 3/8")
144-019	Flat Washer	6.8 - 9.5×0.23	(17/64" - 3/8")
144-017	Flat Washer	6.8 - 9.5×0.35	(17/64" - 3/8")
144-015	Flat Washer	6.8 - 12.7×0.5	(17/64" - 1/2")
144-022	Flat Washer	6.8 - 9.5×0.6	(17/64" - 3/8")
144-012	Flat Washer	6.8 - 12.7×1	(17/64" - 1/2")
144-014	Flat Washer	6.8 - 12.7×1.2	(17/64" - 1/2")
144-025	Flat Washer	7.1 - 22.2×2	(9/32" - 7/8")
144-002	Flat Washer	7.9 - 19.1×2	(5/16" - 3/4")
144-006	Flat Washer	8.3 - 14.3×0.1	(21/64" - 9/16")
144-008	Flat Washer	8.3 - 14.3×0.23	(21/64" - 9/16")
144-010	Flat Washer	8.3 - 14.3×0.5	(21/64" - 9/16")
144-007	Flat Washer	8.3 - 14.3×1.2	(21/64" - 9/16")
144-028	Flat Washer	10.3 - 22.2×2	(13/32" - 7/8")
144-004	Flat Washer	10.3 - 15.9×0.1	(13/32" - 5/8")
144-001	Flat Washer	5.6 - 22.2×0.23	(17/32" - 7/8")
144-110	Flat Washer, Special	2.8 - 5.4×0.4	
144-161	Flat Washer, Special	10.5 - 28×2	
144-097	Flat Washer, Small Type	M2	
144-061	Flat Washer, Small Type	M2.3	
144-096	Flat Washer, Small Type	M3	
144-098	Flat Washer, Small Type	M5	
144-101	Flat Washer, Brass	M3	
144-057	Flat Washer	M3	
144-078	Flat Washer	M4	
144-105	Flat Washer	M5	
144-109	Flat Washer, Special	M5	
144-053	Flat Washer	M6	
144-068	Flat Washer	M10	



## COUNTER-SUNK WASHER

144-133	Counter-Sunk Washer	M5 O.D. 14
---------	---------------------	------------



## SPRING WASHER

144-033	Spring Washer	#6, M
144-034	Spring Washer	#8, M
144-035	Spring Washer	#10, M
144-039	Spring Washer	1/4, M
144-037	Spring Washer	3/8, M
144-139	Spring Washer	M2.6, #2
144-088	Spring Washer	M3, #2

# STANDARD FASTENERS

144-076	Spring Washer	M4, #2
144-090	Spring Washer	M5, #2
144-115	Spring Washer	M6, #2



## LOCK WASHER

144-165	Lock Washer, Ext.	M2
144-170	Lock Washer, Ext.	M2.6
144-135	Lock Washer, Ext.	M3
144-166	Lock Washer, Ext.	M3.5
144-167	Lock Washer, Ext.	M4
144-149	Lock Washer, Ext.	M5
144-171	Lock Washer, Ext.	M5.5
144-140	Lock Washer, Ext.	M6
144-168	Lock Washer, Ext.	M8
144-169	Lock Washer, Ext.	M16
144-162	Lock Washer, Ext.	1/4
144-163	Lock Washer, Ext.	1/2
144-164	Lock Washer, Ext.	3/4



## E-WASHER

144-050	E-Washer	1.5m/m
144-048	E-Washer	3.2m/m
144-102	E-Washer	4m/m
144-063	E-Washer	10m/m



## TAPER PIN

155-011	Taper Pin	1/8×3/4
155-009	Taper Pin	5/32×13/32
155-018	Taper Pin	3×6



## COTTER PIN

155-004	Cotter Pin	1.6×15
155-007	Cotter Pin	2.5×15
155-002	Cotter Pin	3×25



## HAIR CLIP

155-038	Hair Clip, Standard	2×8×0.5
155-037	Hair Clip, Standard	2×8×0.65
155-039	Hair Clip, Over Size Head	3×13×0.8
155-036	Hair Clip, Standard	4×12×0.65
155-040	Hair Clip, Flat Head	5×11.5×0.75



## EYELET

166-021	Eyelet	2×3
166-020	Eyelet	2×4
166-022	Eyelet	2×5
166-054	Eyelet	2.5×3.5
166-039	Eyelet	2.6×5
166-052	Eyelet	3×3.5
166-044	Eyelet	3×4



## HOLLOW RIVET

166-092	Hollow Rivet, Thin Head, Brass	1.8×8
166-093	Hollow Rivet, Thin Head, Brass	1.8×12
166-013	Hollow Rivet, Thin Head, Brass	2×3.5
166-117	Hollow Rivet, Thin Head, Brass	2×3.5
166-007	Hollow Rivet, Thin Head, Brass	2×4
166-042	Hollow Rivet, Thin Head, Brass	3×3.5
166-115	Hollow Rivet, Thin Head, Brass	3×4.5
166-008	Hollow Rivet, Thin Head, Brass	3×6
166-086	Hollow Rivet, Thin Head, Brass	3×7
166-082	Hollow Rivet, Thin Head, Brass	3×8.5



## RIVET R. H.

166-091	Rivet, R. H. Aluminum	2×8
166-005	Rivet, R. H. Aluminum	2.5×6
166-116	Rivet, R. H. Ni-Plated	3×4
166-006	Rivet, R. H. Aluminum	3×6
166-081	Rivet, R. H. Chromed	3×12



## RIVET F. H.

166-046	Rivet, F. H.	3×5
---------	--------------	-----



## TINNER'S RIVET

166-053	Tinner's Rivet	2×13
---------	----------------	------

